

BOXER

BOXER
BM 100 *classic*



www.auteco.com.co/repuestosauteco

CATÁLOGO DE PARTES

www.auteco.com.co
Llama gratis: 018000 52 00 90



IRC LLANTAS

TECNOLOGÍA JAPONESA



**Los Expertos en motos
las usan y recomiendan:**

 **BAJAJ**
Distinctly Ahead

 **auteco**
www.auteco.com.co

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
PULSAR 220	DELANTERA	90/90X17	IRC	NF45	PISTERA TUBE LESS	41070-9017-NF45/18
				NF52TL	PISTERA TUBE LESS	41070-9017-NF52TL/18
				NF53	PISTERA TUBE LESS	41070-9017-NF53/18
				NF42	PISTERA TUBE LESS	41070-9017-NF42/18
				NF46	PISTERA TUBE LESS	41070-9017-NF46/18
		RX01		PISTERA TUBE LESS	41070-1117-RX01/18	
	TRASERA	130/70-17	IRC	RX01	PISTERA TUBE LESS	41070-1317-RX01/18
		120/80X17		NR57TL	PISTERA TUBE LESS	41070-1217-NR57TL/18
PULSAR 200NS PULSAR 200/180 UG	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
		90/80X17		NR73	PISTERA	41070-9017-NR73TT/18
		90/90X17		NF53	PISTERA	41070-9017-NF53/18
		100/80-17		NR73	PISTERA	41070-1017-NR73/18
		110/70-17		RX01	PISTERA	41070-1117-RX01/18
		130/70-17		RX01	PISTERA	41070-1317-RX01/18
	TRASERA					
	PULSAR 135	DELANTERA	2.75X17	IRC	NR53	PISTERA
90/80-17			NR73TT		PISTERA	41070-9017-NR73TT/18
70/90-17			NF63BZ		PISTERA	41070-7017-NF63BZ/18
2.75X17			MAXING	SP1	SPORT	41070-2717-SP1/19
TRASERA		110/80-17	IRC	NR48TL	PISTERA TUBE LESS	41070-1117-NR48TL/18
				NR53	PISTERA	41070-1117-NR53/18
				NR64	PISTERA	41070-1117-NR64/18
		100/80X17		NR73	PISTERA	41070-1017-NR73/18

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
PULSAR 180 (CLASSIC, DTS-i)	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18
				NF2	LINEAL	41070-2718-NF2/18
				NR53	PISTERA	41070-2718-NR53/18
			MAXING	SP1	SPORT	41070-2718-SP1/19
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18
				NR1	SPORT	41070-3018-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
			MAXING	SP1	SPORT	41070-3018-SP1/19
DISCOVER 125 ST DISCOVER 125 DISCOVER 100 DISCOVER 135 KS/ES DISCOVER DTSI PULSAR 180 DTS-i TEC,BLACK, PULSAR II	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
		90/80-17		NR73TT	PISTERA	41070-9017-NR73TT/18
		70/90-17		NF63BZ	PISTERA	41070-7017-NF63BZ/18
		2.75X17	MAXING	SP1	SPORT	41070-2717-SP1/19
	TRASERA	3.00X17	IRC	GP1	TRIAL ROMBO	41070-3017-GP1/18
				NR1	SPORT	41070-3017-NR1/18
		100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18
				MB99	PISTERA	41070-1017-MB99/18
				80/90-17	NR78YL	PISTERA
		PLATINO 125 5S, PLATINO CT, 100 SPORT, 125 XCD 125	DELANTERA	90/80-17	IRC	NR73TT
70/90-17	NF63BZ			PISTERA		41070-7017-NF63BZ/18
2.75X17	NR53			PISTERA		41070-2717-NR53/18
	GP1			TRIAL ROMBO		41070-2717-GP1/18
MAXING	SP1			SPORT	41070-2717-SP1/19	
TRASERA	100/80-17		IRC	NR73	PISTERA	41070-1017-NR73/18
				MB99	PISTERA	41070-1017-MB99/18
	3.00X17		IRC	GP1	TRIAL ROMBO	41070-3017-GP1/18
NR1		SPORT		41070-3017-NR1/18		

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
BOXER CON RIN 17" BM150, CT 100, BM 100	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	41070-9017-NR73TT/18
		90/90-17		NR53	PISTERA	41070-2717-NR53/18
		2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
				GP1	TRIAL ROMBO	41070-2717-GP1/18
	TRASERA	100/80-17	IRC	SP1	SPORT	41070-2717-SP1/19
				NR73	PISTERA	41070-1017-NR73/18
		100/80-17	IRC	MB99	PISTERA	41070-1017-MB99/18
		3.00X17		GP1	TRIAL ROMBO	41070-3017-GP1/18
BOXER CON RIN 18" 4T, UG, K-TEC	DELANTERA	2.50X18	IRC	NR1	SPORT	41070-3017-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
			MAXING	SP1	SPORT	41070-2518-SP1/19
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18
				NR1	SPORT	41070-3018-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
BOXER BM 100 CLASSIC ES	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
	TRASERA	3.00X17		NR1	SPORT	41070-3017-NR1/18
BOXER CON RIN 18" (S1D) CALIBER 115 WIND 125	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18
				NF2	LINEAL	41070-2718-NF2/18
				NR53	PISTERA	41070-2718-NR53/18
	TRASERA	3.00X18	MAXING	SP1	SPORT	41070-2718-SP1/19
			IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18
				NR1	SPORT	41070-3018-NR1/18
	TRASERA	3.00X18	IRC	NR53	PISTERA	41070-3018-NR53/18
				SP1	SPORT	41070-3018-SP1/19

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
AVANTI	DELANTERA	2.25X17	IRC	NF3	LINEAL	41070-2217-NF3/18
				NR53	PISTERA	41070-2217-NR53/18
		2.50X17		TR1	TRIAL ROMBO	41070-2517-TR1/18
		2.25X17	MAXING	MP1	LINEAL	41070-2217-MP1/19
	TRASERA	2.75X17	IRC	NR2	SPORT	41070-2717-NR2/18
				NR53	PISTERA	41070-2717-NR53/18
				GP1	TRIAL ROMBO	41070-2717-GP1/18
			MAXING	SP1	SPORT	41070-2717-SP1/19
PLUS/CLASSIC/LEGEND	DELANTERA	3.50X10	IRC	MB-27	SPORT	41070-3510-27/18
	TRASERA					

Advierta lo que le dicen las llantas mientras conduce:

- Si su respuesta a la dirección es lenta o si en las curvas y en el frenado la respuesta es pesada, es muy probable que sus llantas estén desinfladas.
- Vibración o tambaleo durante la conducción, puede significar que la presión en las llantas es mayor a la recomendada, o que ha ocurrido un daño en la llanta y la falla es inminente.
- La llanta puede vibrar a ciertas velocidades debido al desbalanceo, en este caso su desgaste será muy acelerado.

**RECUERDE SIEMPRE REVISAR LA PRESIÓN DE AIRE EN SUS LLANTAS
ANTES DE COMENZAR A RODAR**

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página web: www.auteco.com.co accediendo al link repuestos. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco-Kawasaki.



DIRECTORIO TELEFÓNICO - UN REPUESTOS Y ACCESORIOS

ÁREA COMERCIAL Y ASESORES DE VENTAS

NOMBRE	CARGO	ZONA	CELULAR	CORREO ELECTRÓNICO
Alejandro Posada	ASESOR COMERCIAL	Norte Área Metropolitana de Medellín	314 811 04 09	aposada@auteco.com.co
Alexánder Grajales	ASESOR COMERCIAL	Córdoba, Cauca y El Bagre	310 373 90 19	agrajales@auteco.com.co
Bernardo Muriel	ASESOR COMERCIAL	Pueblos de Cundinamarca	310 436 27 42	bmuriel@auteco.com.co
Carlos Humberto Tobón	ASESOR COMERCIAL	Tolima	310 447 36 11	ctobon@auteco.com.co
Carlos Salazar	ASESOR COMERCIAL	Bucaramanga y Área Metropolitana	310 414 88 45	csalazar@auteco.com.co
Edwin Guzmán Jiménez	ASESOR COMERCIAL	Atlántico	313 584 21 93	eguzman@auteco.com.co
Eliecer Zamora Vásquez	ASESOR COMERCIAL	Cali y Cauca	313 584 47 13	ezamora@auteco.com.co
Elkin Humberto Gallego	ASESOR COMERCIAL	Sur de Área Metropolitana de Medellín	310 436 25 98	egallego@auteco.com.co
Esmeralda Forero Acosta	ASESOR COMERCIAL	Centro Bogotá	313 585 22 07	eforero@auteco.com.co
Fredy Alexánder Jiménez	ASESOR COMERCIAL	Concesionarios, CSA de Bogotá y Amazonas	313 585 98 37	fjimenez@auteco.com.co
Gonzalo Saldarriaga	ASESOR COMERCIAL	Neiva y Norte del Huila	310 406 88 74	gsaldarriaga@auteco.com.co
Héctor Alonso Valencia	ASESOR COMERCIAL	Sucre	310 447 36 52	hvalencia@auteco.com.co
Héctor Jairo López	ASESOR COMERCIAL	Caldas y Norte de Risaralda	312 257 67 91	hlopez@auteco.com.co
Hilde Alexánder García	ASESOR COMERCIAL	Arauca y Norte de Santander	321 641 50 63	hgarcia@auteco.com.co
Jaime Alfonso Villalba	ASESOR COMERCIAL	Bolívar	313 584 72 62	jvillalba@auteco.com.co
Jesús Enrique Quintero R.	ASESOR COMERCIAL	Magdalena	313 585 60 28	jequintero@auteco.com.co
John Jairo López	ASESOR COMERCIAL	Risaralda, Quindío y Cartago	310 444 22 15	jlopez@auteco.com.co
Jorge Gil	ASESOR COMERCIAL	Casanare, Vichada, Boyacá	313 672 73 53	jgil@auteco.com.co
Jorge Mario Maya	ASESOR COMERCIAL	Cesar y Guajira	312 258 93 84	jmaya@auteco.com.co
Jovany Castro Betancur	ASESOR COMERCIAL	Sur del Huila y Caqueta	313 767 78 43	jcastro@auteco.com.co
Karen Lorena Candanoza	ASESOR COMERCIAL	Resto de Bogotá	313 585 35 61	kcandanoza@auteco.com.co
Mauricio Mejía	ASESOR COMERCIAL	Suroeste, Nordeste y Chocó	312 257 61 75	mmejia@auteco.com.co
Miguel Ángel Guerrero	ASESOR COMERCIAL	Norte del Valle y Buenaventura	314 772 07 98	mguerrero@auteco.com.co
Nestor Adarve	ASESOR COMERCIAL	Resto de Antioquia y Urabá	310 436 26 89	nadarve@auteco.com.co
Rubén Darío Campo Cárdenas	ASESOR COMERCIAL	Nariño y Putumayo	321 799 79 06	rcampo@auteco.com.co
Uberney Ortiz Vélez	ASESOR COMERCIAL	Magdalena Medio	313 672 73 37	uortiz@auteco.com.co
William Gutiérrez	ASESOR COMERCIAL	Meta	310 407 40 72	wgutierrez@auteco.com.co
Sergio Restrepo Taborda	GERENTE CCIAL. REPUESTOS Y ACCS	Nacional	321 779 13 97	sgrestrepo@auteco.com.co
Daniel Ángel Neira	GERENTE CCIAL. ACCESORIOS	Nacional	313 716 85 65	dangel@auteco.com.co
Jhon Alexánder Estrada	GERENTE REGIONAL	Norte	311 737 37 48	jestrada@auteco.com.co
Juan Guillermo Ospina	GERENTE REGIONAL	Sur	313 767 78 36	jgospina@auteco.com.co

SERVICIO AL CLIENTE

LINEA ÚNICA DE SERVICIO AL CLIENTE CANAL (4) 444 81 90

UN DE REPUESTOS Y ACCESORIOS • FAX OFICINAS: 373 03 75

ATENCIÓN EN:	NOMBRE	E-MAIL	TELÉFONO	FAX
SERVICIO A CONCESIONARIO Y MAYORISTAS	WILLINGTON FRANCO	servicioadistribuidorseymayoristas@auteco.com.co		
SERVICIO PAGO ANTICIPADO	DORIS CARMONA	serviciopagoanticipadorptos@auteco.com.co		
COORDINADOR SERVICIO POSTVENTA	CARLOS ESTEBAN SUÁREZ	csuarez@auteco.com.co		(4) 373 83 94
GARANTÍAS	ALEJANDRO FERNÁNDEZ	garantias2@auteco.com.co		
DEVOLUCIONES - RECLAMOS	YUDY DUQUE	devolucionesrptos@auteco.com.co		
MOTO FUERA DE RUTA	RICARDO CUARTAS	motofueraderuta@auteco.com.co		(4) 306 84 86
LÍNEA DE ATENCIÓN AL CLIENTE	DANIEL RINCÓN SERGIO OSORNO		(4) 444 81 90	
CARTERA		cartera@auteco.com.co		(4) 277 51 17 (4) 306 81 54
VENTA MOTOS		pedidosmotos@auteco.com.co		(4) 372 62 95







AUTOTECNICA COLOMBIANA S.A.S (AUTECO S.A.S) SEDE PRINCIPAL Cra. 42 N° 45-77 Itagüí Ant. - PBX: (4)306 81 81
Atención a clientes finales: LINEA GRATUITA NACIONAL - 01 8000 52 00 90

ÍNDICE

FIGURA Nº.	DESCRIPCIÓN	PÁG. Nº.
1	CULATA	1
2	VÁLVULAS	2
3	EJE DE LEVAS / TENSOR	3
4	CILINDRO Y PISTÓN	4
5	CIGÜEÑAL	5
6	TRANSMISIÓN	6
7	SELECTOR CAMBIOS	7
8	EJE DE CAMBIOS	8
9	CARCASA DERECHA	9
10	CARCASA IZQUIERDA	10
11	CONDUCTO ACEITE	11
12	CUBIERTA VOLANTE Y CUBIERTA CADENA	12
13	CUBIERTA CLUTCH	13
14	CLUTCH	14
15	PEDAL CRANK	15
16	CARBURADOR	16
17	FILTRO DE AIRE	17
18	SILENCIADOR	18
19	BOMBA ACEITE	19
20	PLATO DE BOBINAS	20
21	CHASIS	21
22	BRAZO OSCILANTE Y AMORTIGUADOR	22

FIGURA Nº.	DESCRIPCIÓN	PÁG. Nº.
23	GATO LATERAL/ GATO CENTRAL / REPOSAPIES	23
24	GUARDABARRO DELANTERO Y TRASERO	24
25	RINES / RADIOS / LLANTAS Y NEUMÁTICOS	25
26	CAMPANA DELANTERA	26-27
27	CAMPANA TRASERA	28
28	PEDAL FRENO	29
29	MANUBRIO	30
30	SUSPENSIÓN DELANTERA	31
31	TANQUE GASOLINA/ TAPAS LATERALES	32
32	TAPA TANQUE DE GASOLINA	33
33	CUBIERTA CADENA	34
34	ANTIVIBRANTES TANQUE GASOLINA Y TAPAS LATERALES	35
35	VELOCÍMETRO	36
36	CABLES	37
37	FAROLA	38
38	DIRECCIONALES	39
39	PORTA PLACA	40
40	STOP	41
41	EQUIPO ELÉCTRICO	42
42	JUEGO DE HERRAMIENTAS / SILLÍN	43
	LISTA DE KITS	44-45
	ÍNDICE DE REFERENCIAS	46-49

ÍNDICE DE GRÁFICOS

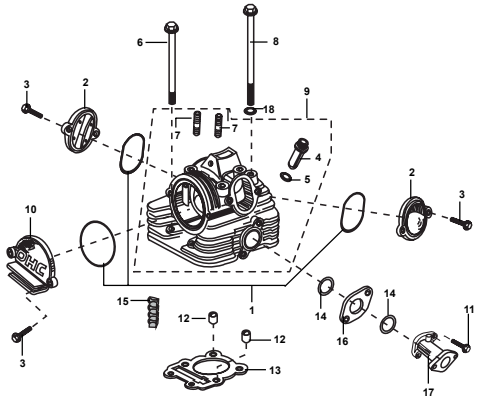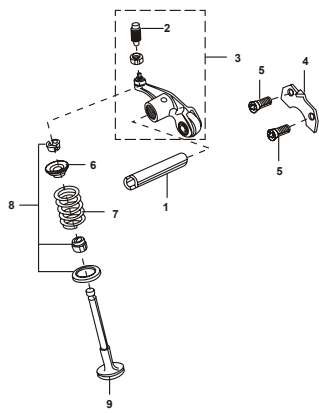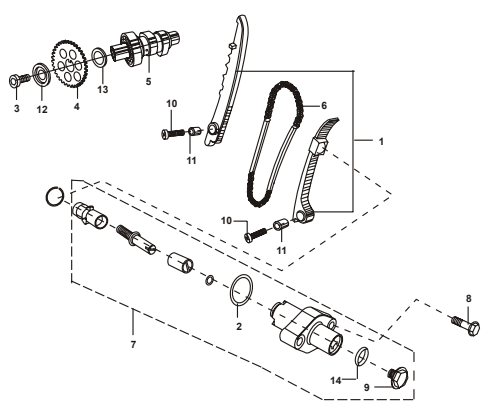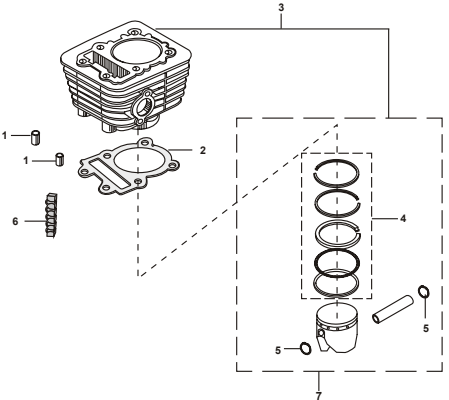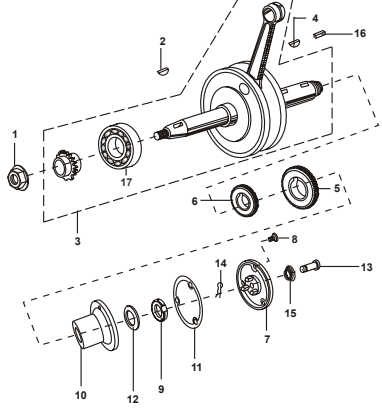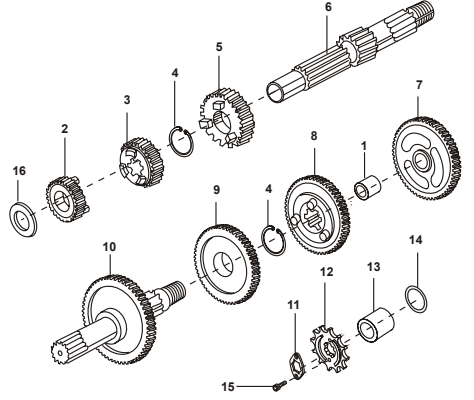	FIGURA N° 1 : CULATA PÁG. No. 1
	FIGURA N° 2 : VÁLVULAS PÁG. No. 2
	FIGURA N° 3 : EJE DE LEVAS / TENSOR PÁG. No. 3
	FIGURA N° 4 : CILINDRO Y PISTÓN PÁG. No. 4
	FIGURA N° 5 : CIGÜEÑAL PÁG. No. 5
	FIGURA N° 6 : TRANSMISIÓN PÁG. No. 6

ÍNDICE DE GRÁFICOS

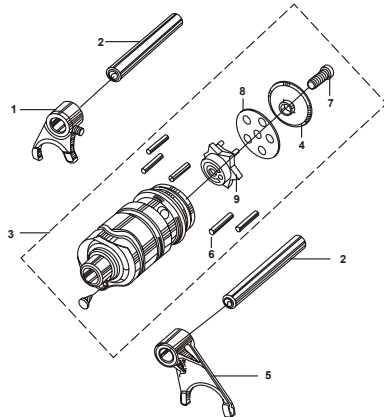


FIGURA N° 7 : SELECTOR CAMBIOS

PÁG. No.
7

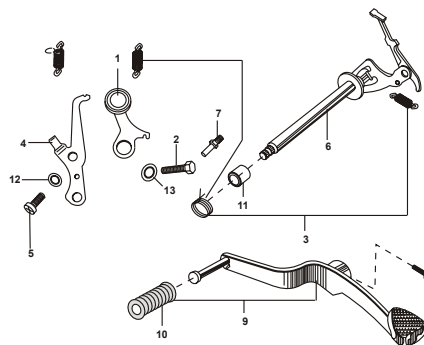


FIGURA N° 8 : EJE DE CAMBIOS

PÁG. No.
8

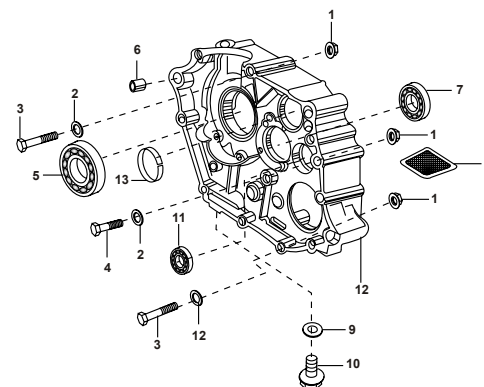


FIGURA N° 9 : CARCASA DERECHA

PÁG. No.
9

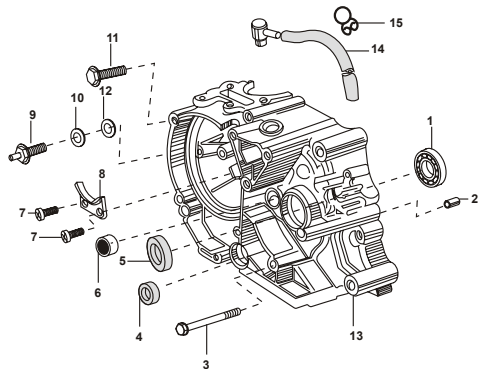


FIGURA N° 10 : CARCASA IZQUIERDA

PÁG. No.
10

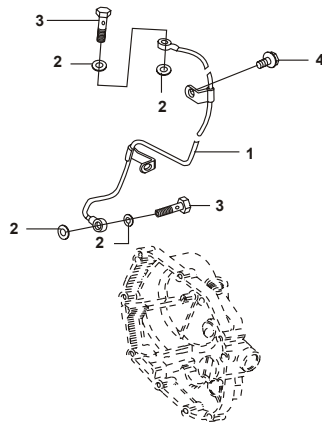


FIGURA N° 11 : CONDUCTO ACEITE

PÁG. No.
11

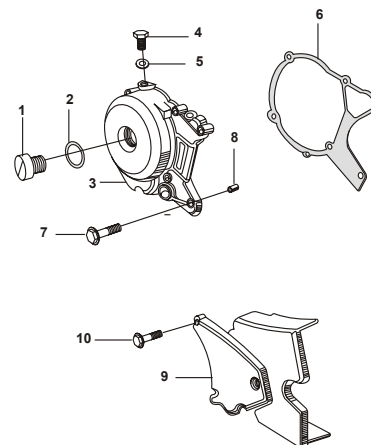


FIGURA N° 12 : CUBIERTA VOLANTE Y
CUBIERTA CADENA

PÁG. No.
12

ÍNDICE DE GRÁFICOS

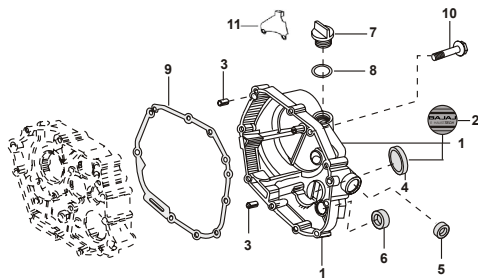


FIGURA N° 13 : CUBIERTA CLUTCH

PÁG. No.
13

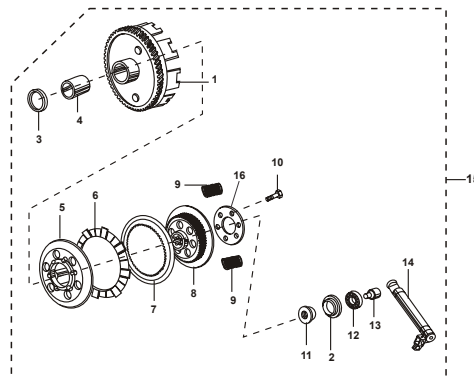


FIGURA N° 14: CLUTCH

PÁG. No.
14

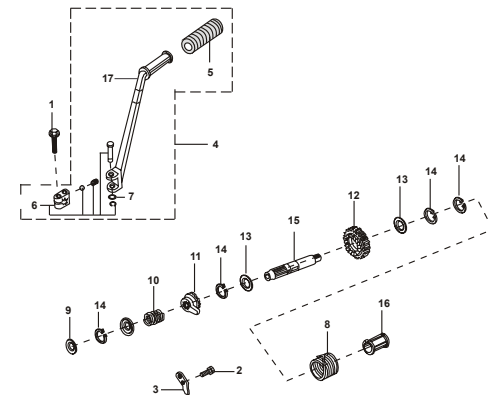


FIGURA N° 15 : PEDAL CRANK

PÁG. No.
15

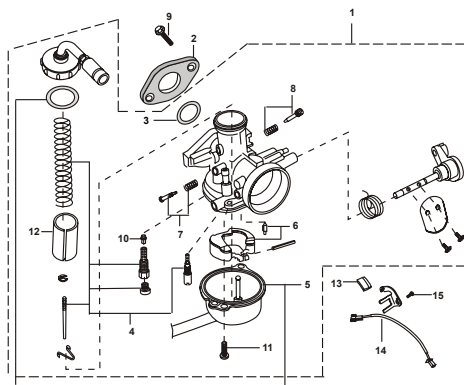


FIGURA N° 16 : CARBURADOR

PÁG. No.
16

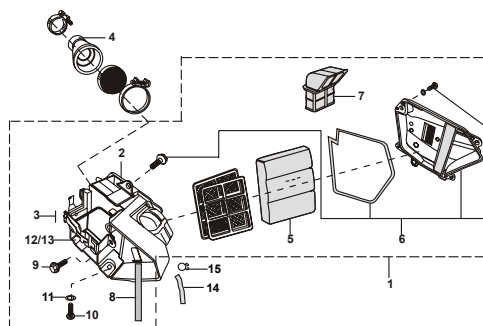


FIGURA N° 17 : FILTRO DE AIRE

PÁG. No.
17

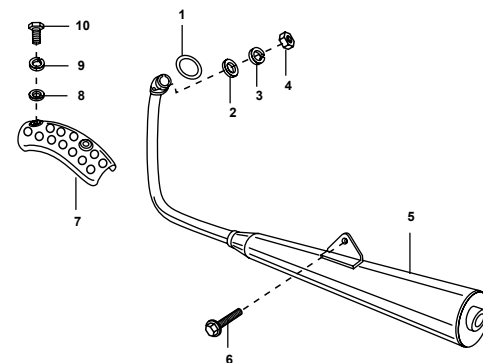


FIGURA N° 18 : SILENCIADOR

PÁG. No.
18

ÍNDICE DE GRÁFICOS

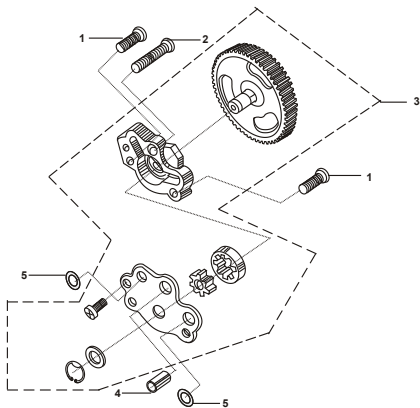


FIGURA Nº 19 : BOMBA ACEITE

PÁG. No.
19

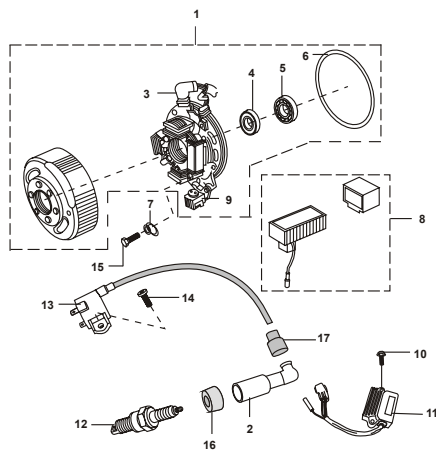


FIGURA Nº 20 : PLATO DE BOBINAS

PÁG. No.
20

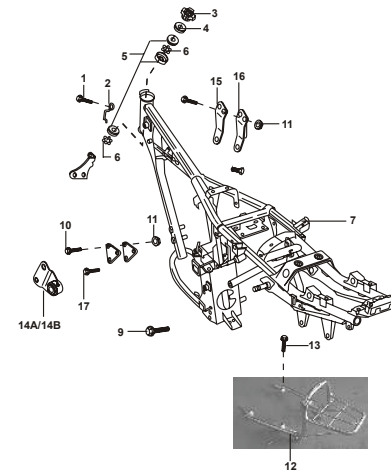


FIGURA Nº 21 : CHASIS

PÁG. No.
21

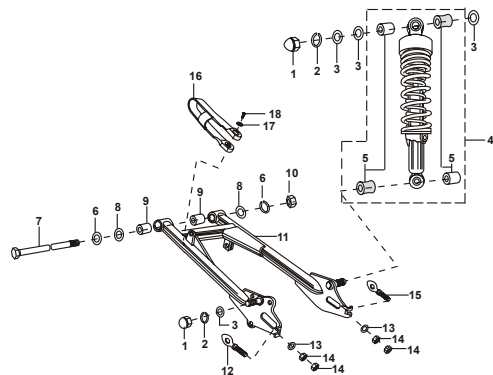


FIGURA Nº 22: BRAZO OSCILANTE Y
AMORTIGUADOR

PÁG. No.
22

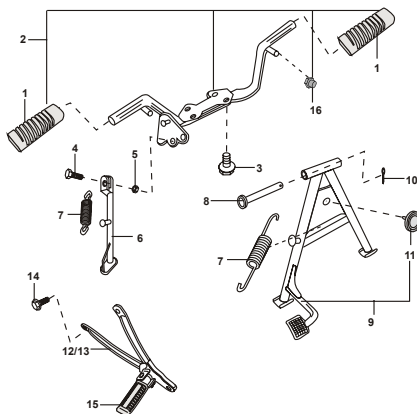


FIGURA Nº 23 : GATO LATERAL/ GATO
CENTRAL / REPOSAPIES

PÁG. No.
23

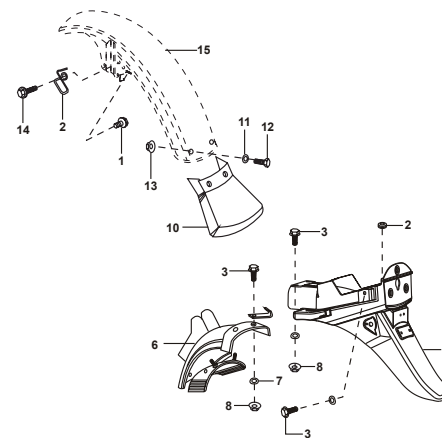


FIGURA Nº 24 : GUARDABARRO DELANTERO
Y TRASERO

PÁG. No.
24

ÍNDICE DE GRÁFICOS

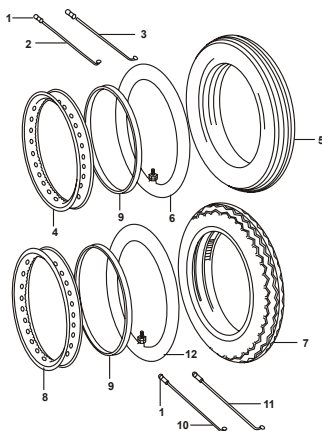


FIGURA N° 25: RINES / RADIOS / LLANTAS Y NEUMÁTICOS

PÁG. No. 25

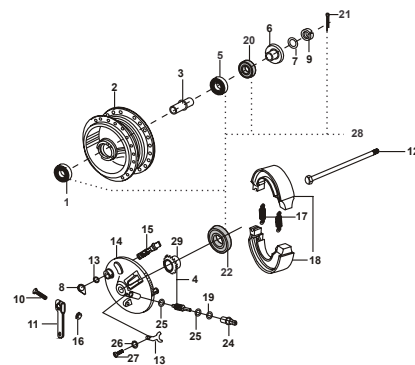


FIGURA N° 26 : CAMPANA DELANTERA

PÁG. No. 26-27

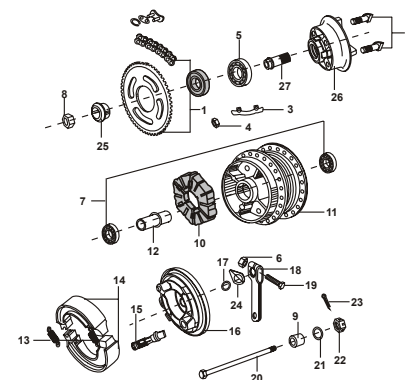


FIGURA N° 27 : CAMPANA TRASERA

PÁG. No. 28

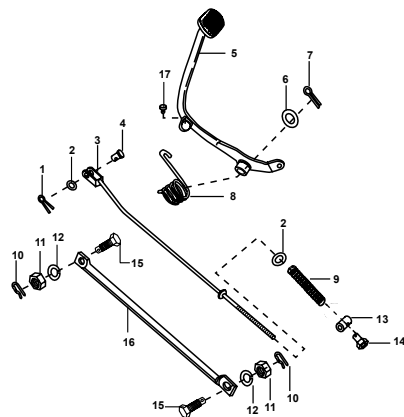


FIGURA N° 28 : PEDAL FRENO

PÁG. No. 29

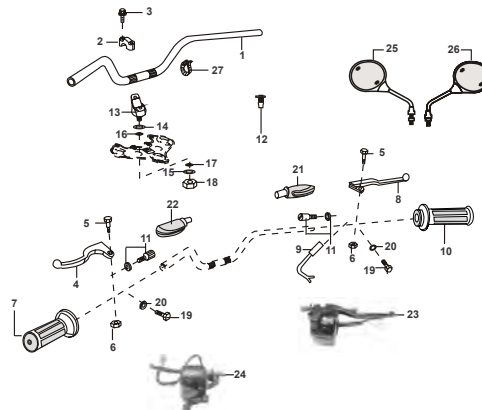


FIGURA N° 29 : MANUBRIO

PÁG. No. 30

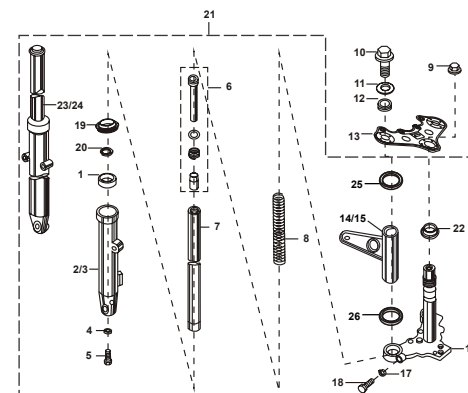
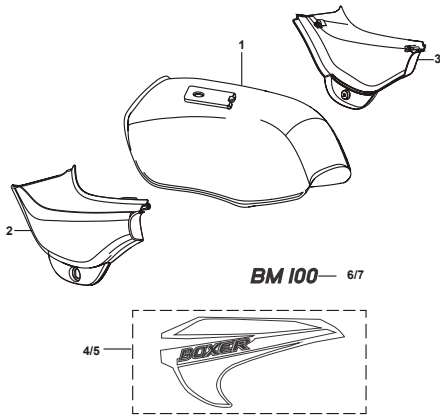
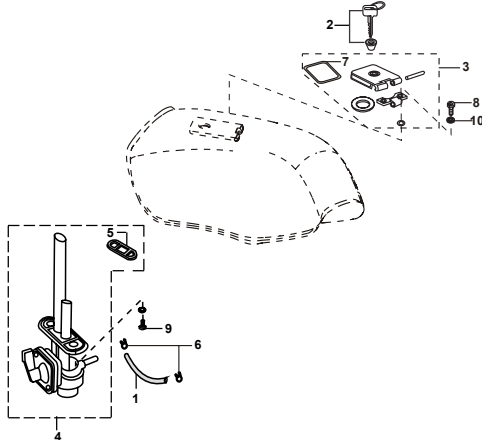
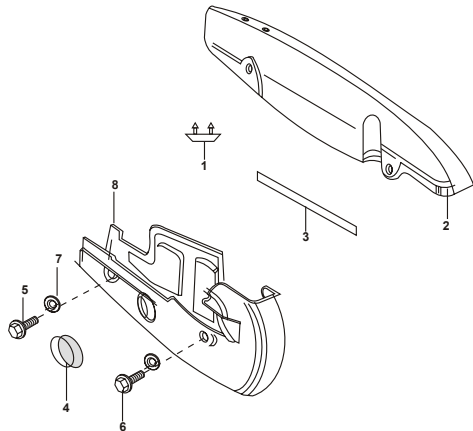
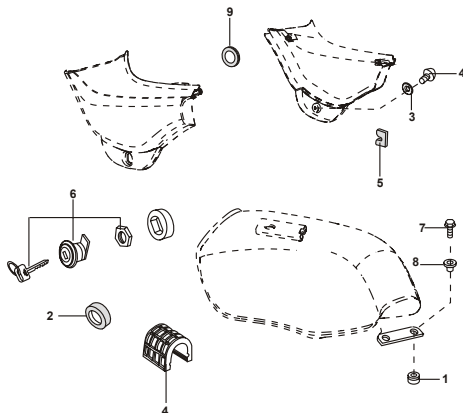
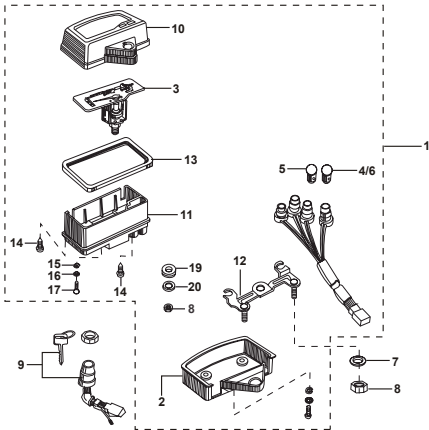
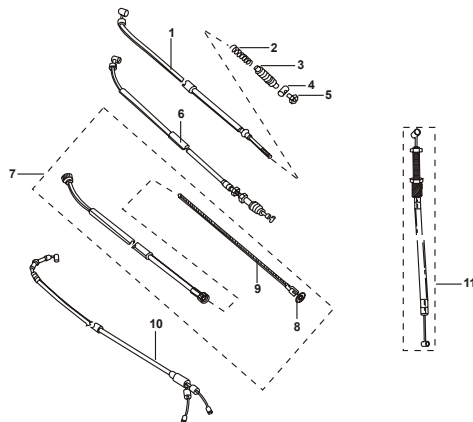







FIGURA N° 30 : SUSPENSIÓN DELANTERA

PÁG. No. 31

ÍNDICE DE GRÁFICOS

	PÁG. No. 32		PÁG. No. 33		PÁG. No. 34
FIGURA N° 31 : TANQUE GASOLINA/ TAPAS LATERALES		FIGURA N° 32 : TAPA TANQUE DE GASOLINA		FIGURA N° 33 : CUBIERTA CADENA	
	PÁG. No. 35		PÁG. No. 36		PÁG. No. 37
FIGURA N° 34 : ANTIVIBRANTES TANQUE GASOLINA Y TAPAS LATERALES		FIGURA N° 35 : VELOCÍMETRO		FIGURA N° 36 : CABLES	

ÍNDICE DE GRÁFICOS

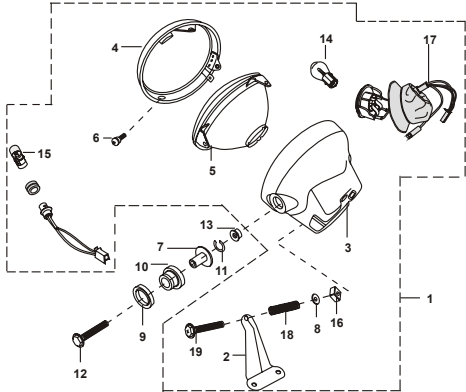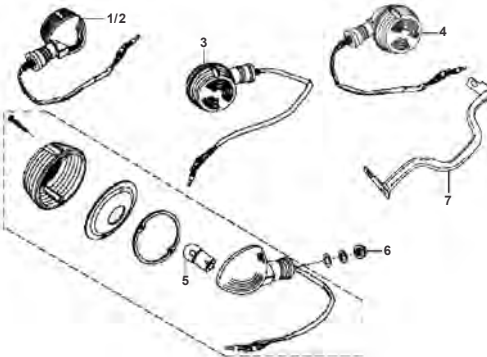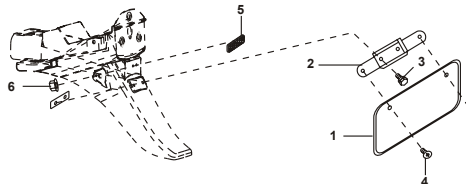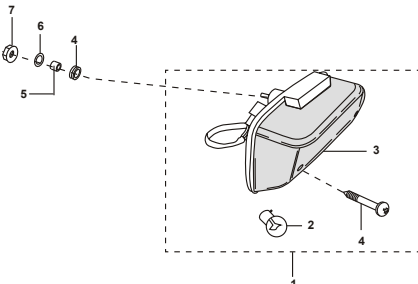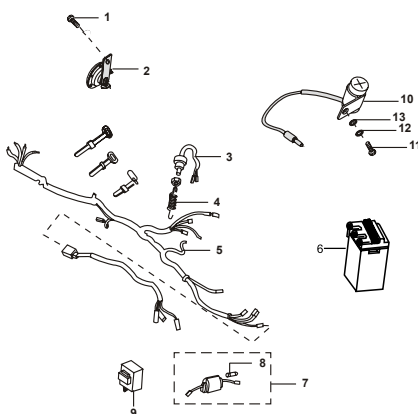					
FIGURA N° 37 : FAROLA		PÁG. No. 38		FIGURA N° 38 : DIRECCIONALES	
		PÁG. No. 39		FIGURA N° 39 : PORTA PLACA	
		PÁG. No. 40			
					
FIGURA N° 40 : STOP		PÁG. No. 41		FIGURA N° 41 : EQUIPO ELÉCTRICO	
		PÁG. No. 42		FIGURA N° 42: JUEGO DE HERRAMIENTAS / SILLIN	
		PÁG. No. 43			

This exploded view diagram illustrates the assembly of a 125cc engine head. The central component is the engine head (1), which features a cooling fin design and a central intake port. Surrounding it are various components and fasteners, each labeled with a number:

- 1**: Engine head (main casting with cooling fins and intake port).
- 2**: Two valve guides (one for intake, one for exhaust).
- 3**: Four valve guide retainers (two for intake, two for exhaust).
- 4**: One valve stem seal.
- 5**: One valve stem seal O-ring.
- 6**: One long valve stem.
- 7**: Two valve stem lock washers.
- 8**: One long valve stem.
- 9**: One valve stem lock washer.
- 10**: One valve stem seal O-ring.
- 11**: One valve stem seal O-ring.
- 12**: Two valve stem seals.
- 13**: One valve stem seal O-ring.
- 14**: One valve stem seal O-ring.
- 15**: One valve stem seal O-ring.
- 16**: One valve stem seal O-ring.
- 17**: One valve stem seal O-ring.
- 18**: One valve stem lock washer.

The diagram shows the relative positions of these parts as they are assembled onto the engine head. Dashed lines indicate the alignment and assembly sequence for the valves and their guides.

BOXER
BM 100 *classic*

This exploded view diagram illustrates the assembly of a mechanical component. The parts are numbered as follows:

- 1**: A long, hollow cylindrical tube.
- 2**: A small screw or pin.
- 3**: A bracket or housing component.
- 4**: A small, curved metal piece.
- 5**: Two screws or pins.
- 6**: A small circular washer or spacer.
- 7**: A coiled spring.
- 8**: A small circular washer or spacer.
- 9**: A long, thin rod or shaft with a flange at one end.

The diagram shows the following assembly sequence and relationships:

- Part **4** is secured to part **3** using two screws (**5**).
- Part **2** is shown being inserted into a hole in part **3**.
- Part **1** is shown being inserted into a hole in part **3**.
- Part **6** is shown being inserted into a hole in part **3**.
- Part **7** is shown being inserted into a hole in part **3**.
- Part **8** is shown being inserted into a hole in part **3**.
- Part **9** is shown being inserted into a hole in part **3**.

2

This exploded view diagram illustrates the assembly of a mechanical component, likely a timing belt drive. The parts are numbered as follows:

- 1**: The main housing or frame, shown in a dashed box.
- 2**: A circular gasket or seal.
- 3**: A small screw or pin.
- 4**: A gear or pulley.
- 5**: A shaft or axle.
- 6**: A timing belt.
- 7**: A long cylindrical component, possibly a bearing or a guide.
- 8**: A screw or pin.
- 9**: A small washer or spacer.
- 10**: A small pin or clip.
- 11**: A small screw or pin.
- 12**: A small gear or pulley.
- 13**: A small washer or spacer.
- 14**: A small washer or spacer.

The diagram shows the relative positions and assembly sequence of these components. Dashed lines indicate the alignment and fit of the parts. For example, the timing belt (6) is shown being installed onto the shaft (5) and the gear (4). The housing (1) is shown with various mounting points for the other components.

BOXER
BM 100 *classic*

This diagram illustrates the assembly of a piston and cylinder. The main components are shown in an exploded view:

- 1**: Two small pins or clips used for the piston rings.
- 2**: The piston crown, which fits into the combustion chamber.
- 3**: The piston skirt, which fits into the cylinder bore.
- 4**: The piston rings, which seal the combustion chamber and scrape excess oil.
- 5**: Two small pins or clips used for the piston rings.
- 6**: A set of four small pins or clips used for the piston rings.
- 7**: The cylinder block, which houses the piston and rings.

4

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 17. The assembly is shown in a disassembled state, with dashed lines indicating the alignment and sequence of assembly. The main assembly is shown in a perspective view, while the exploded parts are shown in a plan view below it. The parts include a housing (1), a gear (2), a shaft (3), a bearing (4), a pin (5), a nut (6), a washer (7), a bolt (8), a flange (9), a ring (10), a seal (11), a pin (12), a nut (13), a washer (14), a pin (15), a bolt (16), and a pin (17).

BOXER
BM 100 *classic*

This exploded view diagram illustrates the assembly of a mechanical system, likely a pump or motor. The components are numbered 1 through 16. The assembly sequence is as follows:

- Component 16** (a small washer) is positioned at the front of **Component 2** (a small gear).
- Component 2** is mounted on the shaft of **Component 3** (a larger gear).
- Component 4** (a small ring) is placed between **Component 3** and **Component 5** (a gear).
- Component 5** is mounted on the shaft of **Component 6** (a long shaft with a splined end).
- Component 7** (a large gear) is mounted on the shaft of **Component 8** (a gear).
- Component 1** (a small bush) is placed between **Component 8** and **Component 9** (a large gear).
- Component 4** (a small ring) is placed between **Component 9** and **Component 10** (a large gear).
- Component 10** is mounted on the shaft of **Component 11** (a small gear).
- Component 12** (a gear) is mounted on the shaft of **Component 13** (a small bush).
- Component 14** (a small ring) is placed between **Component 13** and **Component 15** (a small gear).
- Component 15** is mounted on the shaft of **Component 16** (a small gear).

6

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor component. The parts are numbered as follows:

- 1**: A bracket or housing component with a central bore.
- 2**: A long, hollow cylindrical shaft or tube.
- 3**: The main cylindrical body of the assembly, featuring a threaded section and a central shaft.
- 4**: A circular plate or disc with four holes.
- 5**: A bracket or housing component, similar to part 1 but with a different internal structure.
- 6**: A small cylindrical pin or spacer.
- 7**: A small screw or bolt.
- 8**: A circular plate or disc, similar to part 4 but with a different hole pattern.
- 9**: A small cylindrical component, possibly a bearing or bush.

The assembly is shown in a disassembled state, with dashed lines indicating the alignment and relative positions of the components. The central body (3) is the core component, with various parts (1, 2, 4, 5, 6, 7, 8, 9) attached or connected to it.

BOXER
BM 100 classic

This diagram illustrates the assembly of a mechanical component, likely a lever or actuator. The parts are numbered as follows:

- 1**: A small circular component, possibly a pin or bush.
- 2**: A long, thin rod or pin.
- 3**: A large, curved, ribbed component, possibly a lever or arm.
- 4**: A small, curved component, possibly a spring or pin.
- 5**: A small, curved component, possibly a spring or pin.
- 6**: A long, thin rod or pin.
- 7**: A small, curved component, possibly a spring or pin.
- 8**: A small, curved component, possibly a spring or pin.
- 9**: A large, curved, ribbed component, possibly a lever or arm.
- 10**: A small, curved component, possibly a spring or pin.
- 11**: A small, curved component, possibly a spring or pin.
- 12**: A small, curved component, possibly a spring or pin.
- 13**: A small, curved component, possibly a spring or pin.

The diagram shows the assembly of these parts into a functional unit. The main components are the lever (3) and the arm (9). The lever (3) is connected to the arm (9) via a pin (2). The lever (3) is also connected to a spring (4) and a pin (5). The arm (9) is connected to a spring (7) and a pin (8). The lever (3) is also connected to a spring (10) and a pin (11). The arm (9) is also connected to a spring (12) and a pin (13).

BOXER
BM 100 classic

This exploded view diagram illustrates the assembly of a motorcycle engine head. The central component is the engine head casting, which features three intake ports and a central valve mechanism. The assembly includes the following parts:

- 1**: Four small O-rings or seals, one for each of the four main mounting points on the head.
- 2**: Four small circular gaskets or spacers, one for each of the four main mounting points.
- 3**: Four long bolts, one for each of the four main mounting points.
- 4**: Four small circular gaskets or spacers, one for each of the four main mounting points.
- 5**: A large circular gasket or seal for the main mounting points.
- 6**: A small cylindrical component, likely a pin or clip, for the side mounting point.
- 7**: A large circular gasket or seal for the side mounting point.
- 8**: A diamond-shaped mesh filter, likely for the air intake.
- 9**: A small circular gasket or spacer for the bottom mounting point.
- 10**: A long bolt for the bottom mounting point.
- 11**: A small cylindrical component, likely a pin or clip, for the bottom mounting point.
- 12**: A small circular gasket or spacer for the bottom mounting point.
- 13**: A small circular gasket or spacer for the bottom mounting point.

BOXER
BM 100 *classic*

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor housing. The components are numbered as follows:

- 1**: A circular flange or end plate.
- 2**: A small pin or screw.
- 3**: A long bolt or screw.
- 4**: A small circular washer or spacer.
- 5**: A larger circular washer or spacer.
- 6**: A small circular component, possibly a seal or gasket.
- 7**: Two small pins or screws.
- 8**: A curved bracket or support arm.
- 9**: A bolt or screw.
- 10**: A small circular washer or spacer.
- 11**: A bolt or screw.
- 12**: A small circular washer or spacer.
- 13**: A bolt or screw.
- 14**: A curved hose or pipe with a fitting.
- 15**: A small circular component, possibly a seal or gasket.

Dashed lines indicate the assembly path and alignment for each part.

BOXER
BM 100 classic

This diagram shows an exploded view of a cable assembly. The components are labeled with numbers 1 through 4:

- 1**: The main cable assembly, including a braided shield, an outer jacket, and a braid shield.
- 2**: A small circular component, likely a grommet or seal, shown in two locations where the cable enters or exits a panel.
- 3**: A connector or plug, shown in two locations where the cable terminates.
- 4**: A larger connector or plug, shown in one location where the cable terminates.

11

This exploded view diagram illustrates the assembly of a carburetor. The components are numbered as follows:

- 1**: A large hexagonal bolt.
- 2**: A small O-ring seal.
- 3**: The main carburetor body.
- 4**: A small screw for the top jet.
- 5**: A small pin or spacer for the top jet.
- 6**: A large, irregular gasket or plate.
- 7**: A long screw for the bottom jet.
- 8**: A small pin or spacer for the bottom jet.
- 9**: A large, irregular gasket or plate, similar to part 6 but with a different shape.
- 10**: A long screw for the bottom jet, similar to part 7.

12

This exploded view diagram illustrates the components of a motorcycle headlight assembly. The parts are numbered as follows:

- 1**: Headlight housing (main body)
- 2**: Headlight lens (SAJAL brand)
- 3**: Mounting bracket (left and right)
- 4**: Mounting pin (left and right)
- 5**: Mounting pin (bottom)
- 6**: Mounting pin (bottom)
- 7**: Mounting pin (top)
- 8**: Mounting pin (top)
- 9**: Mounting bracket (top)
- 10**: Mounting pin (top)
- 11**: Mounting pin (top)

The diagram shows the headlight housing (1) with various mounting points. The mounting bracket (9) is shown separately, along with the headlight lens (2). The mounting pins (3, 4, 5, 6, 7, 8, 10, 11) are shown in their respective positions relative to the housing and bracket. The mounting bracket (3) is shown in a dashed outline, indicating its position relative to the housing.

BOXER
BM 100 *classic*

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 16. The assembly sequence is as follows:

- Part 1** (Large gear/housing) is the main outer component.
- Part 3** (O-ring) fits into the groove of Part 1.
- Part 4** (Cylindrical sleeve) is inserted into the center of Part 1.
- Part 5** (Flange with mounting holes) is positioned at the front.
- Part 6** (Ring with internal teeth) fits onto the front of Part 5.
- Part 7** (Ring with external teeth) fits onto the front of Part 6.
- Part 8** (Gear/housing) fits onto the front of Part 7.
- Part 9** (Two O-rings) are installed on the shaft to seal the housing.
- Part 10** (Screw) is used to secure the front flange assembly.
- Part 11** (Washer) is placed on the shaft.
- Part 2** (Spring) is placed on the shaft.
- Part 12** (Nut) is threaded onto the shaft.
- Part 13** (Pin) is inserted through the nut and washer.
- Part 14** (Long shaft/rod) is inserted through the entire assembly.
- Part 15** (Bracket) is attached to the side of the assembly.

14

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or actuator. The components are numbered 1 through 17. The diagram is organized into several sub-assemblies indicated by dashed lines:

- Top Left Sub-assembly:** Includes a screw (1), a bracket (6), a pin (7), and a lever arm (17).
- Top Right Sub-assembly:** Includes a threaded rod (5) and a bracket (4).
- Main Assembly Line:** A sequence of components including a pin (9), a washer (14), a spring (9), a spring (10), a bracket (11), a washer (14), a washer (13), a shaft (15), a gear (12), a washer (13), a washer (14), and a washer (14).
- Bottom Left Sub-assembly:** Includes a bracket (3) and a screw (2).
- Bottom Right Sub-assembly:** Includes a threaded rod (8) and a bracket (16).

BOXER
BM 100 *classic*

This exploded view diagram illustrates the assembly of a carburetor. The central component is the carburetor body (1). Key sub-assemblies and parts include:

- Throttle Linkage (Right):** Consists of a throttle cable (14), a throttle lever (15), a return spring (13), and a throttle cable bracket (12).
- Choke Mechanism (Left):** Includes a choke lever (9), a choke plate (2), a choke return spring (8), and a choke cable bracket (10).
- Internal Components:** The diagram shows the internal jets and needles, including the main jet (11), pilot jet (10), and various springs (7, 6, 5) that regulate fuel flow.
- Other Parts:** Various screws (3, 4, 11), washers (13), and a float valve (14) are shown in their respective positions relative to the main assembly.

BOXER
BM 100 *classic*

This exploded view diagram illustrates the assembly of a car's front end, specifically the area around the headlights and grille. The components are numbered 1 through 15, indicating the sequence of assembly. The diagram shows the main body (1), the grille (5), the headlight housing (6), the headlight lens (7), the headlight bulb (4), the headlight mounting bracket (3), the headlight mounting plate (2), the headlight mounting screw (9), the headlight mounting nut (10), the headlight mounting washer (11), the headlight mounting bracket (8), the headlight mounting plate (12/13), the headlight mounting plate (14), and the headlight mounting plate (15).

17

This diagram illustrates the assembly of a handle. The main components are labeled as follows:

- 1**: O-ring
- 2**: Washer
- 3**: Washer
- 4**: Nut
- 5**: Main handle shaft
- 6**: Bolt
- 7**: Trigger guard
- 8**: Washer
- 9**: Washer
- 10**: Bolt

The diagram shows the trigger guard (7) being attached to the handle shaft (5) using washers (8, 9) and a bolt (10). The handle shaft (5) is also shown with a bracket (6) and a nut (4) for adjustment. The O-ring (1) and washers (2, 3) are shown being installed into the handle shaft.

BOXER
BM 100 classic

This exploded view diagram illustrates the assembly of a mechanical component. The main assembly is enclosed in a dashed rectangular box. The components are identified by numbered callouts:

- 1:** Two screws are shown. One is positioned to be inserted into the top of the main assembly, and the other is positioned to be inserted into the side of the main assembly.
- 2:** A long screw is shown positioned to be inserted into the top of the main assembly.
- 3:** A large gear is shown positioned to be mounted onto the top of the main assembly.
- 4:** A small cylindrical component is shown positioned to be inserted into the bottom of the main assembly.
- 5:** Two washers or spacers are shown positioned to be inserted into the bottom of the main assembly, one on each side of the central cylindrical component.

19

This exploded view diagram illustrates the assembly of a vehicle's rear wheel and suspension system. The components are numbered as follows:

- 1**: The main rear axle assembly, shown in the center.
- 2**: A cylindrical component, likely a shock absorber or strut, located below the axle.
- 3**: A component on the top of the axle assembly.
- 4**: A small circular disc or washer.
- 5**: A larger circular disc or washer.
- 6**: A large circular disc, likely a brake rotor or drum.
- 7**: A small pin or clip.
- 8**: A rectangular component, possibly a brake master cylinder or a sensor, located to the right.
- 9**: A component on the bottom of the axle assembly.
- 10**: A small electronic component, possibly a sensor or actuator, located to the right of the main assembly.
- 11**: A component with a cable, possibly a brake master cylinder or a sensor, located to the right.
- 12**: A threaded component, likely a shock absorber or strut, located below the axle.
- 13**: A component on the left side of the axle assembly.
- 14**: A small pin or clip.
- 15**: A cable or hose connected to the axle assembly.
- 16**: A cylindrical component, likely a shock absorber or strut, located below the axle.
- 17**: A component on the right side of the axle assembly.

The diagram uses dashed lines to indicate the assembly path and relative positions of the components.

20

14A/14B

1

2

3

4

5

6

7

9

10

11

12

13

15

16

17

21

[illegible]

BOXER
BM 100 classic

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 1**: Two cylindrical components with longitudinal grooves, likely pistons or seals.
- 2**: A long, thin rod or shaft.
- 3**: A small cylindrical pin or bush.
- 4**: A small screw or bolt.
- 5**: A small circular washer or spacer.
- 6**: A vertical rod or pin with a hook at the bottom.
- 7**: Two coiled springs.
- 8**: A small cylindrical pin or bush.
- 9**: A complex mechanical linkage or lever arm with a foot pedal at the bottom.
- 10**: A small hook or pin.
- 11**: A circular ring or flange.
- 12/13**: A pair of pliers or shears.
- 14**: A small screw or bolt.
- 15**: A handle or grip with a textured surface.
- 16**: A small screw or bolt.

Dashed lines indicate the assembly path and relative positions of the parts.

BOXER
BM 100 *classic*

[illegible]

This diagram illustrates the components of a bicycle wheel assembly, including the rim, spokes, hub, tire, and various fasteners. The parts are numbered as follows:

- 1: Spoke
- 2: Spoke
- 3: Spoke
- 4: Rim
- 5: Tire
- 6: Hub
- 7: Tire
- 8: Rim
- 9: Rim
- 10: Spoke
- 11: Spoke
- 12: Hub

[illegible]

This exploded view diagram illustrates the assembly of a mechanical component, likely a wheel or a large pulley. The parts are numbered 1 through 29. The main assembly consists of a large circular hub (2) with a central bore, a shaft (3), a series of rollers or guides (5, 6, 7, 9, 20, 21), and a large circular plate (14) with a central hub (13). The plate (14) is secured by a large nut (29) and a washer (22). A bracket (18) is attached to the side of the plate (14) using two screws (17). A long rod (12) is shown passing through the bracket (18) and the plate (14). Other components include a small pin (1), a small washer (16), a small pin (10), a small pin (11), a small pin (15), a small pin (19), a small pin (24), a small pin (25), a small pin (26), a small pin (27), a small pin (28), and a small pin (30).

[illegible]

This exploded view diagram illustrates the assembly of a mechanical component, likely a brake or clutch system. The parts are numbered 1 through 29. The main assembly consists of a large circular hub (2) with a central shaft (3) and a series of bolts (1, 4, 5, 6, 7, 9, 20, 21) securing it. A smaller circular component (14) is shown below the hub, with various bolts (8, 10, 11, 13, 15, 16, 17, 18, 19, 22, 23, 24, 25, 26, 27, 28, 29) and a lever arm (12) attached. The diagram uses dashed lines to show the alignment and assembly sequence of the parts.

27

FIGURA N° 27 : CAMPANA TRASERA

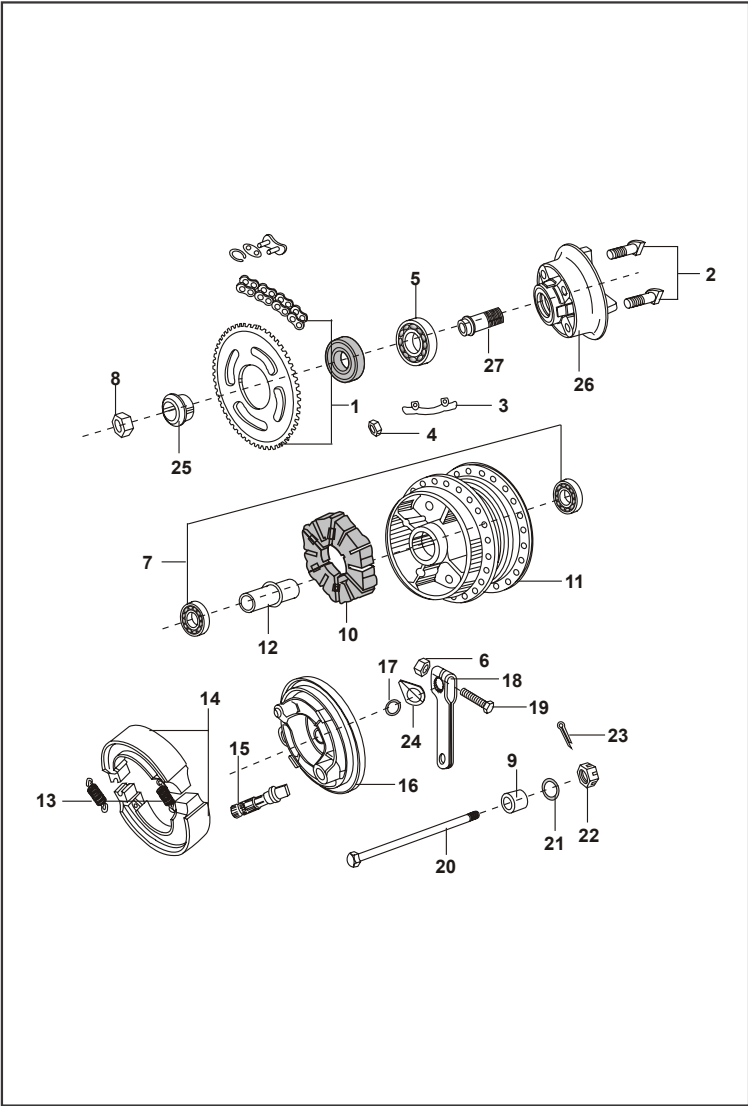


FIG. N°.	PORTE N°.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	36DM0001	Kit Sprocket y Cadena	1	Ref. Pág. N° 44
2	39097804	Tornillo Sprocket	4	
3	31151029	Platina Piñón	2	
4	39079415	Tuerca 10 mm.	4	
5	39224020	Rodamiento Bolas Porta Sprocket	1	
6	39079815	Tuerca 6 mm.	1	
7	36DU1506	Kit Rodamientos	1	Ref. Pág. N° 45
8	39098815	Tuerca Buje Porta Sprocket	1	
9	31151026	Buje Campana Trasera	1	
10	DP151027	Antivibrante Campana Trasera	1	
11	30151063	Campana Trasera	1	
12	31151018	Buje	1	
13	30151069	Resorte Banda Freno	2	
14	30151068	Banda Freno Trasero	1	
15	30151011	Leva Freno Trasera	1	
16	30151008	Porta Banda Solo	1	
17	30151038	Anillo Retenedor	1	
18	31151037	Leva Porta Banda Freno	1	
19	39077504	Tornillo 6x30	1	
20	30151071	Eje Rueda Trasero	1	
21	39071411	Arandela 12 mm.	1	
22	39098215	Tuerca Eje Rueda Trasera	1	
23	39078708	Pin Pasador	1	
24	30151005	Arandela	1	
25	30151080	Buje Porta Sproket	1	
26	30151078	Porta Sproket Sólo	1	
27	30151079	Buje Porta Sproket	1	

This diagram illustrates the assembly of a rear suspension system. The components are numbered as follows:

- 1:** A small pin or clip.
- 2:** A circular bush or washer.
- 3:** A small pin or clip.
- 4:** A small pin or clip.
- 5:** A curved suspension arm with a rubber boot at one end.
- 6:** A circular bush or washer.
- 7:** A small pin or clip.
- 8:** A coiled spring.
- 9:** A coiled spring.
- 10:** A small pin or clip.
- 11:** A small pin or clip.
- 12:** A circular bush or washer.
- 13:** A small pin or clip.
- 14:** A small pin or clip.
- 15:** A small pin or clip.
- 16:** A long, straight suspension arm.
- 17:** A small pin or clip.

The diagram shows the following assembly relationships:

- Part 1 is attached to part 2.
- Part 2 is attached to part 3.
- Part 3 is attached to part 4.
- Part 4 is attached to part 5.
- Part 5 is attached to part 6.
- Part 6 is attached to part 7.
- Part 7 is attached to part 8.
- Part 8 is attached to part 9.
- Part 9 is attached to part 10.
- Part 10 is attached to part 11.
- Part 11 is attached to part 12.
- Part 12 is attached to part 13.
- Part 13 is attached to part 14.
- Part 14 is attached to part 15.
- Part 15 is attached to part 16.
- Part 16 is attached to part 17.

29

FIGURA N° 29 : MANUBRIO

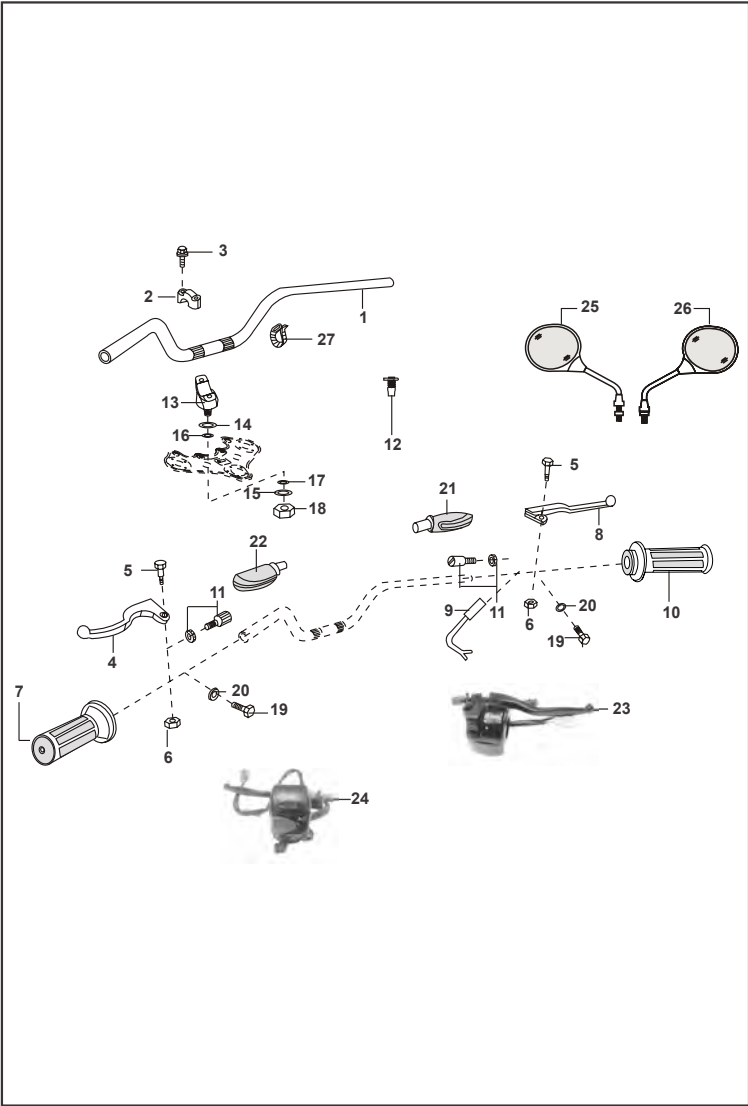


FIG. N°.	PORTE N°.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DF181117	Manubrio (Cromado)	1	
	020989/00	Manubrio (Negro)	1	Integración Nacional
2	FD181030	Abrazadera Manubrio	2	
3	39107404	Tornillo	4	
4	DU191035	Leva Clutch	1	
5	DL191014	Tornillo Leva	2	
6	39118415	Tuerca	2	
7	DF191026	Manilar Izquierdo	1	
8	DF191066	Leva Freno	1	
9	DD201170	Swiche Stop	1	
10	DF191027	Carretel Acelerador	1	
11	36DU1901	Kit Tensor Cable	1	Ref. Pág. N° 45
12	DU201046	Tapón Tubo Telescópico	1	
13	FD181031	Abrazadera Inferior Manubrio	2	
14	DF181091	Antivibrante	2	
15	DF181092	Antivibrante	2	
16	FD181019	Arandela	2	
17	FD181020	Arandela	2	
18	39118415	Tuerca	2	
19	39072504	Tornillo	2	
20	39019811	Arandela 6 mm.	2	
21	DM191015	Guardapolvo	1	
22	DM191014	Guardapolvo	1	
23	DF201053	Comando Derecho sin Leva	1	
24	DM191012	Comando Izquierdo Completo	1	
25	DF221037	Espejo Izquierdo	1	
26	DF221007	Espejo Derecho	1	
27	30191048	Banda de Amarre Cables	2	

FIGURA N° 30 : SUSPENSIÓN DELANTERA

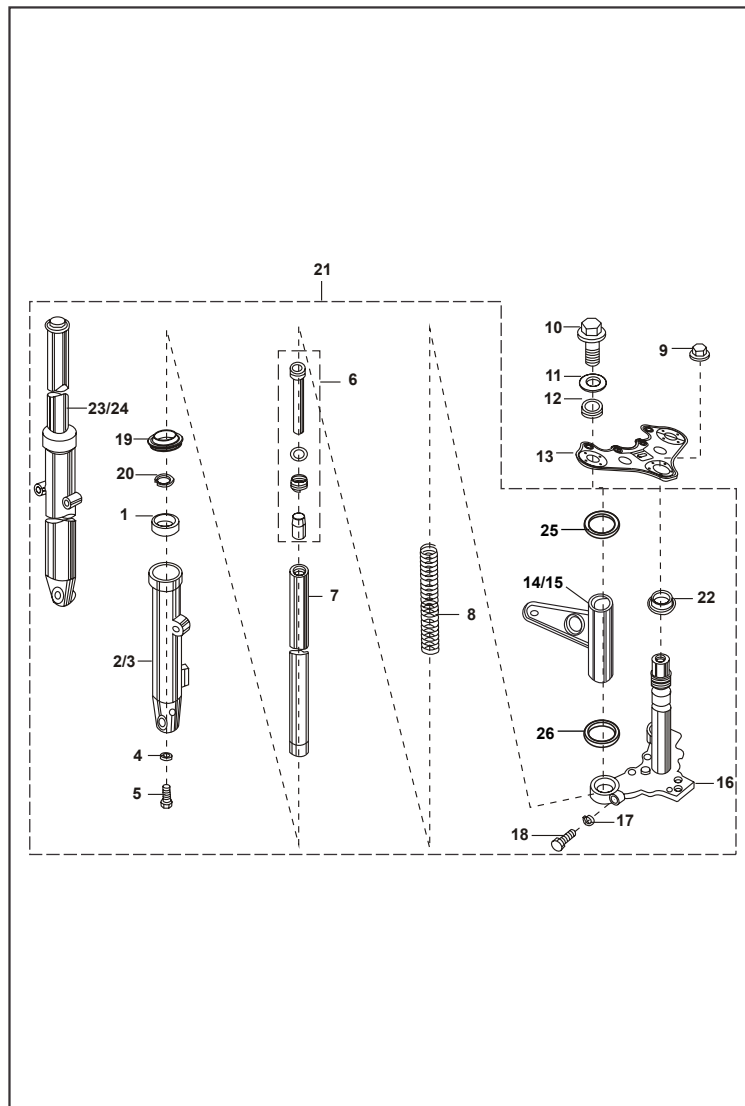


FIG. N°.	PORTE N°.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DL181080	Retén Telescópico	1	
2	DD181031	Camisa Telescópico Izquierda	1	
3	DD181034	Camisa Telescópico Derecha	1	
4	30181026	Arandela Sellado	2	
5	30181025	Tornillo Camisa Telescópico	2	
6	31181015	Cilindro Tubo Telescópico	2	
7	DD181029	Tubo Telescópico	2	
8	DM181008	Resorte Suspensión	2	
9	FD181012	Tuerca Espiga	1	
10	30181044	Tornillo Espiga	2	
11	30181029	Anillo Retenedor	2	
12	DF181085	Tapón Aceite Tubo Telescópico	2	
13	DF181077	Horquilla Superior	1	
14	DM181039	Soporte Farola Derecho	1	
15	DM181038	Soporte Farola Izquierdo	1	
16	DF181083	Horquilla Inferior	1	
17	39078912	Arandela Presión	2	
18	39181304	Tornillo	2	
19	DD181011	Guardapolvo	2	
20	30181023	Pin Telescópico	2	
21	DM181028	Horquilla Delantera	1	
22	36311803	Kit Cunas Dirección	1	Ref. Pág. N° 44
23	DM181029	Telescópico Izquierdo Completo	1	
24	DM181030	Telescópico Derecho Completo	1	
25	DD181091	Empaque Inferior Soporte Farola	2	
26	30181045	Antivibrante Soporte Farola	2	
27	DD181090	Empaque Superior Soporte Farola	2	

BOXER
BM 100 classic

This diagram illustrates the assembly of a mechanical component, likely a pump or valve, using various fasteners and structural parts. The components are numbered as follows:

- 1**: A curved metal bracket or arm.
- 2**: A small rectangular plate or gasket.
- 3**: A larger rectangular plate or gasket.
- 4**: The main vertical assembly, including a handle and internal mechanism.
- 5**: A small rectangular plate or gasket.
- 6**: A curved metal bracket or arm, similar to part 1.
- 7**: A small rectangular plate or gasket.
- 8**: A small circular washer or spacer.
- 9**: A small circular washer or spacer.
- 10**: A small circular washer or spacer.

The diagram shows the relative positions of these parts, with dashed lines indicating the assembly path and alignment. The main assembly (4) is shown in a dashed outline, indicating its position relative to the other components. The exploded view shows the parts arranged in a way that suggests the sequence of assembly, with parts 2, 3, 7, 8, and 10 being the most likely to be installed first, followed by parts 1, 5, 6, and 9.

BOXER
BM 100 *classic*

34

This exploded view diagram illustrates the assembly of a bicycle seat. The components are numbered as follows:

- 1**: A blue-colored saddle clamp.
- 2**: A black O-ring.
- 3**: A small black plastic bush or spacer.
- 4**: A silver-colored bolt.
- 5**: A black plastic bracket or support piece.
- 6**: A silver-colored bolt.
- 7**: A silver-colored bolt.
- 8**: A silver-colored bolt.
- 9**: A black O-ring.
- 10**: A silver-colored bolt.

The diagram shows the seat (a black, contoured saddle) and the seat post (a silver-colored metal tube). The assembly process involves inserting the seat post into the seat, securing it with the saddle clamp (1) and O-ring (2), and then attaching the seat to the frame using the bolts (4, 6, 7, 8, 10) and the plastic bracket (5). The small bush (3) is used to ensure proper fit and alignment of the seat post.

BOXER
BM 100 *classic*

FIGURA N° 35 : VELOCIMETRO

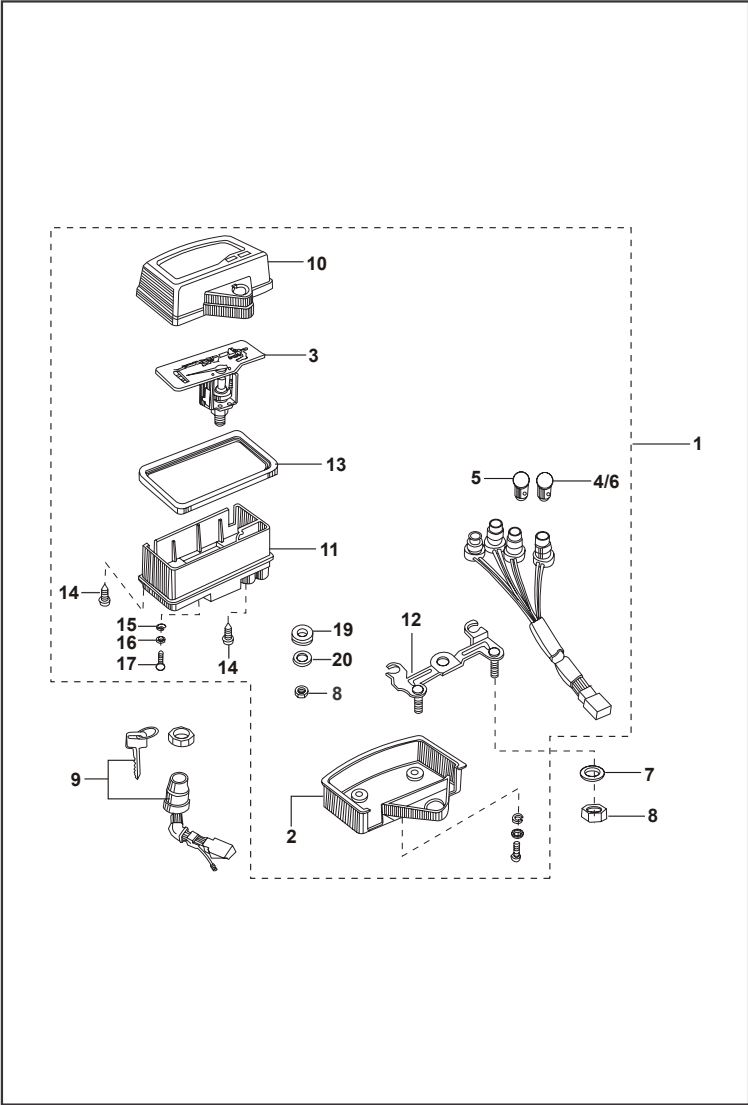


FIG. N°.	PORTE N°.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	31191012	Velocímetro Completo	1	
2	31191021	Cubierta Inferior Velocímetro	1	
3	31191018	Velocímetro	1	
4	30201029	Bombillo Velocímetro 12V-4W	1	
5	30201129	Bombillo Velocímetro 12V-2W	2	
6	30201128	Bombillo 12V 4W	1	
7	39084914	Tuerca 4 mm.	1	
8	39029215	Tuerca 4 mm.	4	
9	DF201031	Swiche Encendido (Sólo)	1	
10	31191017	Cubierta Superior Velocímetro	1	
11	31191020	Cubierta Velocímetro Interna	1	
12	31191014	Soporte Velocímetro	1	
13	31191019	Antivibrante Velocímetro	1	
14	39121002	Tornillo Velocímetro	2	
15	39090012	Arandela 5 mm	4	
16	39084211	Arandela	4	
17	39092001	Tornillo 4x12	4	
18	31201051	Tuerca Swiche Encendido	1	
19	31191015	Antivibrante Velocímetro	2	
20	39081411	Wasa	2	
21	31191013	Soquete Bombillos Velocímetro	1	

This diagram illustrates the components of a front suspension system, likely for a vehicle. The parts are numbered as follows:

- 1**: Upper control arm assembly.
- 2**: Coil spring.
- 3**: Coil spring plate.
- 4**: Coil spring nut.
- 5**: Coil spring washer.
- 6**: Lower control arm assembly.
- 7**: Steering knuckle assembly.
- 8**: Ball joint.
- 9**: Shock absorber.
- 10**: Lower control arm assembly (alternative view).
- 11**: Shock absorber (alternative view).

37

This exploded view diagram illustrates the components of a motorcycle headlight assembly, numbered 1 through 19. The main assembly, labeled 1, consists of a headlight housing (3) and a lens (5). The lens is secured by a ring (4) and a bolt (6). A mounting bracket (2) is attached to the housing with a bolt (19) and a washer (18). The bracket is further secured with a nut (8) and a lock washer (16). A cable (17) is connected to the housing. A separate cable (15) with a connector is shown. Other components include a ring (9), a nut (10), a bolt (7), a washer (11), a bolt (13), a bolt (14), and a bolt (12).

[illegible]

This diagram illustrates the components of a lighting assembly in an exploded view. The parts are numbered as follows:

- 1/2**: A small, cylindrical component, likely a lens or cap, shown with a cable.
- 3**: A larger, cylindrical component, possibly a reflector or housing, also with a cable.
- 4**: A component with a circular face and internal details, connected to a cable.
- 5**: A small, cylindrical component, likely a lens or cap, shown with a cable.
- 6**: A series of small, cylindrical components, likely screws or bolts, shown with a cable.
- 7**: A long, curved, and bent metal bracket or support arm.

The diagram shows how these parts are assembled onto a main housing or bracket. A dashed line indicates the assembly path for the components 1/2, 3, 4, 5, and 6, which are shown in an exploded view relative to the main housing. The bracket (7) is shown separately, indicating its position relative to the main assembly.

39

[illegible]

41

This diagram illustrates the components of a vehicle's electrical system, numbered 1 through 13. The components are shown in an exploded view, indicating their relative positions and assembly order.

- 1:** A small electrical connector or plug.
- 2:** A component, possibly a fuse or relay, with a mounting bracket.
- 3:** A wiring harness with multiple connectors.
- 4:** A coiled cable or hose.
- 5:** A complex wiring harness with multiple branches and connectors.
- 6:** A rectangular battery unit.
- 7:** A component, possibly a fuse or relay, with a mounting bracket, shown in a dashed box.
- 8:** A small electrical connector or plug, shown in a dashed box.
- 9:** A small rectangular component, possibly a fuse or relay.
- 10:** A cable with a connector, possibly for a horn or bell.
- 11:** A small electrical connector or plug.
- 12:** A small electrical connector or plug.
- 13:** A small electrical connector or plug.

42

BOXER
BM 100 *classic*

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
1	36311006	Kit Guías Cadenilla	31101026	Guía Cadenilla RH	1
			31101025	Guía Cadenilla LH	1
2	36311008	Kit Retenes y Cunas Válvula	31101019	Cuña Válvula	4
			39103519	Gorro Válvula	2
			31101045	Arandela Resorte Válvula	2
3	36311028	Kit Válvula (Admisión y Escape)	DD101134	Válvula Admisión	1
			DD101135	Válvula Escape	1
4	36311803	Kit Cunas Dirección	DH181025	Cuna Chasis	1
			30181026	Arandela Sellado	1
			30181024	Guardapolvo	1
			30181023	Pin Telescopio	1
5	36DF1701	Kit Buje Amort. Tras.	30171030	Antivibrante Amortiguador	4
			30171031	Buje Amortiguador	4
6	36DM0001	Kit Sprocket Y Cadena	DF151023	Cadena 112 L	1
			DJ151018	Sprocket 42t	1
			DX101052	Piñón Delantero	1
7	36DU1001	Kit Anillos Retén Tapa Culata	39102021	Anillo Retenedor	2
			39256921	Anillo Retenedor Culata	1
8	36DU1004	Kit Resorte Eje Cambios	31101055	Resorte Eje Cambios	1
			31101054	Resorte Eje Cambios	1
			DU101084	Resorte Leva Cambios	1
9	36DU1007	Kit Moñón Crank	30101233	Moñón Crank	1
			30101234	Resorte Moñón Crank	1
			30101236	Balín Crank	1
			30101235	Pasador Moñón Crank	1
			39085517	Arandela Crank	1

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
10	36DU1201	Tapa Filtro Aire	DM121007	Empaque Tapa Filtro Aire	1
			DM121004	Tapa Caja Filtro Aire	1
			01110609	Arandela Plana 5 mm.	4
			39083001	Tornillo	4
			DF161426	Tornillo	2
11	36DU1202	Tornillo Carburador	DU121024	Tornillo	1
			DD121176	Resorte Carburador	1
12	36DU1203	Tornillo Carburador	DU121025	Tornillo	1
			DD121178	Resorte Carburador	1
13	36DU1204	Kit O"Rines Carburador	DD121170	Empaque Carburador	1
			DU121023	Empaque	1
14	36DU1205	Kit Flota Y Aguja Paso Gasolina	DD121168	Aguja Flota Carburador	1
			DU121015	Flota Carburador	1
15	36DU1206	Kit Carburador	DU121018	Aguja Carburador	1
			DU121012	Pulverizador	1
			DU121013	Boquerel de Alta	1
			DU121014	Boquerel de Baja	1
			DU121021	Resorte Cortina Carburador	1
16	36DU1503	Kit Piñón Velocímetro	31151064	Piñón Velocímetro (Plástico)	1
			30151041	Piñón Velocímetro (Metálico)	1
17	36DU1506	Kit Rodamientos Campana Trasera	39268220	Rodamiento Bolas	1
			39136420	Rodamiento Bolas	1
18	36DU1901	Kit Tensor Cable	30191017	Arandela	2
			DD191147	Tornillo	2

ÍNDICE DE REFERENCIAS

PARTE No	FIG. No	PAG. No
01100610	2	5
01110609	11	24
01110609	10	45
01170110	11	9
01170111	7	9
01170111	1	10
020982/00	1	40
020986/00	6	23
020989/00	1	30
021003/00	4	43
06201083	5	39
14151021	20	26
15161069	4	34
16151066	1	25
22150241	7	15
22150435	12	24
28101107	4	5
28101107	16	5
28101195	2	14
28101214	9	14
30101015	12	10
30101096	7	14
30101142	6	13
30101154	5	15
30101233	9	44
30101234	9	44
30101235	9	44
30101236	9	44
30141015	15	10
30141031	10	33
30141039	5	33
30141052	7	33
30151005	24	28
30151008	16	28

PARTE No	FIG. No	PAG. No
30151011	15	28
30151037	17	26
30151038	13	26
30151038	17	28
30151041	16	45
30151042	25	27
30151063	11	28
30151068	14	28
30151069	13	28
30151071	20	28
30151078	26	28
30151079	27	28
30151080	25	28
30151095	15	29
30151118	23	27
30161157	8	23
30161158	7	23
30161169	2	35
30161271	1	34
30171018	9	22
30171030	5	44
30171031	5	44
30181023	20	31
30181023	4	44
30181024	4	44
30181025	5	31
30181026	4	31
30181026	4	44
30181029	11	31
30181044	10	31
30181045	26	31
30191017	18	45
30191031	8	29
30191035	9	29

PARTE No	FIG. No	PAG. No
30191036	14	29
30191038	4	29
30191038	13	29
30191047	2	24
30191048	27	30
30191067	8	37
30191069	3	37
30191070	2	37
30191071	4	37
30191072	5	37
30201029	4	36
30201069	5	40
30201074	4	42
30201085	8	42
30201128	6	36
30201129	5	36
30211005	5	41
31101005	4	1
31101006	2	1
31101007	10	1
31101014	1	18
31101018	6	2
31101019	2	44
31101025	1	44
31101026	1	44
31101033	6	3
31101038	11	15
31101039	10	15
31101040	16	15
31101041	8	15
31101045	2	44
31101051	2	7
31101054	8	44
31101055	8	44

PARTE No	FIG. No	PAG. No
31101056	8	10
31101061	4	12
31101062	1	12
31101067	4	13
31101104	4	2
31101108	10	8
31101109	11	8
31101113	5	12
31101137	16	14
31101148	13	14
31101175	16	1
31101191	1	7
31101192	5	7
31101295	3	12
31111058	9	20
31121006	2	11
31121029	5	17
31141006	6	33
31151004	3	26
31151011	15	26
31151014	22	27
31151018	12	28
31151026	9	28
31151029	3	28
31151037	18	28
31151060	18	26
31151064	29	27
31151064	16	45
31161007	13	17
31161135	7	34
31171006	7	22
31171012	16	22
31181015	6	31
31191002	2	21

PARTE No	FIG. No	PAG. No
31191004	9	37
31191012	1	36
31191013	21	36
31191014	12	36
31191015	19	36
31191017	10	36
31191018	3	36
31191019	13	36
31191020	11	36
31191021	2	36
31201003	9	42
31201027	6	42
31201028	2	41
31201051	18	36
31201079	3	42
31201081	9	10
36311006	1	3
36311006	1	44
36311008	8	2
36311008	2	44
36311028	9	2
36311028	3	44
36311803	5	21
36311803	22	31
36311803	4	44
36314002	6	21
36-DD40-01-STD/47	4	4
36-DD40-01-025/47	4	4
36-DD40-01-050/47	4	4
36-DD40-01-075/47	4	4
36-DD40-01-100/47	4	4
36DD4001	4	4
36DF1701	5	22
36DF1701	5	44

ÍNDICE DE REFERENCIAS

PARTE No	FIG. No	PAG. No
36DM0001	1	28
36DM0001	6	44
36DU1001	1	1
36DU1001	7	44
36DU1004	3	8
36DU1004	8	44
36DU1007	6	15
36DU1007	9	44
36DU1201	6	17
36DU1201	10	45
36DU1202	7	16
36DU1202	11	45
36DU1203	8	16
36DU1203	12	45
36DU1204	5	16
36DU1204	13	45
36DU1205	6	16
36DU1205	14	45
36DU1206	4	16
36DU1206	15	45
36DU1502	28	27
36DU1503	4	26
36DU1503	16	45
36DU1506	7	28
36DU1506	17	45
36DU1901	11	30
36DU1901	18	45
39019711	8	18
39019811	2	18
39019811	20	30
39019811	13	42
39020111	8	22
39024811	2	9
39024811	6	22

PARTE No	FIG. No	PAG. No
39024811	7	26
39026312	12	42
39029215	14	22
39029215	8	36
39042215	5	23
39045411	17	22
39055302	18	22
39070201	5	2
39070201	7	10
39070311	10	10
39070815	11	29
39071111	13	22
39071111	7	24
39071215	1	22
39071411	3	22
39071411	21	28
39072504	19	30
39073212	3	18
39073712	2	22
39073817	14	15
39074501	14	20
39074601	5	8
39074801	10	3
39075301	2	19
39076101	8	33
39077504	10	26
39077504	19	28
39078708	10	23
39078708	23	28
39078912	12	29
39078912	17	31
39079012	9	18
39079415	4	28
39079708	7	29

PARTE No	FIG. No	PAG. No
39079815	16	26
39079815	6	28
39080511	6	29
39080708	10	29
39080808	1	29
39081411	20	36
39081715	8	24
39083001	10	45
39084001	27	27
39084211	16	36
39084914	7	36
39085517	9	44
39090012	26	27
39090012	15	36
39092001	17	36
39097804	2	28
39098004	10	14
39098215	22	28
39098517	5	4
39098608	3	17
39098717	4	6
39098815	8	28
39099008	21	27
39099206	6	7
39099311	9	15
39099511	13	15
39099906	11	3
39099906	6	9
39099906	8	12
39099906	3	13
39099906	4	19
39100006	12	1
39100006	1	4
39100320	5	20

PARTE No	FIG. No	PAG. No
39100820	6	10
39101321	5	19
39101321	19	26
39101721	14	1
39101721	2	3
39101921	2	12
39102021	7	44
39102121	5	1
39102304	3	11
39102821	6	20
39103519	2	44
39104119	5	13
39104219	4	20
39104319	4	10
39105006	2	10
39105315	11	14
39105411	8	35
39105515	1	5
39105604	4	9
39106204	4	11
39106204	15	16
39106604	3	10
39106804	3	9
39106804	9	21
39107404	7	12
39107404	3	30
39107504	11	10
39107504	10	13
39107801	1	19
39108019	5	10
39118415	6	30
39118415	18	30
39121002	14	36
39122515	1	9

PARTE No	FIG. No	PAG. No
39122515	10	22
39122515	6	39
39128321	3	16
39136420	17	45
39155304	10	20
39165911	7	20
39167304	3	1
39167504	9	16
39168004	9	17
39168304	12	38
39168412	11	38
39169901	8	5
39178924	11	17
39178924	3	35
39179021	14	3
39180204	3	43
39181304	18	31
39186420	17	5
39186420	5	9
39194004	3	23
39194004	1	42
39194004	5	43
39195904	8	3
39198104	15	6
39199404	2	8
39213421	8	13
39214704	10	12
39219908	14	5
39220011	12	5
39222104	13	21
39222204	8	21
39222204	1	24
39224020	5	28
39234501	10	18

ÍNDICE DE REFERENCIAS

PARTE No	FIG. No	PAG. No
39240320	12	14
39240701	10	17
39242911	6	41
39243015	7	41
39246904	10	21
39247304	1	21
39247304	9	24
39247304	14	24
39247304	6	34
39247304	11	42
39247404	8	8
39247504	5	34
39247504	4	40
39247604	3	40
39247915	11	21
39247915	13	38
39248104	14	23
39248304	3	24
39248415	13	24
39248415	6	40
39256921	7	44
39260011	3	14
39268020	1	26
39268120	5	26
39268220	17	45
39270004	17	21
39270411	12	8
40512E	6	43
41023-1717/18	9	25
41070-2717-NR2/18	5	25
41070-2717-NR53/18	5	25
41070-2717-SP1/19	5	25
41070-2717-ZK051/59	5	25
41070-3017-NR1/18	7	25

PARTE No	FIG. No	PAG. No
41070-3017-ZK051/59	7	25
41075-2717/18	6	25
41075-2717/23	6	25
52DF0020	15	22
52DF0021	12	22
52DM8007	1	32
52DU0104	6	8
52DU0175	2	34
52DU0176	8	34
59040025	1	15
DD101007	2	4
DD101058	6	12
DD101060	9	13
DD101062	9	3
DD101095	17	15
DD101101	13	10
DD101106	7	8
DD101134	3	44
DD101135	3	44
DD101219	14	10
DD101254	3	15
DD101264	2	15
DD101275	10	9
DD101309	1	6
DD101318	15	20
DD101325	7	13
DD101343	13	1
DD101347	6	1
DD101349	8	1
DD101350	7	1
DD101366	6	18
DD101440	7	2
DD101475	16	6
DD101480	6	14

PARTE No	FIG. No	PAG. No
DD101480	6	14
DD101481	15	1
DD101487	7	3
DD101492	5	14
DD101493	8	14
DD101521	18	1
DD111011	16	20
DD111012	17	20
DD111018	12	20
DD111048	2	20
DD121168	14	45
DD121170	13	45
DD121171	11	16
DD121176	11	45
DD121178	12	45
DD141055	2	33
DD141227	9	33
DD151008	11	26
DD151009	8	26
DD161051	4	24
DD161051	16	24
DD161078	17	29
DD161203	15	21
DD161204	16	21
DD181011	19	31
DD181029	7	31
DD181031	2	31
DD181034	3	31
DD181090	27	31
DD181091	25	31
DD181192	7	39
DD191147	18	45
DD201009	10	38
DD201010	9	38

PARTE No	FIG. No	PAG. No
DD201011	4	41
DD201017	2	38
DD201045	19	38
DD201046	18	38
DD201047	8	38
DD201048	16	38
DD201170	9	30
DD221030	1	43
DF101055	2	2
DF111020	3	20
DF111040	13	20
DF121003	3	19
DF121023	1	17
DF141120	3	33
DF141129	1	35
DF151003	2	26
DF151016	16	29
DF151023	6	44
DF161102	4	23
DF161104	5	24
DF161242	15	24
DF161245	10	24
DF161413	1	23
DF161414	15	23
DF161415	3	34
DF161425	2	23
DF161426	10	45
DF181024	18	21
DF181024	6	35
DF181052	4	21
DF181077	13	31
DF181083	16	31
DF181085	12	31
DF181090	3	21

PARTE No	FIG. No	PAG. No
DF181091	14	30
DF181092	15	30
DF181117	1	30
DF191026	7	30
DF191027	10	30
DF191066	8	30
DF191067	2	29
DF201031	9	36
DF201053	23	30
DF201058	17	38
DF201129	7	42
DF201138	1	41
DF201140	2	42
DF201141	3	41
DF201164	14	38
DF221007	26	30
DF221037	25	30
DG101498	9	9
DG141019	10	35
DG161121	4	35
DG161124	11	23
DH101066	13	5
DH101067	15	5
DH101195	9	5
DH101430	6	4
DH121101	13	16
DH121102	14	16
DH121103	7	17
DH161194	16	23
DH181025	4	44
DJ151018	6	44
DJ201046	4	38
DJ201051	5	38
DL141035	7	35

ÍNDICE DE REFERENCIAS

PARTE No	FIG. No	PAG. No
DL161016	2	32
DL161017	9	35
DL161018	3	32
DL161048	6	23
DL181080	1	31
DL191014	5	30
DL191020	15	38
DM101098	4	7
DM101099	8	7
DM101149	9	12
DM121004	10	45
DM121007	10	45
DM121010	12	17
DM121014	14	17
DM121026	15	17
DM141042	4	32
DM141043	5	32
DM151029	4	25
DM161009	6	24
DM161120	7	21
DM161152	6	32
DM161153	7	32
DM171018	11	22
DM171026	4	22
DM181008	8	31
DM181028	21	31
DM181029	23	31
DM181030	24	31
DM181038	15	31
DM181039	14	31
DM191002	11	37
DM191005	10	37
DM191010	3	29
DM191012	24	30

PARTE No	FIG. No	PAG. No
DM191014	22	30
DM191015	21	30
DM191016	5	29
DM191017	6	37
DM201022	1	38
DM201027	1	39
DM201028	2	39
DM201029	3	39
DM201030	4	39
DM201033	5	42
DM211018	2	43
DM221001	8	17
DM221008	12	21
DP101155	13	6
DP101168	14	6
DP101340	7	7
DP101452	8	9
DP151027	10	28
DP161101	2	40
DP161145	1	40
DS151009	10	25
DS151010	11	25
DU-1012-07-STD/47	7	4
DU-1012-07-025/47	7	4
DU-1012-07-050/47	7	4
DU-1012-07-075/47	7	4
DU-1012-07-100/47	7	4
DU101005	3	5
DU101010	11	5
DU101011	6	6
DU101038	12	15
DU101041	7	5
DU101045	15	15
DU101050	4	15

PARTE No	FIG. No	PAG. No
DU101056	4	3
DU101057	2	16
DU101058	17	1
DU101066	12	3
DU101067	13	3
DU101073	1	8
DU101074	4	8
DU101075	12	9
DU101078	5	3
DU101080	7	6
DU101081	3	7
DU101083	9	7
DU101084	8	44
DU101085	13	9
DU101096	3	3
DU101109	4	14
DU101113	13	8
DU101180	7	18
DU101185	9	8
DU101190	3	2
DU101191	1	2
DU101196	5	18
DU101206	4	18
DU101207	7	4
DU101208	9	1
DU101210	1	13
DU101213	11	6
DU101218	3	4
DU101220	14	9
DU101228	11	1
DU121004	2	17
DU121005	1	11
DU121008	4	17
DU121009	1	16

PARTE No	FIG. No	PAG. No
DU121012	15	45
DU121013	15	45
DU121014	15	45
DU121015	14	45
DU121017	12	16
DU121018	15	45
DU121021	15	45
DU121023	13	45
DU121024	11	45
DU121025	12	45
DU121028	10	16
DU141041	1	33
DU141228	4	33
DU151005	6	26
DU151018	8	25
DU151025	2	25
DU151026	3	25
DU161032	9	23
DU161093	14	21
DU161094	14	21
DU161102	5	35
DU161144	12	23
DU161145	13	23
DU191035	4	30
DU191041	1	37
DU201029	6	38
DU201046	12	30
DU201057	3	38
DU201060	7	38
DU201062	11	20
DU201063	10	42
DU221003	4	43
DX101030	11	13
DX101035	14	14

[illegible]



Línea Gratuita Nacional

01 8000 52 00 90

servicioalcliente@auteco.com.co

www.auteco.com.co

Medellín: 604 2511 • Bogotá: 744 8911

Cali: 487 9911 • Barranquilla: 386 0011