

CATÁLOGO DE PARTES

pulsar
NS160FI

Mobil Super
4T Ultra



SISTEMA ANTIBLOQUEO
DE FRENOS NO INCLUIDO

pulsar
POTENCIA SIN PRECEDENTES

www.auteco.com.co
Línea gratuita nacional: 018000 520090
servicioalcliente@auteco.com.co



auteco

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página web: www.auteco.com.co accediendo al link repuestos. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco.



DIRECTORIO TELEFÓNICO - UN REPUESTOS Y ACCESORIOS ÁREA COMERCIAL Y ASESORES DE VENTAS

NOMBRE	CARGO	ZONA	CELULAR	CORREO ELECTRÓNICO
John Jahiver Salamanca Latorre	ASESOR COMERCIAL UN R&A	Bogota D.C./Girardot/Fusagasuga/Soacha	3005428756	jsalamanca@auteco.com.co
Carlos Javier Uribe Duran	ASESOR COMERCIAL UN R&A	Cucuta/Aguachica/Oca A/	3217997928	cjuribe@auteco.com.co
Andres Felipe Bustamante Castañeda	ASESOR COMERCIAL UN R&A	Granada/Acacias/	3175569320	abustamante@auteco.com.co
Michael Anderson Melo S. (Supernumerario)	ASESOR COMERCIAL UN R&A	Villavicencio	3146375950	mmelo@auteco.com.co
Yuli Andrea Pedraza Escobar	ASESOR COMERCIAL UN R&A	Bogota D.C./Cundinamarca	3224619721	ypedraza@auteco.com.co
Juan Manuel Rodriguez Villa	ASESOR COMERCIAL UN R&A	Barrancabermeja/ Santander	3174817708	jmrdriguez@auteco.com.co
Rafael Antonio Martinez Ballesteros	ASESOR COMERCIAL UN R&A	Yopal/Casanare	3186154582	rmartinez@auteco.com.co
Ivan Eduardo Fonseca Cardenas	ASESOR COMERCIAL UN R&A	Tunja/Boyaca	3186177283	ifonseca@auteco.com.co
David Andres Riaño Vidales	ASESOR COMERCIAL UN R&A	Bogotá	3218032957	driano@auteco.com.co
Yeedsander Guzman Garcia	ASESOR COMERCIAL UN R&A	Barranquilla	3005426459	yguzman@auteco.com.co
Nestor Raul Astarve Rendon	ASESOR COMERCIAL UN R&A	Medellin	3104362689	nadarve@auteco.com.co
Miguel Arturo Osorio Ruiz	ASESOR COMERCIAL UN R&A	Valledupar/Cesar	3217997887	mosorio@auteco.com.co
Jose Luis Padilla Pasiminio	ASESOR COMERCIAL UN R&A	Cartagena De Indias/Turbaco/	3122987444	jpadilla@auteco.com.co
Jhonatan Arroyo Martinez	ASESOR COMERCIAL UN R&A	Sincelejo/Maganguel/Cerete/	3186186416	jarrojo@auteco.com.co
Viviana Mercedes Macias Ballesteros	ASESOR COMERCIAL UN R&A	Santa Marta/El Banco/	3167706184	vmacias@auteco.com.co
Andres Mauricio Torres Altamiranda	ASESOR COMERCIAL UN R&A	Monteria/Caucasia/Montelibano/	3184117911	amtorres@auteco.com.co
Ronald Jimenez Montenegro	ASESOR COMERCIAL UN R&A	Quibdo/Istmina/	3186186962	rjimenez@auteco.com.co
Edward Alexander Bustamante Mesa	ASESOR COMERCIAL UN R&A	Medellin/Bello/Barbosa	3217997930	ebustamante@auteco.com.co
Pedro Luis Padilla Diaz	ASESOR COMERCIAL UN R&A	Apartado/Tierralta/Turbo/	3186186650	jpadilla@auteco.com.co
Valentina Sanchez M. (Supernumeraria)	SUPER NUMERARIA	Medellin - Antioquia	3174817837	vsanchez@auteco.com.co
Leidy Johana Velasquez Sanchez	ASESOR COMERCIAL UN R&A	Ibague/La Dorada/San Sebastian De Mariquita/	3122576791	lvlasquez@auteco.com.co
Erwin Alexis Carlosama Tobar	ASESOR COMERCIAL UN R&A	Cali	3135844713	ecarlosama@auteco.com.co
Juan Esteban Castañeda Gaviria	ASESOR COMERCIAL UN R&A	Florencia/Puerto Asis/Valle Del Guamuez/Mocoa	3102156492	jcastaneda@auteco.com.co
Jhon Freddy Arias Mejia	ASESOR COMERCIAL UN R&A	Pereira/Manizales/Armenia/	3183384054	jarias@auteco.com.co
Jaime Alberto Orozco Jimenez	ASESOR COMERCIAL UN R&A	Palmira/Guadalajara De Buga/Jamundi/	3165560505	jorozco@auteco.com.co
Leonardo Ramirez Polonia	ASESOR COMERCIAL UN R&A	Neiva/Pitalito/Garzon/	3174815089	lramirez@auteco.com.co
Boris Alexis Rivera Barbosa	ASESOR COMERCIAL UN R&A	Tulua/Buenaventura/Roldanillo/	3152710311	brivera@auteco.com.co
Luisa Fernanda Alpala Patiño	ASESOR COMERCIAL UN R&A	Pasto/piales/	3174393005	lalpala@auteco.com.co
Jineth Marcela Martinez Yalanda	ASESOR COMERCIAL UN R&A	Popayan/Santander De Quilichao/	3174110499	jmartinez@auteco.com.co
Jhonatan Ocampo C. (Supernumerario)	ASESOR COMERCIAL UN R&A	Cali	3124142279	jocampoc@auteco.com.co
Jimmy Herrera Hernandez	JEFE ZONA CENTRO	Zona Oriente	3103739019	jherrera@auteco.com.co
Carlos Humberto Tobon Restrepo	JEFE ZONA NORTE	Antioquia	3104473611	ctobon@auteco.com.co
Jorge Eliecer Lopez Duque	JEFE COMERCIAL CALI	Zona Sur	3206820964	jelopez@auteco.com.co

SERVICIO AL CLIENTE

LINEA ÚNICA DE SERVICIO AL CLIENTE CANAL

(4) 444 81 90 

UNIDAD DE REPUESTOS y ACCESORIOS • FAX OFICINAS: 373 03 75

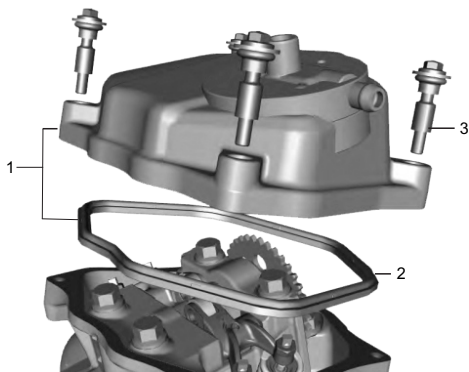
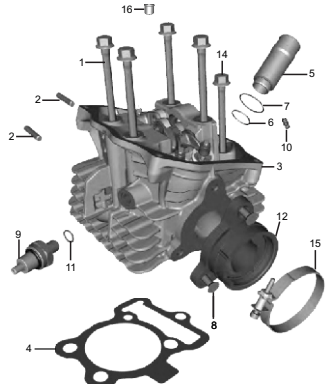
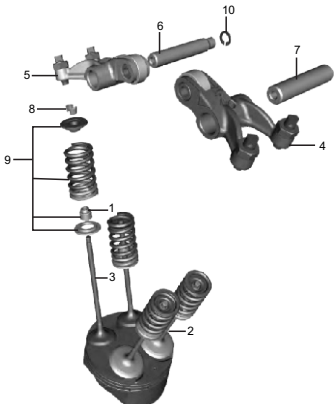
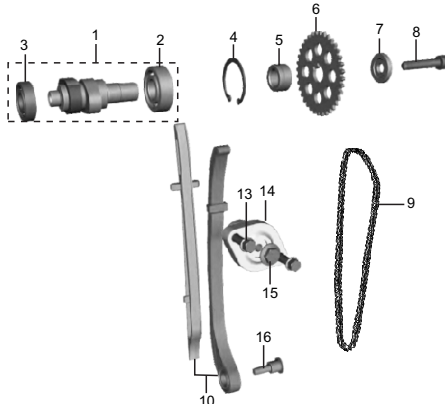
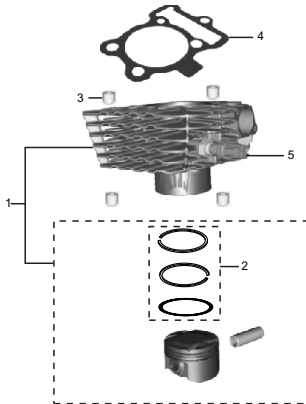
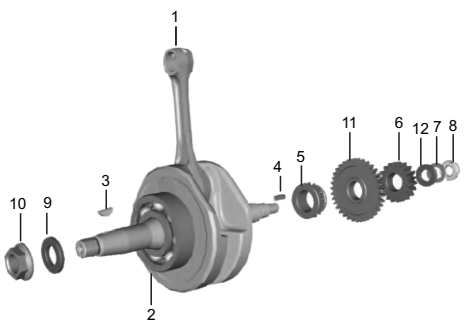
ATENCIÓN EN:	NOMBRE	E-MAIL	TELÉFONO	FAX
SERVICIO PAGO ANTICIPADO	JEISSON ALEXANDER ALVAREZ M.	repuestosauteco1@auteco.com.co	3104166342	
COORDINADOR SERVICIO POSTVENTA	LUIS G. RODRIGUEZ	lrodriguez@auteco.com.co		
DEVOLUCIONES	WILMAR ANTONIO BEDOYA C.	wbedoya@auteco.com.co		
RECLAMOS	JULIAN RODRIGUEZ			
MOTO FUERA DE RUTA	JONI HOLGUIN	motofueraderuta@auteco.com.co		

AUTOTECNICA COLOMBIANA S.A.S (AUTECO S.A.S) SEDE PRINCIPAL Cra. 42 N° 45-77 Itagüí Ant. - PBX: (4)306 81 81
Atención a clientes finales: LINEA GRATUITA NACIONAL - 01 8000 52 00 90

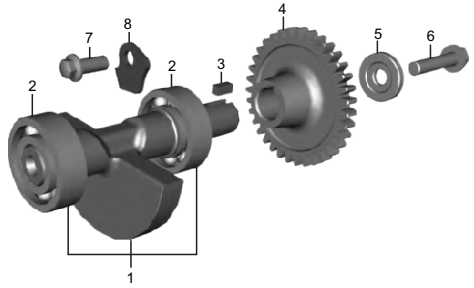
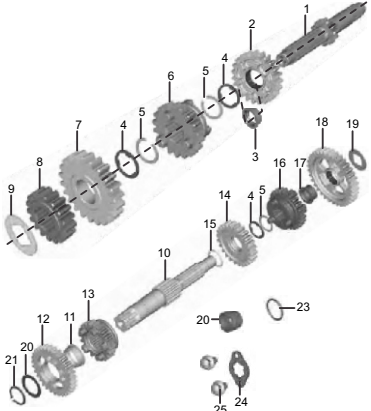
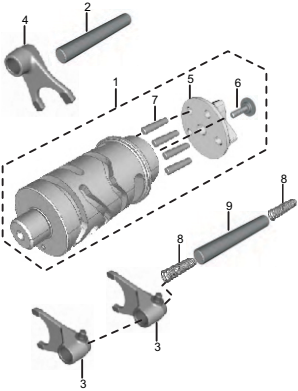
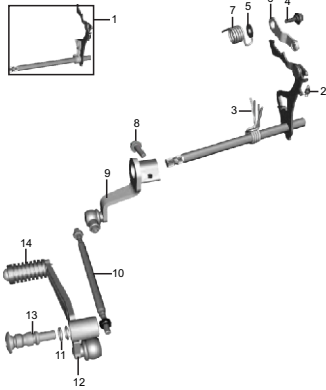
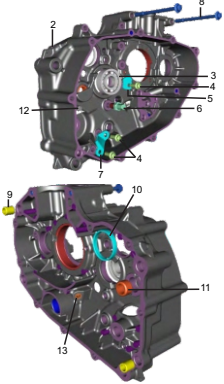
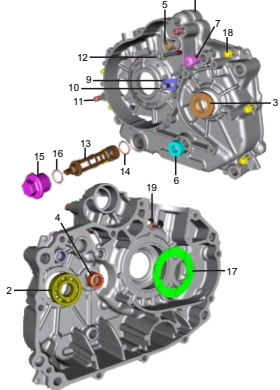
ÍNDICE

FIGURA Nº	DESCRIPCIÓN	PÁG. Nº	FIGURA Nº	DESCRIPCIÓN	PÁG. Nº
1	TAPA CULATA	1	33	DISCO FRENO TRASERO	33
2	CULATA	2	34	CALIPER DELANTERO	34
3	VÁLVULAS	3	35	CALIPER TRASERO	35
4	EJE DE LEVAS / TENSOR CADENILLA	4	36	RUEDA TRASERA	36
5	CILINDRO / PISTÓN	5	37	PEDAL FRENO	37
6	CIGÜEÑAL	6	38	MANUBRIO / ESPEJOS	38
7	BALANCEADOR	7	39	SUSPENSIÓN DELANTERA	39
8	TRANSMISIÓN	8	40	ENFOCADOR AIRE	40
9	SELECTOR DE CAMBIOS	9	41	TANQUE DE GASOLINA / GRIFO GASOLINA	41
10	EJE DE CAMBIOS	10	42	BOMBA DE GASOLINA	42
11	CARCASA DERECHA	11	43	ANTIVIBRANTES / CUBIERTAS TANQUE	43
12	CARCASA IZQUIERDA	12	44	TORNILLOS TAPAS LATERALES / CUBIERTA SILLÍN	44
13	BOMBA ACEITE	13	45	VELOCÍMETRO	45
14	PEDAL CRANK	14	46	CABLES	46
15	CUBIERTA CLUTCH	15	47	GUARDACADENA / GUARDABARRO TRASERO	47
16	RADIADOR	16	48	TORNILLOS Y SOPORTES CUBIERTA MOTOR	48
17	CUBIERTA VOLANTE	17	49	FAROLA / CARENAJE	49 - 50
18	CLUTCH	18	50	DIRECCIONALES	51
19	MOTOR DE ARRANQUE	19	51	STOP	52
20	VOLANTE / C.D.I / PLATO BOBINAS	20	52	EQUIPO ELÉCTRICO PARTE Nº1	53
21	SISTEMA DE INYECCIÓN	21	53	EQUIPO ELÉCTRICO PARTE Nº2	54
22	CAJA FILTRO DE AIRE	22	54	HERRAMIENTAS	55
23	SILENCIADOR	23	55	ACCESORIOS	56
24	SILLÍN	24	56	CUBIERTAS	57
25	SOPORTES DE MOTOR	25	57	CALCOMANÍAS	58 - 59
26	CHASIS	26	58	LISTA DE KITS	60
27	BRAZO OSCILANTE / AMORTIGUADOR	27	59	INDICE DE REFERENCIAS	61 - 67
28	REPOSAPIÉ CONDUCTOR / PASAJERO	28			
29	GUARDABARRO DELANTERO	29			
30	GATO CENTRAL / GATO LATERAL	30			
31	LLANTAS / RINES	31			
32	DISCO FRENO DELANTERO	32			

ÍNDICE DE GRÁFICOS

					
FIGURA N° 1: TAPA CULATA	PÁG. N°. 1	FIGURA N° 2: CULATA CADENILLA	PÁG. N°. 2	FIGURA N° 3: VÁVULAS	PÁG. N°. 3
					
FIGURA N° 4: EJE DE LEVAS / TENSOR CADENILLA	PÁG. N°. 4	FIGURA N° 5: CILINDRO / PISTÓN	PÁG. N°. 5	FIGURA N° 6: CIGÜEÑAL	PÁG. N°. 6

ÍNDICE DE GRÁFICOS

	FIGURA N° 7: BALANCADOR PÁG. N°. 7		FIGURA N° 8: TRANSMISIÓN PÁG. N°. 8		FIGURA N° 9: SELECTOR DE CAMBIOS PÁG. N°. 9
	FIGURA N° 10: EJE DE CAMBIOS PÁG. N°. 10		FIGURA N° 11: CARCASA DERECHA PÁG. N°. 11		FIGURA N° 12: CARCASA IZQUIERDA PÁG. N°. 12

ÍNDICE DE GRÁFICOS

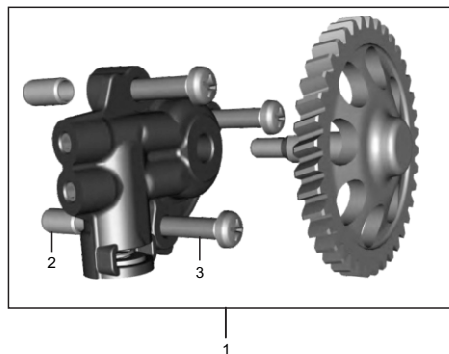


FIGURA N° 13: BOMBA ACEITE

PÁG. N°.
13

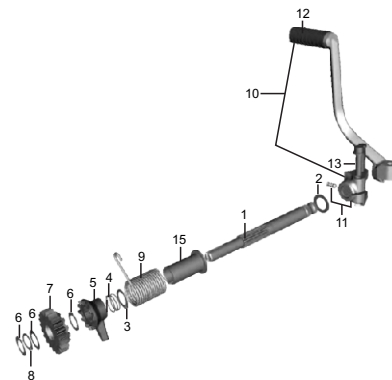


FIGURA N° 14: PEDAL CRANK

PÁG. N°.
14

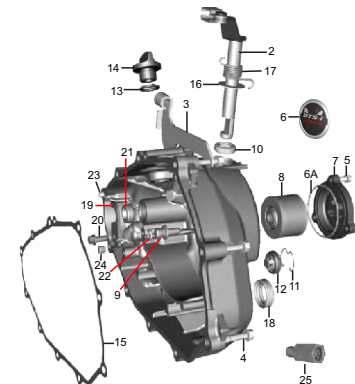


FIGURA N° 15: CUBIERTA CLUTCH

PÁG. N°.
15

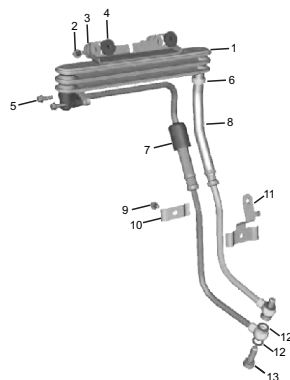


FIGURA N° 16: RADIADOR

PÁG. N°.
16

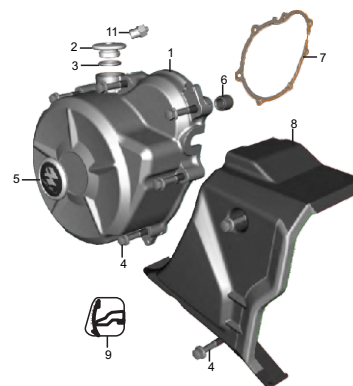


FIGURA N° 17: CUBIERTA VOLANTE

PÁG. N°.
17

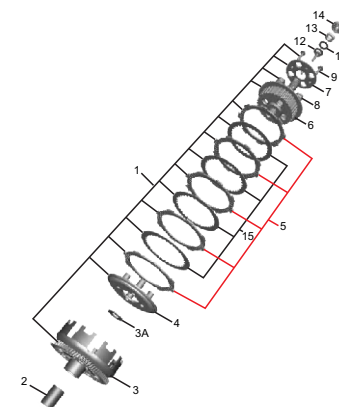


FIGURA N° 18: CLUTCH

PÁG. N°.
18

ÍNDICE DE GRÁFICOS

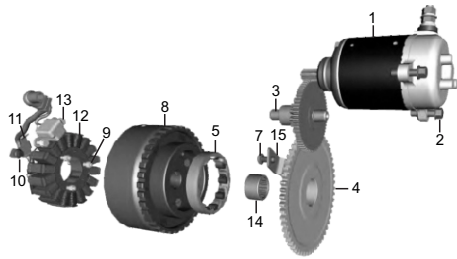
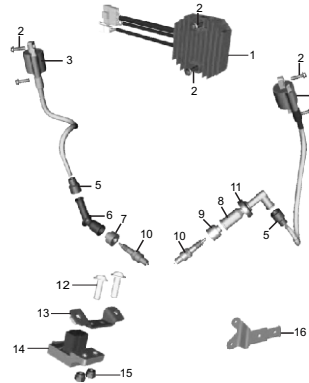


FIGURA N° 19: MOTOR DE ARRANQUE

PÁG. N°.
19



**FIGURA N° 20: VOLANTE / C.D.I / PLATO
PLATO DE BOBINAS**

PÁG. N°.
20

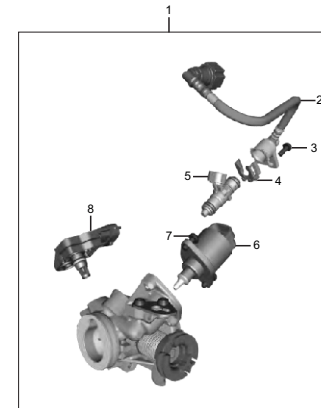


FIGURA N° 21: SISTEMA INYECCIÓN

PÁG. N°.
21

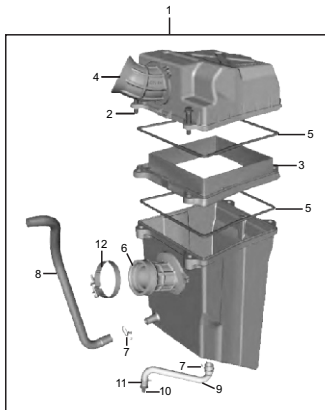


FIGURA N° 22: CAJA FILTRO DE AIRE

PÁG. N°.
22

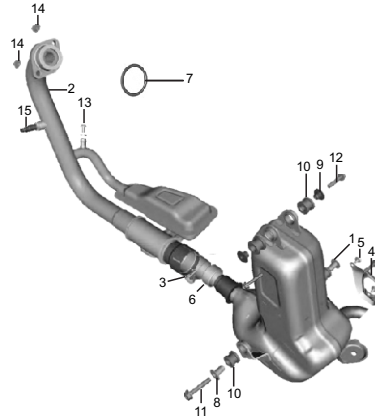


FIGURA N° 23: SILENCIADOR

PÁG. N°.
23

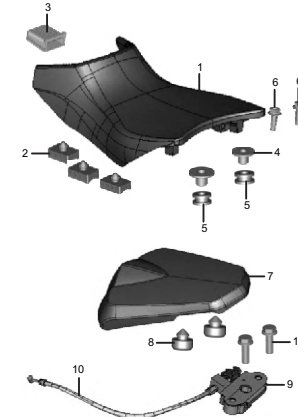
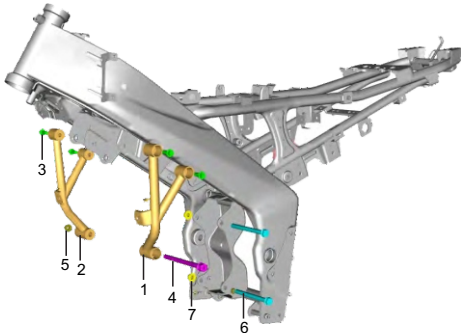
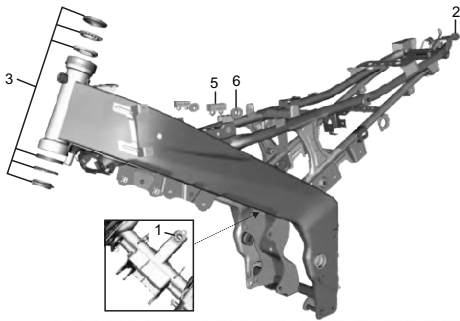
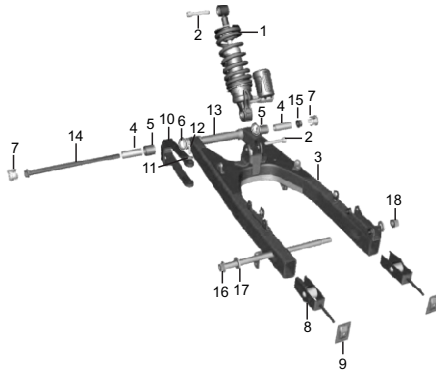
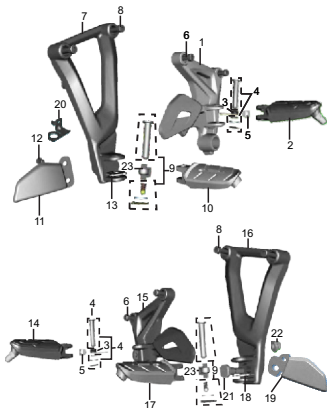
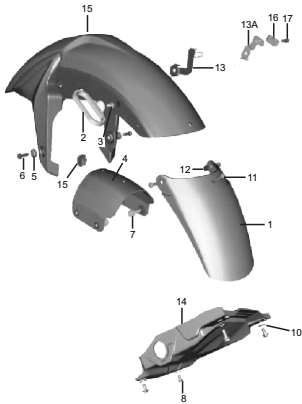
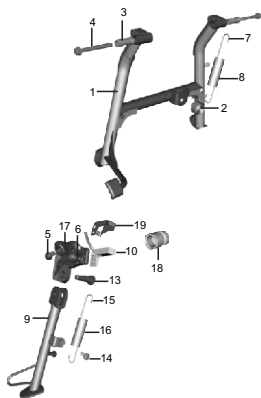


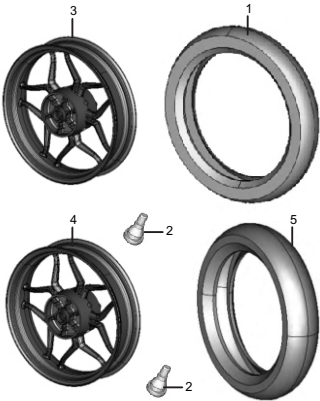
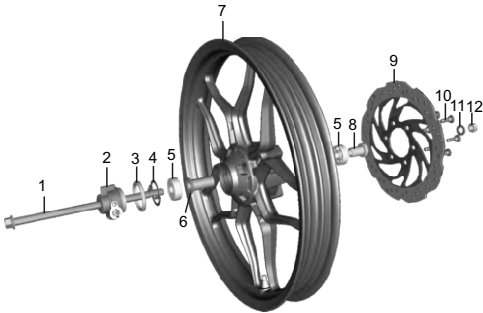
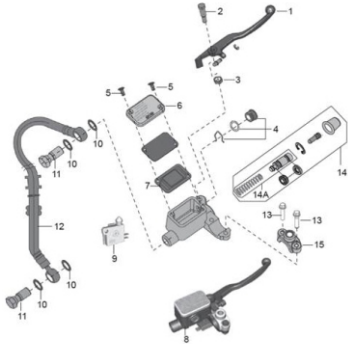
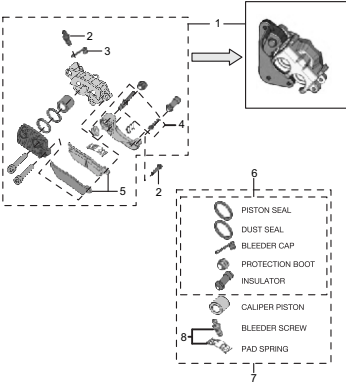
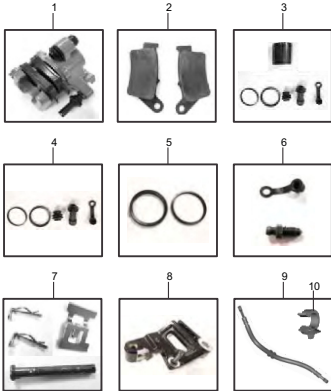
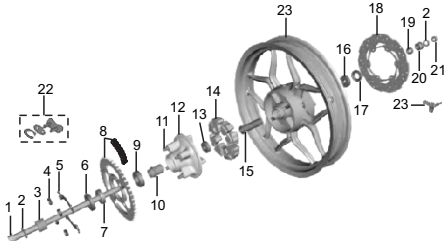
FIGURA N° 24: SILLÍN

PÁG. N°.
24

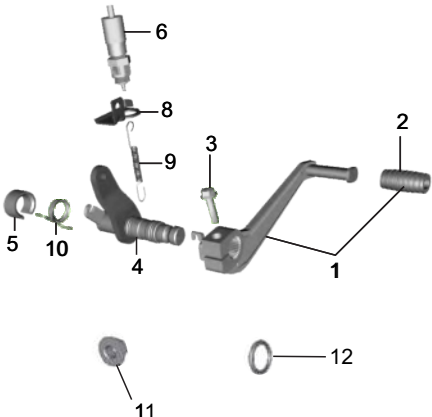
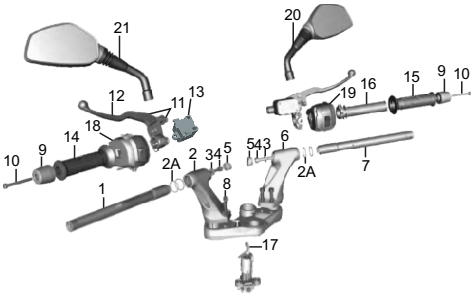
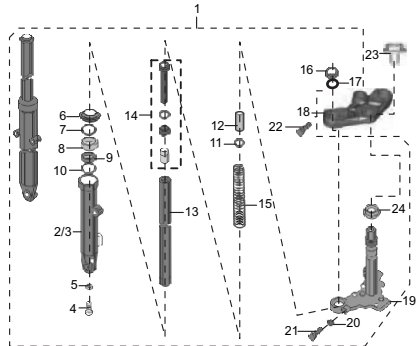
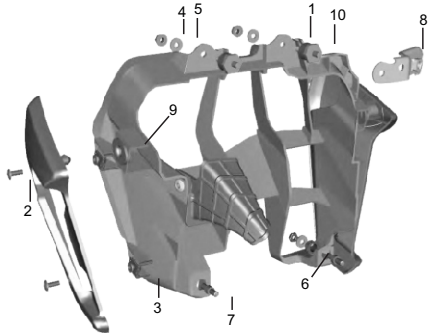
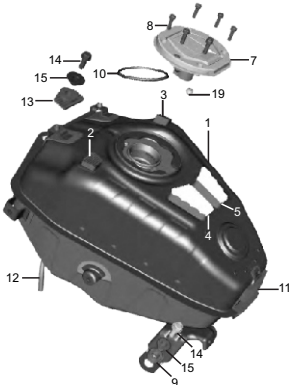
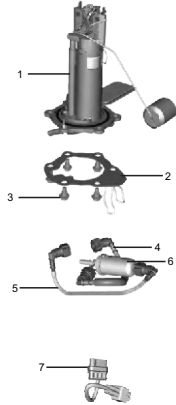
ÍNDICE DE GRÁFICOS

					
FIGURA N° 25: SOPORTES DE MOTOR		PÁG. N°. 25		FIGURA N° 26: CHASIS	
		PÁG. N°. 26		FIGURA N° 27: BRAZO OSCILANTE / AMORTIGUADOR	
				PÁG. N°. 27	
					
FIGURA N° 28: REPOSAPIÉ CONDUCTOR - PASAJERO		PÁG. N°. 28		FIGURA N° 29: GUARDABARRO DELANTERO	
		PÁG. N°. 29		FIGURA N° 30: GATO CENTRAL - GATO LATERAL	
				PÁG. N°. 30	

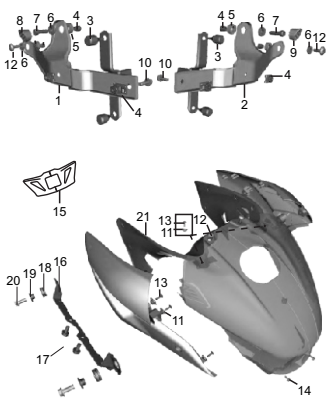
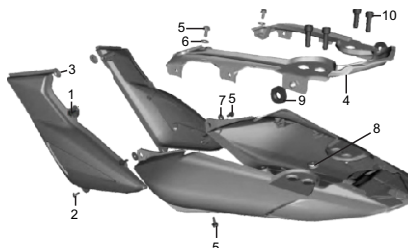
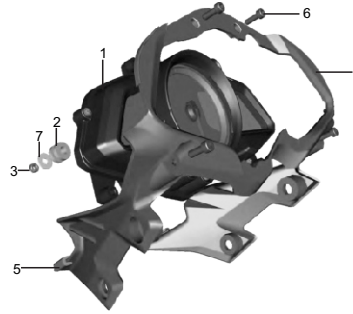
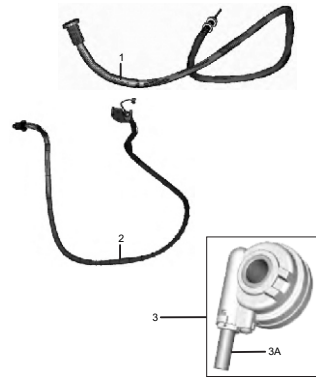
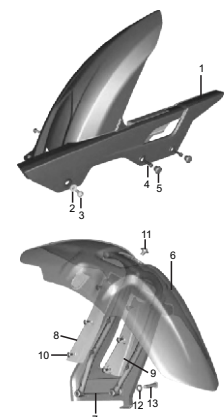
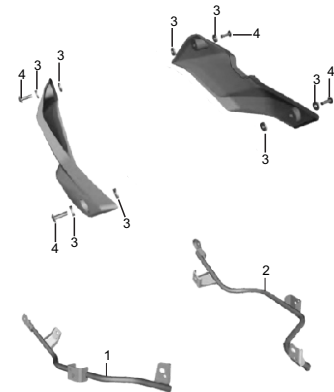
ÍNDICE DE GRÁFICOS

	FIGURA N° 31: LLANTAS - RINES	PÁG. N°. 31		FIGURA N° 32: DISCO DE FRENO DELANTERO	PÁG. N°. 32		FIGURA N° 33: BOMBA DE FRENO TRASERO	PÁG. N°. 33
	FIGURA N° 34: CALIPER DELANTERO	PÁG. N°. 34		FIGURA N° 35: CALIPER TRASERO	PÁG. N°. 35		FIGURA N° 36: RUEDA TRASERO	PÁG. N°. 36

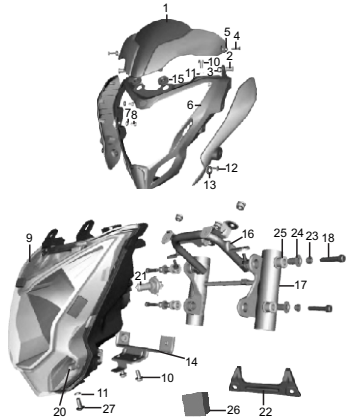
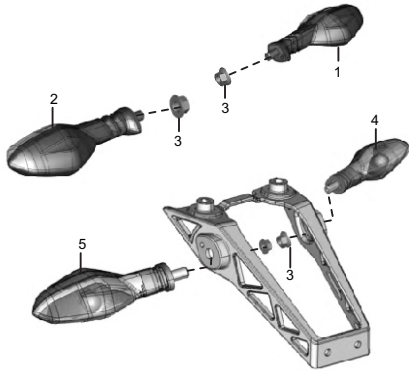
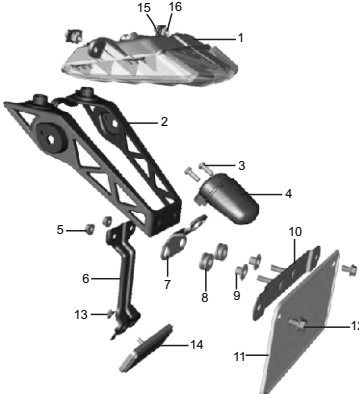
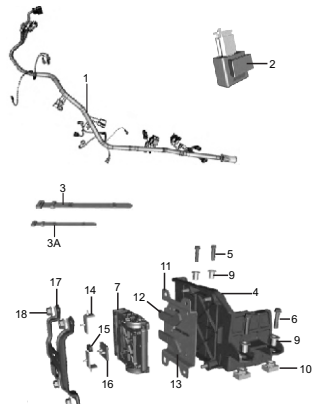
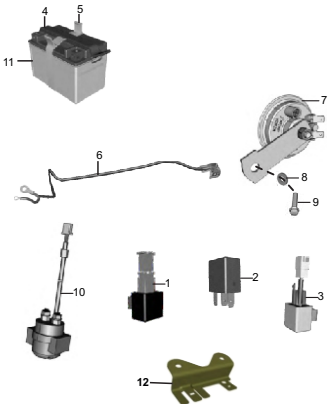
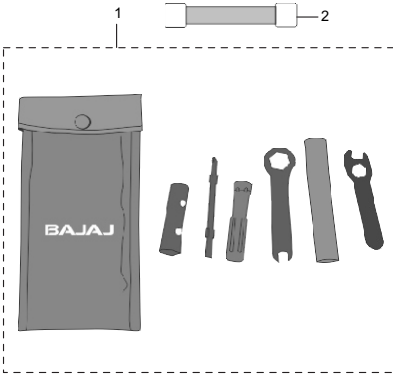
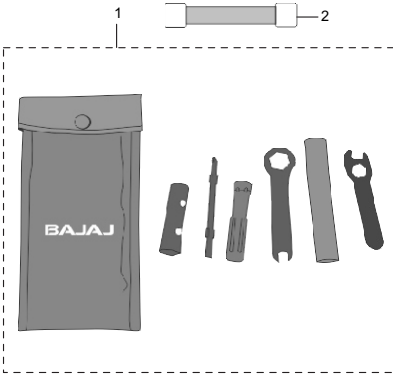
ÍNDICE DE GRÁFICOS

		
FIGURA N° 37: PEDAL FRENO	FIGURA N° 38: MANUBRIO / ESPEJOS	FIGURA N° 39: SUSPENSIÓN DELANTERA
		
FIGURA N° 40: ENFOCADOR AIRE	FIGURA N° 41: TANQUE DE GASOLINA / GRIFO GASOLINA	FIGURA N° 42: BOMBA DE GASOLINA

ÍNDICE DE GRÁFICOS

					
FIGURA N° 43: ANTIVIBRANTES CUBIERTAS TANQUE	PÁG. N°. 43	FIGURA N° 44: TORNILLOS TAPAS LATERALES - CUBIERTA SILLÍN	PÁG. N°. 44	FIGURA N° 45: VELOCÍMETRO	PÁG. N°. 45
					
FIGURA N° 46: CABLES	PÁG. N°. 46	FIGURA N° 47: GUARDACADENA / GUARDABARRO TRASERO	PÁG. N°. 47	FIGURA N° 48: TORNILLOS Y SOPORTES CUBIERTA MOTOR	PÁG. N°. 48

ÍNDICE DE GRÁFICOS

			
FIGURA N° 49: FAROLA / CARENAJE	PÁG. N°. 49 - 50	FIGURA N° 50: DIRECCIONALES	PÁG. N°. 51
			
FIGURA N° 52: EQUIPO ELÉCTRICO PARTE N° 1		FIGURA N° 53: EQUIPO ELÉCTRICO PARTE N° 2	
			
FIGURA N° 54: HERRAMIENTAS		FIGURA N° 55: HERRAMIENTAS	

16-Valve Engine

1. Valve Stem
2. Valve Spring Retainer
3. Valve Spring
4. Valve Spring Plate
5. Valve Spring Retainer
6. Valve Spring
7. Valve Spring
8. Valve Spring Retainer
9. Valve Spring Retainer
10. Valve Spring
11. Valve Spring
12. Valve Spring Retainer
13. Valve Spring
14. Valve Spring Retainer
15. Valve Spring
16. Valve Spring Retainer

pulsar
NS160FI

An exploded view diagram of a mechanical assembly, likely a suspension component. The diagram shows the following parts and their assembly sequence:

- Part 10:** A small circular pin or bushing.
- Part 6:** A long, cylindrical shaft or rod.
- Part 5:** A bracket or arm with a threaded end.
- Part 7:** A long, cylindrical shaft or rod.
- Part 4:** A bracket or arm with a threaded end.
- Part 8:** A small circular pin or bushing.
- Part 9:** A coiled spring.
- Part 1:** A small circular pin or bushing.
- Part 3:** A long, cylindrical shaft or rod.
- Part 2:** A coiled spring.

The assembly is shown in an exploded view, with the parts numbered 1 through 10. The parts are arranged in a way that shows their relative positions and how they fit together. The diagram is a technical illustration of a mechanical assembly.

pulsar
NS160FI

This diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 16. A dashed box encloses components 1, 2, and 3, indicating they form a sub-assembly. Component 1 is a central shaft or housing. Component 2 is a circular flange or end cap. Component 3 is a smaller circular flange or seal. Component 4 is a curved bracket or support. Component 5 is a small cylindrical bush or spacer. Component 6 is a large gear or impeller with multiple teeth. Component 7 is a small circular flange or seal. Component 8 is a long bolt or screw. Component 9 is a long, thin, curved metal strip or spring. Component 10 is a long, thin, curved metal strip or spring. Component 11 is a small cylindrical bush or spacer. Component 12 is a small cylindrical bush or spacer. Component 13 is a small cylindrical bush or spacer. Component 14 is a small cylindrical bush or spacer. Component 15 is a small cylindrical bush or spacer. Component 16 is a small cylindrical bush or spacer.

pulsar
NS160FI

This diagram shows the assembly of a piston and connecting rod. The main components are labeled as follows:

- 1:** Points to the piston crown and rings.
- 2:** Points to the piston rings (three rings are shown).
- 3:** Points to the piston pins (two pins are shown).
- 4:** Points to the piston pin clip (one clip is shown).
- 5:** Points to the connecting rod (one rod is shown).

pulsar
NS160FI

An exploded view diagram of a mechanical assembly, likely a pump or motor component. The diagram shows 12 numbered parts arranged in a linear sequence from left to right, indicating their assembly order. The parts are:

- 1: A large, central housing or body with a vertical shaft extending upwards.
- 2: A horizontal shaft or axle passing through the center of the housing.
- 3: A small, flat, circular disc or washer.
- 4: A small, rectangular block or spacer.
- 5: A small, circular gear or pulley.
- 6: A larger, circular gear or pulley.
- 7: A small, circular gear or pulley.
- 8: A small, circular gear or pulley.
- 9: A small, circular gear or pulley.
- 10: A small, circular gear or pulley.
- 11: A large, circular gear or pulley.
- 12: A small, circular gear or pulley.

pulsar
NS160FI

An exploded view diagram of a mechanical assembly. The components are numbered as follows:

- 1**: A large, dark grey, L-shaped bracket or housing.
- 2**: Two cylindrical rollers or bushings, one positioned at each end of the shaft assembly.
- 3**: A small, dark grey rectangular block, likely a spacer or shim.
- 4**: A large, dark grey gear with many teeth.
- 5**: A small, dark grey ring or washer.
- 6**: A long, dark grey bolt or screw.
- 7**: A small, dark grey bolt or screw.
- 8**: A dark grey, curved component, possibly a lever or a guide.

The diagram shows the relative positions of these parts as they would be assembled. A line connects the number 1 to the L-shaped bracket. The numbers 2, 3, 4, 5, and 6 are placed near their respective parts. The numbers 7 and 8 are placed near their respective parts.

pulsar
NS160FI

FIGURA N° 8: TRANSMISIÓN

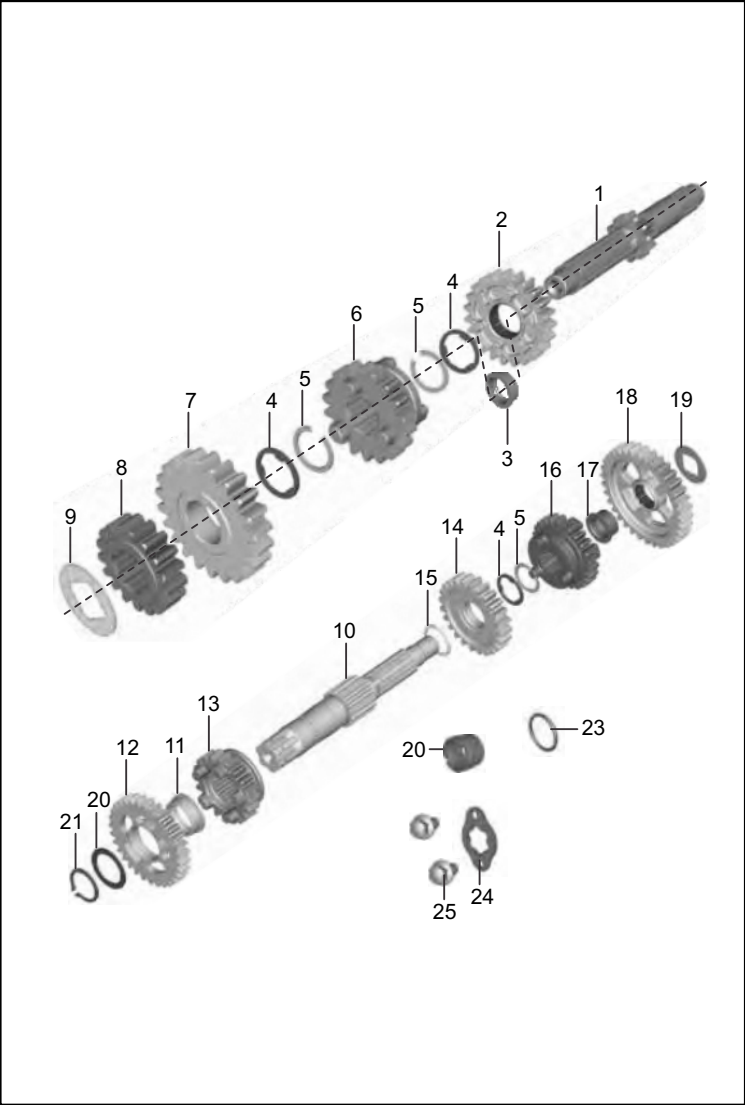


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.	OBSERVACIÓN
1	JE551001	Eje Clutch	1	
2	JE551202	Piñón de 4A. (23T)	1	
3	JH551205	Buje piñón	1	
4	JA551002	Arandela Caja	4	
5	39098717	Pin de Seguridad	5	
6	JE551201	Piñón de 3A (18T)	1	
7	JE551203	Piñón de 5A. (22T)	1	
8	JE551200	Piñón de 2A. (17T)	1	
9	JA551004	Arandela Caja	1	
10	JH551001	Eje Salida	1	
11	JH551205	Buje Piñón de 2A.	1	
12	JH551204	Piñón de 2A. (31T)	1	
13	JH551206	Piñón de 5A. (20T)	1	
14	JE551206	Piñón de 3A. (24T)	1	
15	JH551203	Arandela	1	
16	JE551216	Piñón de 4A.(25T)	1	
17	JE551212	Buje Piñón de 1a.	1	
18	JE551215	Piñón de 1A. (34T)	1	
19	JE551211	Arandela Caja	1	
20	39216611	Anillo Retenedor	2	
21	DH101235	Pin de Seguridad	1	
22	JH551002	Buje Piñón Salida	1	
23	30101061	Anillo Retenedor	1	
24	JH551202	Arandela Piñón Salida	1	
25	DS101355	Tornillo 5 mm	2	

This exploded view diagram illustrates the assembly of a mechanical component, likely a suspension or steering part. The parts are numbered 1 through 14. The main assembly consists of a long shaft (1) with a bracket (2) at one end and a ball joint (9) at the other. A coil spring (7) is attached to the bracket (2) via a spring plate (6) and a pin (4). A shock absorber (10) is connected to the ball joint (9) and a lower arm (12) via a ball joint (11). A lower control arm (13) is also connected to the lower arm (12) and the lower control arm (14). A pin (8) is used to secure the ball joint (9) to the shaft (1). A pin (3) is used to secure the shock absorber (10) to the shaft (1). A pin (5) is used to secure the spring plate (6) to the bracket (2). A pin (1) is used to secure the lower control arm (13) to the lower arm (12). A pin (14) is used to secure the lower control arm (14) to the lower arm (12).

pulsar
NS160FI

This diagram shows an exploded view of a mechanical assembly, likely a pump or engine component. The main housing is a dark grey, cast metal part. The assembly includes various internal components and fasteners, numbered 1 through 13:

- 1**: A central shaft or pin passing through the housing.
- 2**: A large, circular, red-colored component, possibly a valve or a seal.
- 3**: A small, green, cylindrical component.
- 4**: A small, blue, cylindrical component.
- 5**: A small, green, cylindrical component.
- 6**: A small, blue, cylindrical component.
- 7**: A small, green, cylindrical component.
- 8**: A long, blue, cylindrical component, possibly a pin or a screw.
- 9**: A small, yellow, cylindrical component.
- 10**: A small, blue, cylindrical component.
- 11**: A small, orange, cylindrical component.
- 12**: A small, green, cylindrical component.
- 13**: A small, blue, cylindrical component.

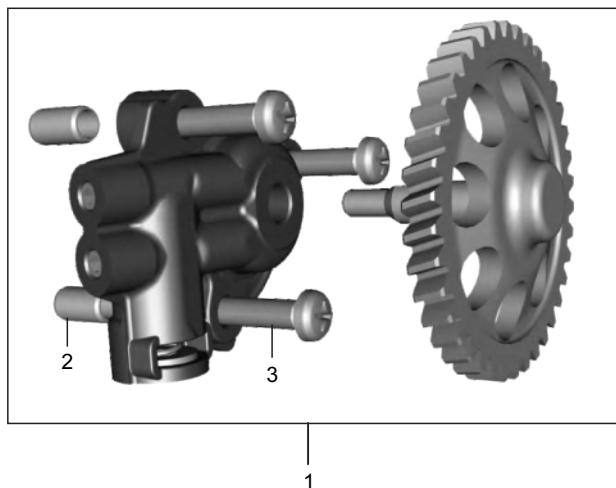
pulsar
NS160FI

This diagram shows an exploded view of a motorcycle engine crankcase, illustrating the assembly sequence for the main crankcase halves. The components are numbered as follows:

- 1:** Upper crankcase half.
- 2:** Lower crankcase half.
- 3:** Right-side main bearing cap.
- 4:** Left-side main bearing cap.
- 5:** Right-side main bearing cap gasket.
- 6:** Right-side main bearing cap gasket.
- 7:** Right-side main bearing cap gasket.
- 8:** Right-side main bearing cap gasket.
- 9:** Right-side main bearing cap gasket.
- 10:** Right-side main bearing cap gasket.
- 11:** Right-side main bearing cap gasket.
- 12:** Right-side main bearing cap gasket.
- 13:** Right-side main bearing cap gasket.
- 14:** Right-side main bearing cap gasket.
- 15:** Right-side main bearing cap gasket.
- 16:** Right-side main bearing cap gasket.
- 17:** Right-side main bearing cap gasket.
- 18:** Right-side main bearing cap gasket.
- 19:** Right-side main bearing cap gasket.

pulsar
NS160FI

FIGURA N° 13: BOMBA ACEITE

[illegible]

This diagram illustrates the exploded view of a mechanical assembly, with components numbered 1 through 15. The assembly includes a handle (12) connected to a lever arm (10). The lever arm is linked to a pivot mechanism (13) via a pin (11) and a small bush (2). A long shaft (1) is connected to a spring (9) and a bush (15). The spring (9) is connected to a lever (4) via a pin (3). The lever (4) is connected to a gear (5) via a pin (6). The gear (5) is connected to another gear (7) via a pin (6). A spring (8) is connected to the gear (7) via a pin (6). The gear (7) is connected to a lever (1) via a pin (6).

pulsar
NS160FI

FIGURA N° 15: CUBIERTA CLUTCH

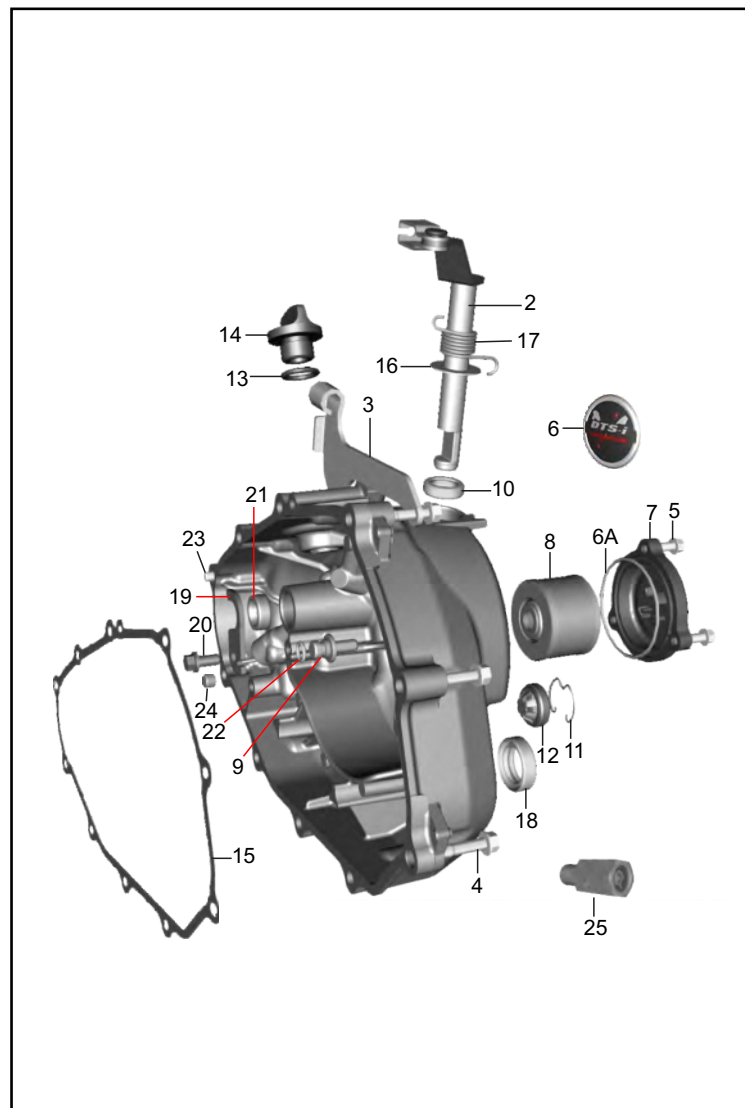


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.	OBSERVACIÓN
1	36JE0029	Cubierta Clutch	1	
2	JE541271	Leva Interna Clutch	1	
3	JE541244	Soporte Cable Clutch	1	
4	59040038	Tornillo	10	
5	39167304	Tornillo Tapa Filtro Aceite	3	
6	JE541267	Calcomanía Cubierta Clutch	1	
6A	39167121	Anillo Retenedor	1	
7	56JE1X3V	Tapa Filtro Aceite	1	
8	JE571007	Filtro Aceite	1	
9	JE551408	Empujador Clutch	1	
10	39104119	Reten Leva Interna Clutch (12-20-59)	1	
11	DS101215	Pin de Seguridad	1	
12	JL541227	Visor Nivel Aceite	1	
13	JA541225	Anillo Retenedor	1	
14	JA541211	Tapón Aceite	1	
15	JE541241	Empaque Cubierta Clutch	1	
16	39244311	Arandela	1	
17	JH541210	Resorte Leva Interna Clutch	1	
18	39104119	Reten Leva Interna Clutch (12-20-59)	1	
19	JE541249	Platina	1	
20	AA101437	Tornillo 6x12	1	
21	JE541242	Reten	1	
22	39156121	Anillo Retenedor	1	
23	39099906	Pin Guía	2	
24	BA102004	Tapón	1	
25	JE571213	Válvula de Presión	1	

This diagram illustrates the exploded view of a vehicle's rear suspension assembly. The components are labeled as follows:

- 1**: Main suspension cross-member or frame rail.
- 2**: Small bolt or pin.
- 3**: Small bolt or pin.
- 4**: Small bolt or pin.
- 5**: Small bolt or pin.
- 6**: Upper control arm or shock absorber mounting point.
- 7**: Lower control arm or shock absorber mounting point.
- 8**: Lower control arm or shock absorber mounting point.
- 9**: Small bolt or pin.
- 10**: Small bracket or plate.
- 11**: Small bracket or plate.
- 12**: Small bolt or pin.
- 13**: Small bolt or pin.

pulsar
NS160FI

This diagram shows the exploded view of a pump assembly. The components are numbered as follows:

- 1: Main pump housing
- 2: Impeller
- 3: Impeller nut
- 4: Mounting bracket
- 5: Motor (indicated by a lightning bolt symbol)
- 6: O-ring
- 7: Gasket
- 8: Cover plate
- 9: Mounting bracket (shown in a detail view)
- 10: Mounting bracket (shown in a detail view)
- 11: Mounting bracket (shown in a detail view)

pulsar
NS160FI

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 1**: A long, helical spring.
- 2**: A small cylindrical pin or bush.
- 3**: A large gear or pulley with a central hub.
- 3A**: A small circular washer or spacer.
- 4**: A smaller gear or pulley.
- 5**: A red bracket indicating a sub-assembly consisting of parts 1, 4, and 5.
- 6**: A large gear or pulley.
- 7**: A small circular component, possibly a washer or spacer.
- 8**: A small circular component, possibly a washer or spacer.
- 9**: A small circular component, possibly a washer or spacer.
- 10**: A small circular component, possibly a washer or spacer.
- 11**: A small circular component, possibly a washer or spacer.
- 12**: A small circular component, possibly a washer or spacer.
- 13**: A small circular component, possibly a washer or spacer.
- 14**: A small circular component, possibly a washer or spacer.
- 15**: A red bracket indicating a sub-assembly consisting of parts 1, 4, and 5.

pulsar
NS160FI

An exploded view diagram of a mechanical assembly, likely a pump or motor. The components are numbered 1 through 15. The assembly consists of a motor (1) with a shaft (2) connected to a gear (3). This gear (3) is part of a gear train that includes a larger gear (4) and a smaller gear (5). A shaft (7) with a pin (14) is also shown. Other components include a housing (8), a cover (9), and various fasteners and seals (10, 11, 12, 13, 15).

pulsar
NS160FI

This exploded view diagram illustrates the components of a gas burner assembly. The parts are numbered as follows:

- 1**: Main burner head with a central gas inlet and a side air inlet.
- 2**: Two screws used to secure the burner head to the mounting plate.
- 3**: A gas control valve with a solenoid coil and a gas inlet.
- 4**: A gas control valve with a solenoid coil and a gas inlet, shown in an alternative orientation.
- 5**: A flexible gas line with a protective braided sleeve.
- 6**: A gas line fitting or elbow.
- 7**: A gas line fitting or elbow.
- 8**: A gas line fitting or elbow.
- 9**: A gas line fitting or elbow.
- 10**: A gas line fitting or elbow.
- 11**: A gas line fitting or elbow.
- 12**: Two screws used to secure the mounting plate to the wall.
- 13**: A mounting plate for the gas control valve.
- 14**: A mounting plate for the burner head.
- 15**: Two screws used to secure the mounting plate to the wall.
- 16**: A mounting plate for the burner head.

pulsar
NS160FI

This diagram shows an exploded view of a motorcycle engine assembly. The components are numbered as follows:

- 1: Spark plug
- 2: Spark plug cap
- 3: Spark plug cap nut
- 4: Timing chain cover
- 5: Timing chain cover gasket
- 6: Timing chain cover bolt
- 7: Timing chain cover seal
- 8: Timing chain cover nut
- 9: Timing chain cover washer
- 10: Timing chain cover bolt
- 11: Timing chain cover nut
- 12: Timing chain cover washer
- 13: Timing chain cover seal
- 14: Timing chain cover gasket
- 15: Timing chain cover bolt

pulsar
NS160FI

This exploded view diagram illustrates the components of a car seat assembly. The parts are numbered as follows:

- 1**: The main seat backrest panel.
- 2**: Three small rectangular mounting brackets.
- 3**: A small rectangular mounting bracket.
- 4**: A circular mounting plate.
- 5**: Two sets of spacers, each consisting of a washer and a nut.
- 6**: Two long screws.
- 7**: The seat base or footrest panel.
- 8**: A circular mounting plate.
- 9**: A complex mounting bracket with multiple holes.
- 10**: A long, flexible braided cable or hose.
- 11**: A long screw.

pulsar
NS160FI

An exploded view diagram of a mechanical assembly, likely a vehicle suspension component. The diagram shows 18 numbered parts: 1. A coil spring with a central nut. 2. A T-shaped bolt. 3. A large, curved metal bracket or arm. 4. A small pin or clip. 5. A small cylindrical bush or spacer. 6. A small pin or clip. 7. A small pin or clip. 8. A small rectangular plate or shim. 9. A small rectangular plate or shim. 10. A small cylindrical bush or spacer. 11. A small pin or clip. 12. A small pin or clip. 13. A small pin or clip. 14. A long, thin metal rod or shaft. 15. A small pin or clip. 16. A small rectangular plate or shim. 17. A small rectangular plate or shim. 18. A small rectangular plate or shim. The parts are arranged to show their relative positions and how they fit together.

pulsar
NS160FI

FIGURA N° 28: REPOSAPIÉ CONDUCTOR - PASAJERO

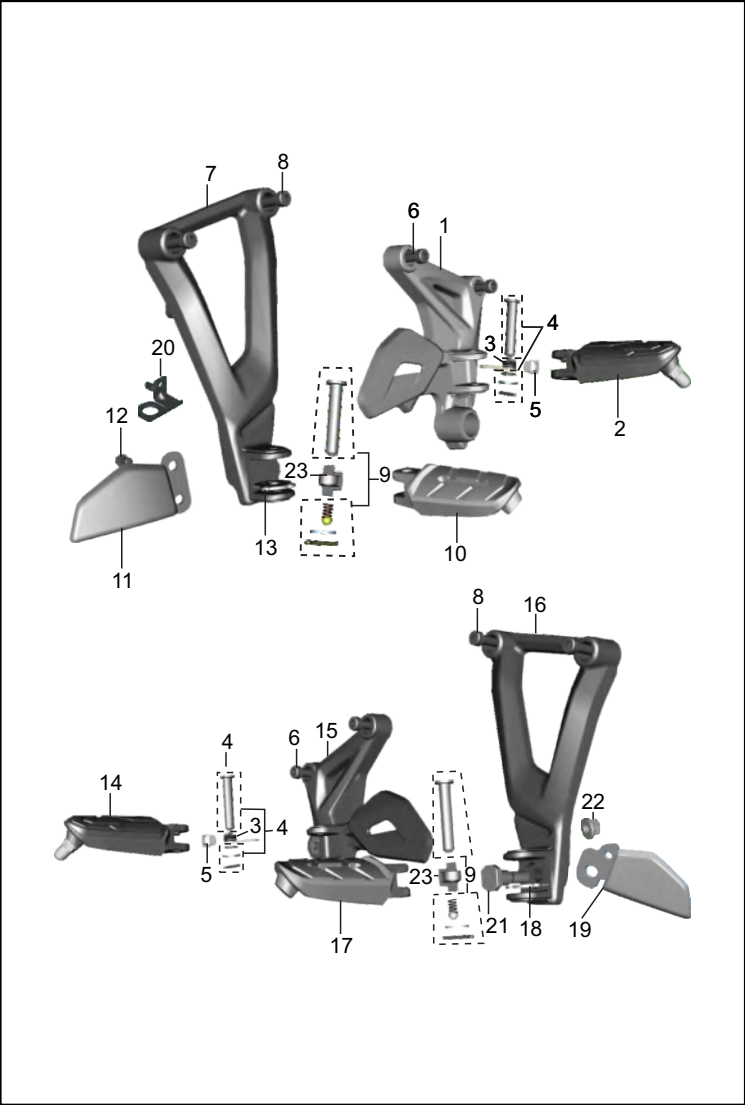


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.	OBSERVACIÓN
1	56JL3Y1Y	Soporte Reposapie Conductor Der.	1	
2	52JL1035	Reposapie Conductor Derecho	1	
3	JL113012	Resorte	1	
4	36JL0041	Kit Pines Reposapie Conductor	2	
5	JF113007	Antivibrante Reposapie Conductor Der.	2	
6	KACA0820	Tornillo 8x20	4	
7	56JL4K1Y	Soporte Reposapie Pasajero Der.	1	
8	39272204	Tornillo M8	4	
9	36JL0015	Kit Pines Reposapie Pasajero	2	
10	56JF191Y	Reposapie Pasajero Derecho	1	
11	56JL4M1Y	Soporte Derecho	1	
12	KADF0610	Tornillo	4	
13	DT113015	Platina de Seguridad Der.	1	
14	52JL1024	Reposapie Conductor Izq.	1	
15	56JL3X1Y	Soporte Reposapie Conductor Izq.	1	
16	56JL4J1Y	Soporte Reposapie Pasajero Izq.	1	
17	56JF181Y	Reposapie Pasajero Izquierdo	1	
18	DT113014	Platina de Seguridad Izq.	1	
19	56JL4L1Y	Soporte Izquierdo	1	
20	JL113033	Platina Soporte Swiche Stop	1	
21	JL113038	Tornillo	1	
22	39122515	Tuerca	1	
23	JZ113061	Antivibrante Reposapie	2	

This exploded view diagram illustrates the assembly of a motorcycle rear fender. The components are labeled with numbers 1 through 17:

- 1**: The main rear fender body.
- 2**: A bracket or support arm.
- 3**: A small pin or fastener.
- 4**: A small bracket or support arm.
- 5**: A small pin or fastener.
- 6**: A small pin or fastener.
- 7**: A small pin or fastener.
- 8**: A small pin or fastener.
- 10**: A small pin or fastener.
- 11**: A small pin or fastener.
- 12**: A small pin or fastener.
- 13**: A bracket or support arm.
- 13A**: A small pin or fastener.
- 14**: A bracket or support arm.
- 15**: A bracket or support arm.
- 16**: A small pin or fastener.
- 17**: A small pin or fastener.

pulsar
NS160FI

This exploded view diagram illustrates the components of a bicycle seatpost assembly. The parts are numbered as follows:

- 1**: Main seatpost tube.
- 2**: Seatpost clamp/bush.
- 3**: Seatpost clamp/bush.
- 4**: Seatpost clamp/bush.
- 5**: Seatpost clamp/bush.
- 6**: Seatpost clamp/bush.
- 7**: Seatpost clamp/bush.
- 8**: Seatpost clamp/bush.
- 9**: Seatpost clamp/bush.
- 10**: Seatpost clamp/bush.
- 11**: Seatpost clamp/bush.
- 12**: Seatpost clamp/bush.
- 13**: Seatpost clamp/bush.
- 14**: Seatpost clamp/bush.
- 15**: Seatpost clamp/bush.
- 16**: Seatpost clamp/bush.
- 17**: Seatpost clamp/bush.
- 18**: Seatpost clamp/bush.
- 19**: Seatpost clamp/bush.

pulsar
NS160FI

This diagram illustrates the assembly of a wheel. It shows two wheels, labeled 3 and 4, which have a multi-spoke design. Two separate tire components, labeled 1 and 5, are shown above and below the wheels respectively. Two small, conical fasteners, labeled 2, are positioned between the wheels and the tires, indicating their placement for assembly.

pulsar
NS160EL

This diagram illustrates the exploded view of a motorcycle rear wheel assembly. The components are numbered as follows:

- 1: Rear axle
- 2: Axle nut
- 3: Axle spacer
- 4: Axle lock washer
- 5: Hub nut
- 6: Hub nut lock washer
- 7: Rear wheel rim
- 8: Hub nut
- 9: Rear brake disc
- 10: Brake disc lock pin
- 11: Brake disc lock pin
- 12: Brake disc lock pin

pulsar
NS160FI

This exploded view diagram illustrates the components of a rear wheel cylinder assembly. The parts are numbered as follows:

- 1**: Upper mounting bracket
- 2**: Pin
- 3**: Pin
- 4**: Pin
- 5**: Pin
- 6**: Upper seal
- 7**: Lower seal
- 8**: Wheel cylinder body
- 9**: Piston
- 10**: O-ring
- 11**: Plug
- 12**: Flexible hose
- 13**: Pin
- 14**: Piston rod
- 14A**: Piston rod (detail view)
- 15**: Piston rod assembly

The diagram shows the assembly sequence from the mounting bracket (1) and seals (6, 7) down to the wheel cylinder body (8) and the flexible hose (12). The piston rod assembly (15) is shown separately, with a detailed view of the piston rod (14A).

pulsar
NS160FI

Diagram illustrating the components of a brake caliper assembly, numbered 1 through 8:

- 1: Main Caliper Body
- 2: Piston Pin
- 3: Piston Pin Nut
- 4: Piston Pin Washer
- 5: Caliper Bracket
- 6: Piston Seal
- 7: Dust Seal
- 8: Bleeder Cap

Additional components shown in the diagram include:

- PROTECTION BOOT
- INSULATOR
- CALIPER PISTON
- BLEEDER SCREW
- PAD SPRING

[illegible]

1

2

3

4

5

6

7

8

9

10

pulsar
NS160FI

FIGURA N° 36: RUEDA TRASERA

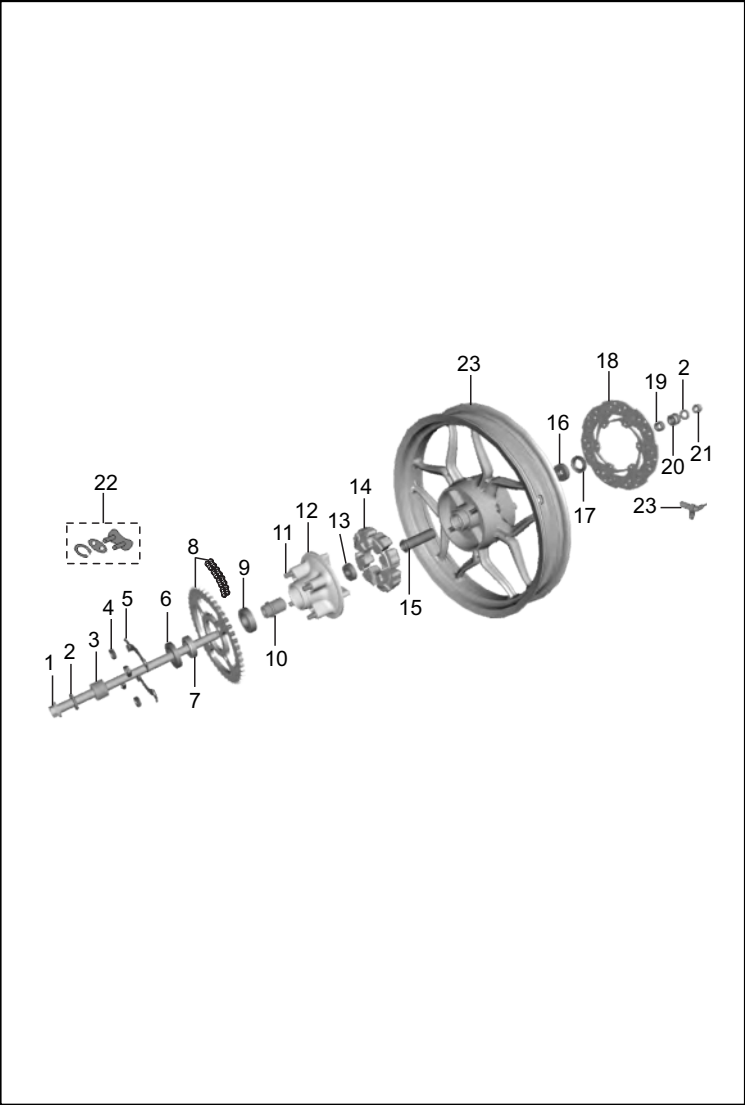


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.	OBSERVACIÓN
1	JF131236	Eje Rueda Trasera	1	
2	LDB00029	Arandela	2	
3	DK151014	Buje Eje Rueda Trasera	1	
4	LCB00005	Tuerca 10 mm.	4	
5	PF131220	Arandela Sprocket	2	
6	DK151012	Reten Eje Rueda Trasera	1	
7	DS151057	Protector Buje Porta Sprocket	1	
8	36JF0167	Kit Sprocket y Cadena	1	
9	DK151013	Rodamiento Bolas	1	
10	DK151015	Buje Porta Sprocket	1	
11	DS151073	Tornillo Sprocket	4	
12	JC151016	Porta Sprocket	1	
13	39224120	Rodamiento Bolas	1	
14	JG131219	Caucho Campana	1	
15	DK151022	Buje Rueda Trasera	1	
16	39224220	Rodamiento Bolas	1	
17	30151082	Reten Rueda Trasera	1	
18	JL131930	Disco Freno Trasero	1	
19	DK151082	Buje	1	
20	DK151081	Buje	1	
21	LCJ00002	Tuerca	1	
22	JD141003	Empate Cadena	1	
23	JF131233	Rin Trasero 2.50X17	1	

An exploded view diagram of a mechanical assembly. The components are numbered as follows:

- 1**: A large, L-shaped metal bracket or frame.
- 2**: A cylindrical metal component, likely a roller or pulley, positioned at the end of the horizontal arm of part 1.
- 3**: A small, light-colored cylindrical pin or bush, located near the junction of the vertical and horizontal arms of part 1.
- 4**: A black, curved component, possibly a handle or a guide, positioned below the vertical arm of part 1.
- 5**: A small metal ring or clip, located to the left of part 4.
- 6**: A vertical assembly consisting of a small motor or actuator at the top and a cylindrical component below it.
- 8**: A small black component, possibly a switch or a connector, located between parts 6 and 9.
- 9**: A thin, curved metal strip or spring, positioned below part 8 and above part 4.
- 10**: A small green O-ring or seal, located to the left of part 4.
- 11**: A small, dark, circular component, possibly a cap or a plug, located below part 4.
- 12**: A small metal ring or clip, located to the right of part 11.

pulsar
NS160FI

FIGURA N° 38: MANUBRIO / ESPEJOS

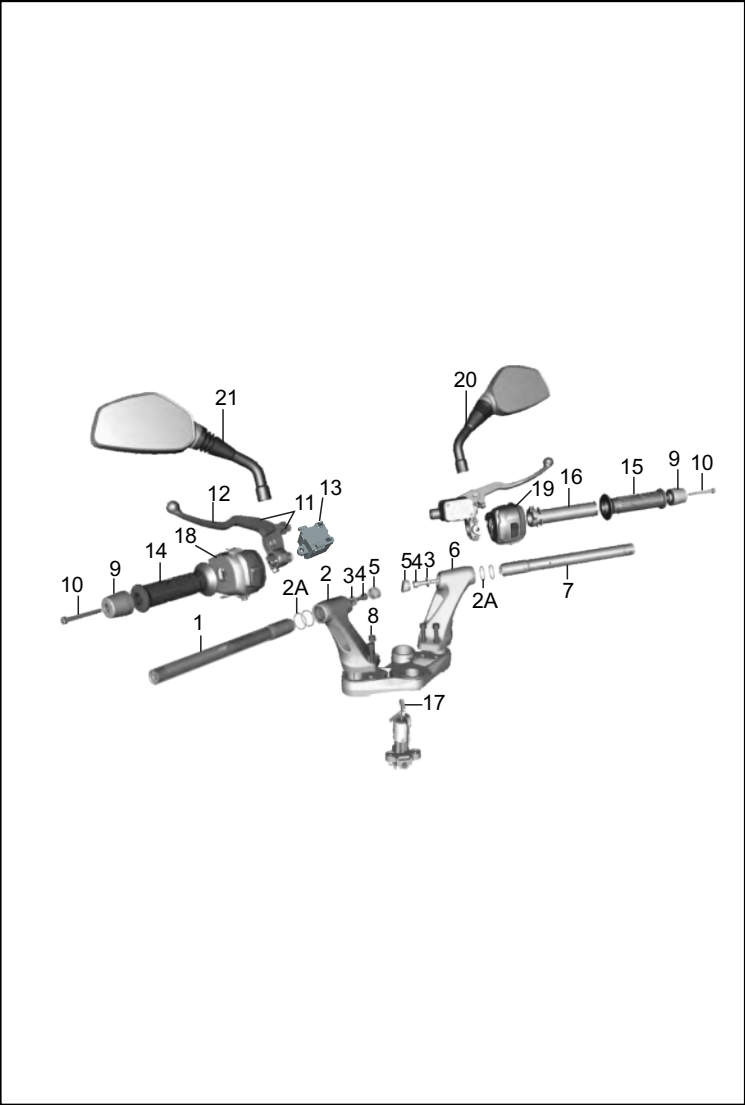


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.	OBSERVACIÓN
1	JL151021	Tubo Manubrio Izquierdo	1	
2	JF151025	Soporte Tubo Manubrio Izquierdo	1	
2A	JL151038	Anillo Retenedor	4	
3	39154011	Arandela	2	
4	LAC00020	Tornillo 8x55	2	
5	JL151028	Tapón Soporte Tubo Manubrio	2	
6	JF151027	Soporte Tubo Manubrio Derecho	1	
7	JL151034	Tubo Manubrio Derecho	1	
8	DG181008	Tornillo	4	
9	JL151035	Buje Manubrio	2	
10	39242704	Tornillo M6	2	
11	JF161008	Soporte y Leva Clutch	1	
12	JG161008	Leva Clutch	1	
13	JY401404	Swiche Clutch	1	
14	JL161003	Caucho Manillar Izquierdo	1	
15	JL161008	Caucho Manillar Derecho	1	
16	JG151022	Tubo Int. Manillar Acelerador	1	
17	JF232606	Swiche de Encendido (3 En 1)	1	
18	JL401400	Comando Luces Izquierdo	1	
19	JL401405	Comando Luces Derecho	1	
20	JL231601	Espejo Retrovisor Derecho	1	
21	JL231600	Espejo Retrovisor Izquierdo	1	

FIGURA N° 39: SUSPENSIÓN DELANTERA

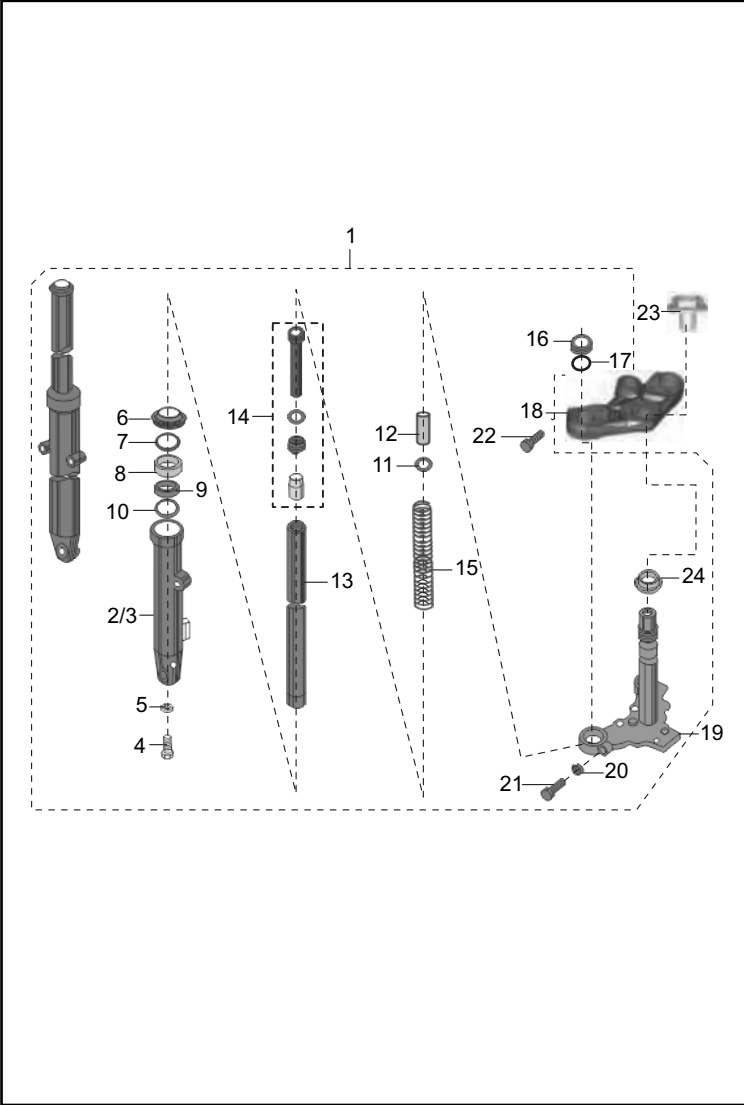


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.	OBSERVACIÓN
1	JF151018	Suspensión Delantera	1	
2	JF151031	Camisa Tubo Telescópico Izq.	1	
3	JF151032	Camisa Tubo Telescópico Der.	1	
4	30181025	Tornillo Camisa Telescópico	2	
5	30181026	Arandela de Sellado	2	
6	36DK0020	Kit Montaje Tubo Telescópico	2	
7	DJ181088	Pin Seguridad	2	
8	DJ181087	Reten Tubo Telescópico	2	
9	DS181070	Buje Guía Tubo Telescópico	2	
10	DS181072	Arandela	2	
11	DM181010	Arandela	2	
12	JF151036	Buje Tubo Telescópico	2	
13	JF151033	Tubo Telescópico	2	
14	36JF0031	Cilindro Interno Tubo Telescópico	2	
15	JF151034	Resorte Tubo Telescópico	2	
16	DH181015	Tornillo Tubo Telescópico	2	
17	30181029	Anillo Retenedor	2	
18	JF151019	Cabeza Espiga	1	
19	JF121004	Espiga Central	1	
20	DK181025	Arandela	2	
21	DK181028	Tornillo 8x35	2	
22	DG181008	Tornillo	2	
23	JY151011	Tornillo Espiga	1	
24	DG181005	Cuna Dirección	1	

This diagram shows an exploded view of a motorcycle headlight assembly. The components are numbered as follows:

- 1: Main headlight housing
- 2: Headlight lens
- 3: Lower mounting bracket
- 4: Upper mounting bracket
- 5: Upper mounting plate
- 6: Lower mounting plate
- 7: Lower mounting bracket
- 8: Side mounting bracket
- 9: Headlight housing cover
- 10: Headlight housing cover

pulsar
NS160FI

This exploded view diagram illustrates the assembly of a fuel tank. The main components are labeled as follows:

- 1**: Fuel tank body
- 2**: Fuel filler neck
- 3**: Fuel filler neck cap
- 4**: Fuel filler neck gasket
- 5**: Fuel filler neck bracket
- 6**: Fuel filler neck cap
- 7**: Fuel filler neck cap
- 8**: Fuel filler neck cap
- 9**: Fuel filler neck cap
- 10**: Fuel filler neck cap
- 11**: Fuel filler neck cap
- 12**: Fuel filler neck cap
- 13**: Fuel filler neck cap
- 14**: Fuel filler neck cap
- 15**: Fuel filler neck cap

pulsar
NS160FI

Diagram illustrating the components of the pump assembly:

- 1: Main pump unit with a float arm and float valve.
- 2: Gasket or mounting plate.
- 3: Mounting screws/bolts.
- 4: Hose connector/fitting.
- 5: Flexible hose.
- 6: Solenoid valve or control valve.
- 7: Electrical control cable with a connector.

pulsar
NS160FI

FIGURA N° 43: ANTIVIBRANTES CUBIERTAS TANQUE

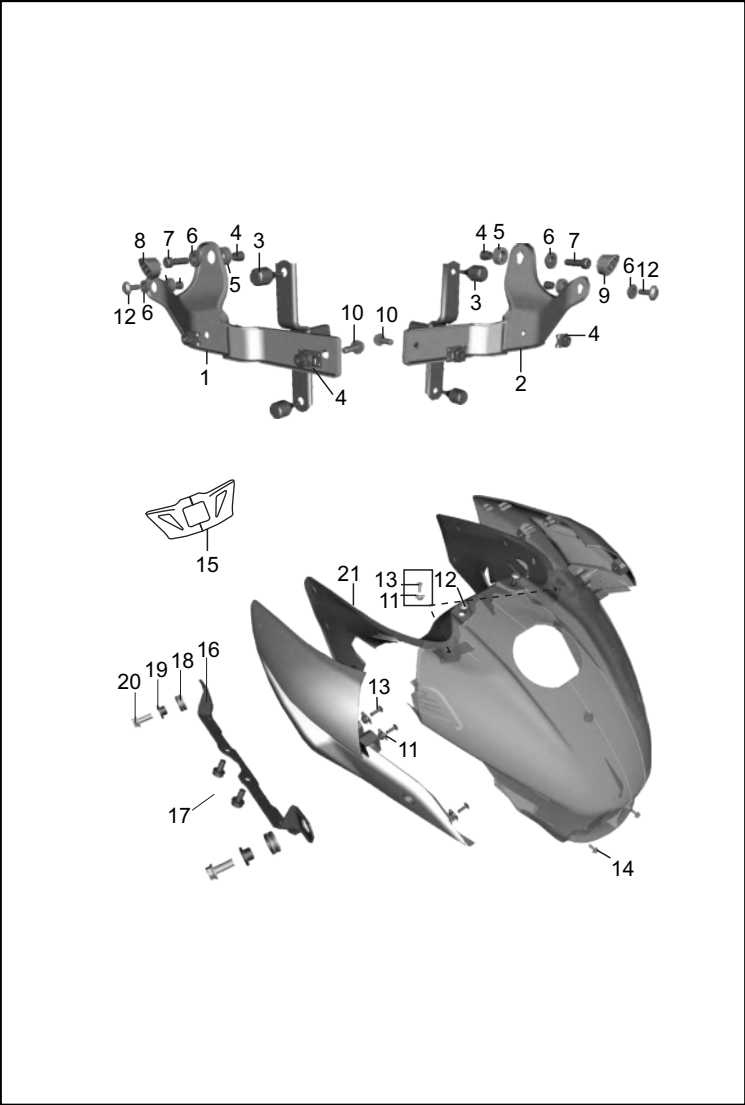


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.	OBSERVACIÓN
1	JF171004	Soporte Enfocador Derecho	1	
2	JF171009	Soporte Enfocador Izquierdo	1	
3	JL171057	Antivibrante	4	
4	JL171071	Buje Cubierta Tanque	8	
5	JL171024	Antivibrante	2	
6	JL171070	Antivibrante Cubierta Tanque	8	
7	LAC00063	Tornillo M6	2	
8	JL171062	Rejilla Derecha	1	
9	JL171061	Rejilla Izquierda	1	
10	KADB0516	Tornillo	2	
11	DJ161229	Tuerca M6	16	
12	LAC00022	Tornillo	4	
13	KBUB0516	Tornillo	8	
14	KADA0512	Tornillo M5	2	
15	JL171078	Protector Tanque Gasolina	1	
16	JF113809	Platina Soporte	1	
17	KADA0614	Tornillo M6x12	2	
18	JL171024	Antivibrante	2	
19	JL171040	Buje 6x10	2	
20	39074501	Tornillo M6x1	2	
21	JF171001	Cubierta Central Tanque Gas.	1	

This diagram shows an exploded view of a bicycle front fork assembly. The components are labeled with numbers 1 through 7:

- 1**: The main upper fork crown and steerer tube assembly.
- 2**: A small cylindrical spacer or bush.
- 3**: A small cylindrical spacer or bush.
- 4**: The lower fork leg and dropouts.
- 5**: A small cylindrical spacer or bush.
- 6**: A small cylindrical spacer or bush.
- 7**: A small cylindrical spacer or bush.

pulsar
NS160FI

This exploded view diagram illustrates the assembly of a motorcycle front fender. The components are numbered as follows:

- 1**: The main front fender shell.
- 2** and **3**: Screws for mounting the fender to the front fork area.
- 4** and **5**: Screws for mounting the fender to the front fairing or headlight assembly.
- 6**: The rear fender or tail section.
- 7**: The rear fender mounting bracket.
- 8**: A side support plate or bracket.
- 9**: The rear fender mounting bracket (internal view).
- 10**: A side support plate or bracket (internal view).
- 11**: A screw for mounting the rear fender to the rear subframe.
- 12** and **13**: Screws for mounting the rear fender to the rear subframe.

pulsar
NS160FI

FIGURA N° 49: FAROLA / CARENAJE (1/2)

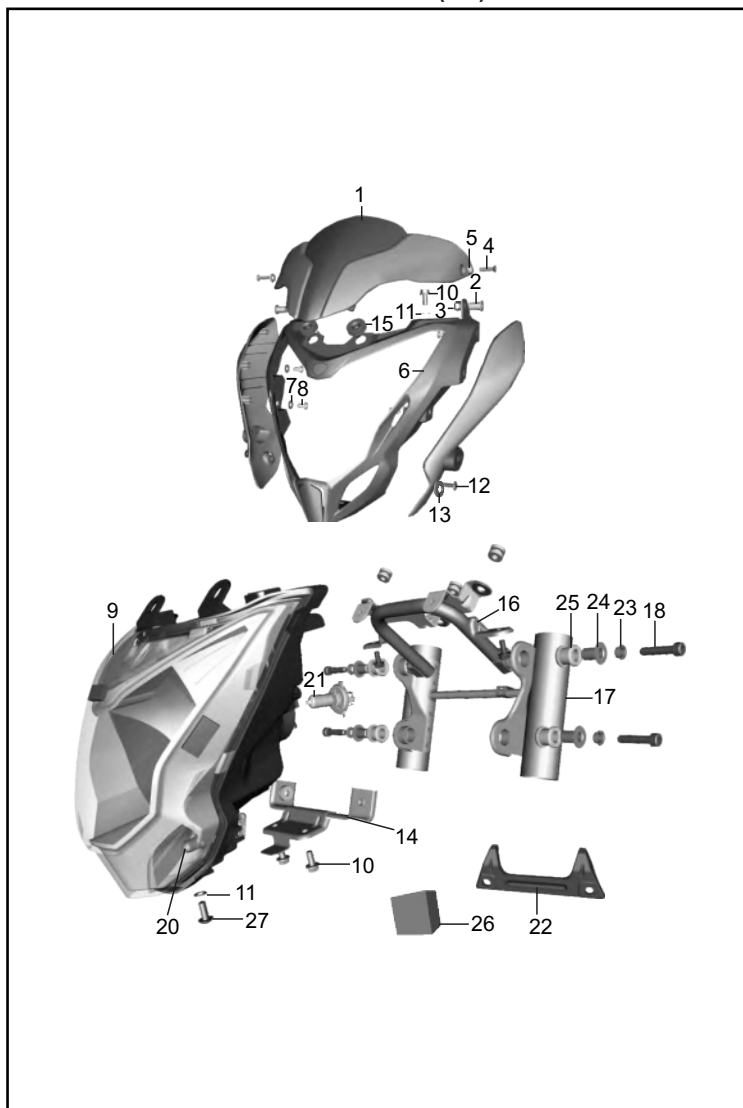


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT.	OBSERVACIÓN
1	JL181008	Visor Carenade	1	
2	JG181236	Tuerca 5x16	2	
3	JG181235	Arandela	2	
4	LBS00002	Tornillo	2	
5	JL181247	Antivibrante	2	
6	JL181203	Carenaje Farola	1	
7	KDBA0512	Arandela	6	
8	LBR00002	Tornillo	6	
9	JF401017	Farola	1	
10	KADE0614	Tornillo	2	
11	KDAA0611	Arandela	3	
12	KBUA0516	Tornillo 5x16	2	
13	39214124	Arandela	2	
14	JL181236	Soporte Inferior	1	
15	JL181249	Antivibrante Farola	2	
16	JL181237	Soporte Superior	1	
17	JF181210	Soporte Farola	1	
18	KACH0835	Tornillo 8x35	4	
19	36JL0017	Kit Tornillos Visor Carenade	1	No Ilustrado
20	DH191037	Bombillo Piloto 12V 3W	2	
21	CL201023	Bombillo Farola 12V 35/35W	1	
22	JL181283	Platina Plástica Farola	1	
23	JL181257	Buje Carenade	4	
24	PA181293	Buje Carenade	4	
25	PA181292	Antivibrante	4	

This exploded view diagram illustrates the assembly of a motorcycle engine and chassis. The components are numbered as follows:

- 1**: Engine block with cooling fins.
- 2**: Main frame (crankcase).
- 3**: Spark plug.
- 4**: Spark plug cap.
- 5**: Small bolt/screw.
- 6**: Lower frame link.
- 7**: Link pin/bush.
- 8**: Small roller/bush.
- 9**: Small pin/bush.
- 10**: Rear fender.
- 11**: Rear plate/cover.
- 12**: Bolt/screw for rear plate.
- 13**: Arrow pointing to the lower frame link (6).
- 14**: Exhaust pipe.
- 15**: Bolt/screw for engine mounting.
- 16**: Bolt/screw for engine mounting.

pulsar
NS160FI

This exploded view diagram illustrates the assembly of a vehicle chassis. The components are labeled with numbers 1 through 18:

- 1**: A long, curved structural member, likely a rear axle or suspension arm, featuring multiple mounting points and electrical connectors.
- 2**: A small, rectangular electronic control module.
- 3** and **3A**: Two long, thin, horizontal structural bars or rails.
- 4**: A large, complex cast metal housing or frame component.
- 5** and **9**: Two small, L-shaped mounting brackets.
- 6**: A small cylindrical pin or bolt.
- 7**: A rectangular component, possibly a battery or a control unit, with a textured surface.
- 10**: A small, rectangular base plate or support.
- 11**: A vertical mounting bracket or support.
- 12**: A large, rectangular metal plate or bracket.
- 13**: A vertical mounting bracket or support.
- 14**: A small, rectangular mounting bracket.
- 15**: A small, rectangular mounting bracket.
- 16**: A small, rectangular mounting bracket.
- 17**: A complex, curved metal bracket or support.
- 18**: A small, rectangular mounting bracket.

pulsar
NS160FI

53

This exploded view diagram illustrates the components for a vehicle's battery and electrical system. The parts are numbered as follows:

- 1**: A black rectangular battery terminal block.
- 2**: A black rectangular battery terminal block.
- 3**: A battery terminal block with a white plastic cover.
- 4**: A battery terminal block with a white plastic cover.
- 5**: A battery terminal block with a white plastic cover.
- 6**: A long, thin, curved metal wire with a terminal at each end.
- 7**: A circular metal component, likely a battery terminal or a part of a battery box, with a label that reads "BATTERY".
- 8**: A small metal pin or screw.
- 9**: A small metal pin or screw.
- 10**: A long, thin, curved metal wire with a terminal at each end.
- 11**: A large, rectangular battery box with a black top and a grey bottom.
- 12**: A green metal bracket or support for the battery.

pulsar
NS160FI

Diagram illustrating the components of the BAJAJ tool kit:

- 1: A grey carrying bag with the BAJAJ logo.
- 2: A grey strap with white end caps.

The kit also includes the following tools (shown inside the dashed box):

- A small black screwdriver.
- A long, thin metal rod.
- A black adjustable wrench.
- A grey adjustable wrench.
- A black adjustable wrench.

pulsar
NS160EL

55

This diagram illustrates the exploded view of a bicycle seat assembly. The components are numbered as follows:

- 1**: The main seat rail, shown in two segments.
- 2**: The rear section of the seat rail.
- 3**: The front seat rail bracket.
- 4**: The rear seat rail bracket.
- 5**: Two screws for mounting the rear bracket.
- 6**: A small bush or spacer.
- 7**: A screw for mounting the front bracket.
- 8**: A screw for mounting the rear bracket.
- 9**: A small bush or spacer.
- 10**: A small bush or spacer.
- 11**: A central connecting pin or bolt.
- 12**: A small bush or spacer.
- 13**: A small bush or spacer.

pulsar
NS160FI

This diagram illustrates the assembly of a car's front end components, numbered 1 through 13. The components are arranged in a hierarchical, exploded view:

- 1**: A large, curved fender or bumper component.
- 2** and **3**: Two side fender or bumper components.
- 4**: A large, curved bumper or fender component.
- 5** and **6**: Two side fender or bumper components.
- 7** and **8**: Two side fender or bumper components.
- 9**: A central fender or bumper component.
- 10** and **11**: Two side fender or bumper components.
- 12** and **13**: Two side fender or bumper components.

pulsar
NS160FI

FIGURA N° 57: CALCOMANÍAS (1/2)

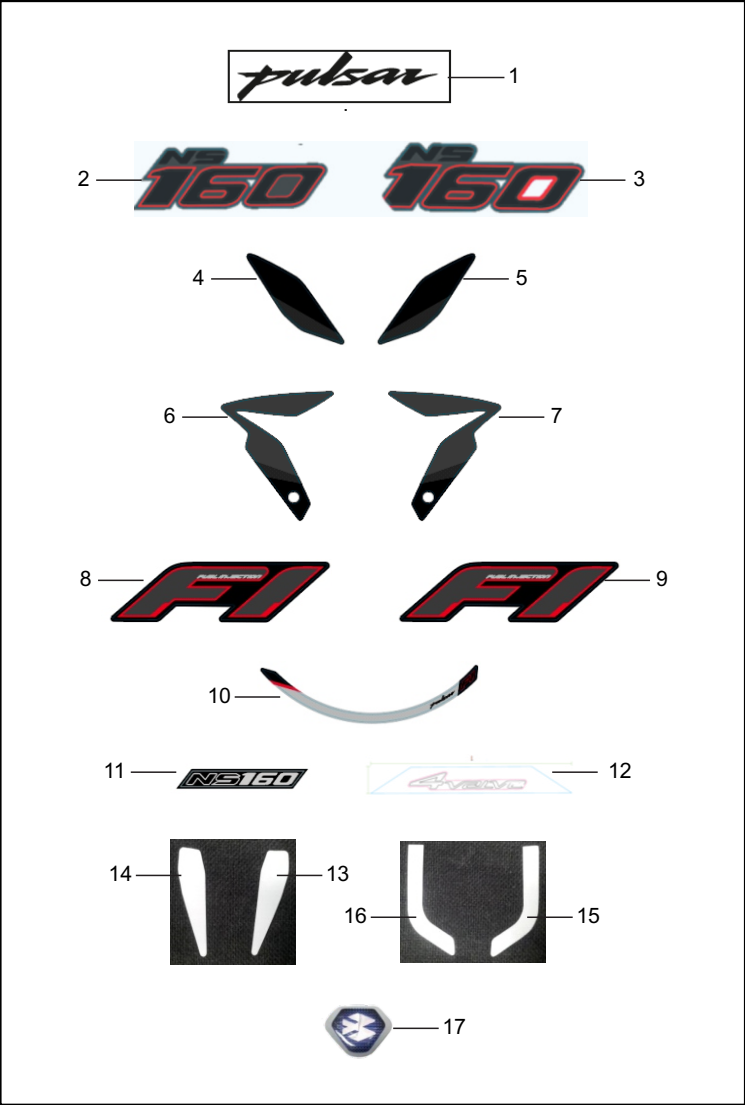


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT.	OBSERVACIÓN
1	JL233316	Emblema "PULSAR" Izq. y Der.	2	
2	20012930	Calcomanía Cub. Tanque "NS160" Der.	1	Moto Negra - Moto Roja
	20012944	" " "	1	Verde Neon
3	20012924	Calcomanía Cub. Tanque "NS160" Izq.	1	Moto Negra - Moto Roja
	20012939	" " "	1	Verde Neon
4	20012929	Calcomanía Enfocador Derecha	1	Moto Negra
	20012936	" " "	1	Moto Roja
	20012943	" " "	1	Verde Neon
5	20012923	Calcomanía Enfocador Izquierdo	1	Moto Negra
	20012933	" " "	1	Moto Roja
	20012938	" " "	1	Verde Neon
6	20012928	Calcomanía Guardabarro Delantero Der.	1	Moto Negra
	20012935	" " "	1	Moto Roja
	20012942	" " "	1	Verde Neon
7	20012922	Calcomanía Guardabarro Delantero Izq.	1	Moto Negra
	20012932	" " "	1	Moto Roja
	20012937	" " "	1	Verde Neon
8	20012931	Calcomanía Inf. Der. Cubierta Sillín	1	Moto Negra - Moto Roja
	20012945	" " "	1	Verde Neon
9	20012926	Calcomanía Inf. Izq. Cubierta Sillín	1	Moto Negra - Moto Roja
	20012940	" " "	1	Verde Neon
10	20012927	Calcomanía Rin Del. - Tras.	8	Moto Negra
	20012934	" " "	8	Moto Roja
	20012941	" " "	8	Verde Neon

pulsar
NS160FI

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
1	36DK0020	Kit Montaje Tubo Telescópico	NA	Guardapolvo	2
			NA	Arandela	2
			DJ181088	Pin de Seguridad	2
			DS181070	Buje Guía Tubo Telescópico	2
2	36JF0006	Kit Sprocket y Cadena	JF141000	Cadena Tipo O-Ring 134L	1
			NA	Sprocket Trasero 45T	1
			JV551000	Piñon Delantero 15T	1
3	36JF0007	Kit Moñón Crank	NA	Moñón Crank	1
			NA	Resorte Leva Crank	1
			30101236	Balín	1
			22150241	Arandela	1
			NA	Pasador Moñón Crank	1
			39085517	Arandela Crank	1
4	36JF0025	Kit Resorte y Arandela Válvula	JD511203	Arandela Resorte Válvula	2
			39201719	Reten Válvula	2
			JE511216	Resorte Válvula	2
			JD511205	Arandela Resorte Válvula	2
			DG101029	Cuña Válvula	4

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.
01100905	11	10	20012944	2	58	36JF0044	14	33	39105315	15	27	39224120	13	36
110/80-17-NR48-TL	5	31	20012945	8	58	36JF0045	14A	33	39106204	8	56	39224220	16	36
120/80-17-MR136-TL	5	31	22150241	14	14	36JF0117	1	5	39122515	22	28	39231204	11	23
120/80-17MR561-TLM	5	31	30101061	23	8	36JF0130	2	11	39122515	11	37	39240817	8	14
120/80-17-NR57-TL	5	31	30101195	3	17	36JF0167	8	36	39128321	7	2	39242001	11	29
14151033	14	18	30151033	3	32	36JG0011	3	26	39150711	8	54	39242704	10	38
20000669	12	59	30151082	17	36	36JL0015	9	28	39153721	12	37	39244311	16	15
20012920	1	24	30181025	4	39	36JL0017	19	49	39154011	3	38	39248415	13	52
20012921	7	24	30181026	5	39	36JL0041	4	28	39155304	9	18	39256220	11	11
20012922	7	58	30181029	17	39	36JZ0121	5	18	39156121	22	15	39256220	4	12
20012923	5	58	30191048	3	53	36JZ0132	6	19	39166005	2	2	39260801	10	2
20012924	3	58	30201064	3A	53	39024011	12	18	39167121	6A	15	39266921	12	4
20012925	11	59	31101173	3	6	39032615	12	29	39167204	5	16	39272204	8	28
20012926	9	58	31201081	7	12	39042215	11	30	39167304	13	4	39272315	7	25
20012927	10	58	36DH4174	2	35	39045411	11	27	39167304	5	15	52JA0029	6	11
20012928	6	58	36DH4175	3	35	39059417	4	4	39167304	2	19	52JE0074	1	1
20012929	4	58	36DH4176	5	35	39071111	5	40	39168904	5	30	52JE0299	1	17
20012930	2	58	36DH4177	4	35	39072211	7	44	39182812	12	47	52JF0021	1	10
20012931	8	58	36DH4178	6	35	39073817	3	14	39190701	15	52	52JF0089	10	10
20012932	7	58	36DH4179	7	35	39074501	20	43	39194304	8	29	52JF0418	11	40
20012933	5	58	36DH4180	8	35	39078111	11	32	39194304	5	44	52JF0418	12	57
20012934	10	58	36DK0020	6	39	39098717	5	8	39195604	3	25	52JF0426	12	40
20012935	6	58	36JE0029	1	15	39099206	7	9	39195604	9	54	52JF0426	13	57
20012936	4	58	36JF0005	10	4	39099311	6	14	39201719	1	3	52JL0072	17	30
20012937	7	58	36JF0007	11	14	39099906	9	11	39214124	13	49	52JL1024	14	28
20012938	5	58	36JF0015	7	34	39099906	11	12	39216611	20	8	52JL1035	2	28
20012939	3	58	36JF0016	6	34	39099906	2	13	39218919	3	12	56JE1X3V	7	15
20012940	9	58	36JF0017	8	34	39099906	23	15	39219019	6	12	56JF181Y	17	28
20012941	10	58	36JF0025	9	3	39100006	3	5	39220011	7	6	56JF191Y	10	28
20012942	6	58	36JF0031	14	39	39104119	10	15	39220011	11	18	56JL023G	2	52
20012943	4	58	36JF0042	2	5	39104119	18	15	39220804	10	19	56JL3X1Y	15	28

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.
56JL3Y1Y	1	28	DE191029	6	33	DH191062	4	33	DK151069	11	33	DT171839	2	42
56JL4J1Y	16	28	DE191033	15	33	DH201079	2	32	DK151081	20	36	DT181022	5	54
56JL4K1Y	7	28	DF161102	12	30	DH201079	3	46	DK151082	19	36	DT181316	9	53
56JL4L1Y	19	28	DG101029	8	3	DH201080	3A	46	DK181025	20	39	DT181317	10	53
56JL4M1Y	11	28	DG101339	2	37	DJ101064	7	23	DK181028	21	39	DT402223	6	54
59040038	4	15	DG121002	11	22	DJ151069	2	34	DK211007	3	24	DT551408	15	18
59040038	4	17	DG161124	2	30	DJ151070	3	34	DK221024	2	55	DT581028	5	22
59040050	14	2	DG171016	4	27	DJ161069	3	29	DM181010	11	39	DT581062	3	22
59150003	12	32	DG171018	5	27	DJ161228	9	17	DP161145	11	52	FD101078	3	13
59150014	10	6	DG171019	6	27	DJ161229	3	40	DS101117	4	14	FD211006	4	24
59200036	3	11	DG181005	24	39	DJ161229	11	43	DS101154	3	7	GL621414	5	19
59200036	2	12	DG181008	8	38	DJ161229	16	52	DS101215	11	15	JA541005	5	12
59210023	16	12	DG181008	22	39	DJ181087	8	39	DS101355	25	8	JA541005	6	17
90/80-17-NR77UZ-TL	1	31	DH101048	7	4	DJ181088	7	39	DS121126	10	22	JA541010	8	7
90/90-17-MR-109-T	1	31	DH101048	9	6	DJ191029	2	33	DS141012	6	26	JA541010	5	11
AA101437	20	15	DH101048	5	7	DJ191030	3	33	DS141012	9	40	JA541012	7	11
AN111015	8	20	DH101235	21	8	DJ191031	5	33	DS141012	3	44	JA541021	15	12
AP101236	3	4	DH101380	10	12	DJ201109	9	33	DS151057	7	36	JA541211	14	15
BA102004	13	11	DH101380	7	19	DJ201173	8	44	DS151073	11	36	JA541225	13	15
BA102004	24	15	DH101392	16	4	DJ221019	1	55	DS161125	2	29	JA551002	4	8
BF561219	4	10	DH101509	14	10	DK101237	12	16	DS161287	6	24	JA551004	9	8
CL201023	21	49	DH101607	5	23	DK101284	9	19	DS181070	9	39	JA551406	2	18
CS101128	11	4	DH101648	13	18	DK101340	11	2	DS181072	10	39	JA591040	14	23
DD101062	15	4	DH101784	8	12	DK101366	13	16	DS201025	2	53	JA621002	5	14
DD101097	12	14	DH111013	9	20	DK101386	8	4	DS211004	5	26	JA621006	2	14
DD111011	7	20	DH161146	16	30	DK151012	6	36	DS221001	14	47	JA621206	13	14
DD111012	5	20	DH161158	9	44	DK151013	9	36	DT113014	18	28	JB181223	4	26
DD111018	10	20	DH181015	16	39	DK151014	3	36	DT113015	13	28	JB181223	5	45
DE151012	4	32	DH191006	10	37	DK151015	10	36	DT113848	7	27	JC151016	12	36
DE191010	10	33	DH191013	5	37	DK151022	15	36	DT171089	4	42	JD131811	10	32
DE191028	7	33	DH191037	20	49	DK151026	2	31	DT171814	6	42	JD141003	22	36

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.
JD191006	8	24	JE511234	6	4	JE551212	17	8	JE591043	2	23	JF131016	8	32
JD351206	11	20	JE511241	5	4	JE551213	11	6	JE591046	4	23	JF131018	6	32
JD401007	4	52	JE511245	1	4	JE551214	4	7	JE591048	1	23	JF131233	4	31
JD551400	10	18	JE521016	14	4	JE551215	18	8	JE611001	2	21	JF131233	23	36
JD561004	3	9	JE521030	4	5	JE551216	16	8	JE611203	1	21	JF131236	1	36
JD561006	2	9	JE521215	6	5	JE551408	9	15	JE621002	1	14	JF131800	9	32
JD561011	6	9	JE531033	5	6	JE551413	6	18	JE621003	9	14	JF131802	12	33
JD561204	7	10	JE531045	6	6	JE551414	4	18	JE621004	15	14	JF131806	1	34
JE351031	12	19	JE531052	1	6	JE551415	7	18	JE621203	10	14	JF131807	8	33
JE351040	8	19	JE531202	1	7	JE551428	1	18	JE621405	9	12	JF131855	13	29
JE351212	6	20	JE541028	12	11	JE551430	3	18	JE621405	15	19	JF131878	9	35
JE351250	3	20	JE541048	17	12	JE561004	9	9	JE621407	3	19	JF151018	1	39
JE351252	4	20	JE541051	19	12	JE561005	5	9	JE621410	4	19	JF151019	18	39
JE351400	9	2	JE541063	20	12	JE561006	1	9	JE621411	14	19	JF151025	2	38
JE351403	5	5	JE541082	1	12	JE561200	3	10	JF113007	5	28	JF151027	6	38
JE351600	1	19	JE541228	8	17	JE571007	8	15	JF113202	1	30	JF151031	2	39
JE501074	1	11	JE541240	7	17	JE571009	1	13	JF113412	6	25	JF151032	3	39
JE511038	2	1	JE541241	15	15	JE571213	25	15	JF113418	1	25	JF151033	13	39
JE511047	1	2	JE541242	21	15	JE571215	1	16	JF113419	2	25	JF151034	15	39
JE511052	16	2	JE541244	3	15	JE571216	8	16	JF113809	16	43	JF151036	12	39
JE511053	3	1	JE541249	19	15	JE571219	7	16	JF113822	7	40	JF161008	11	38
JE511059	3	2	JE541250	11	19	JE571223	3	16	JF113832	8	40	JF161009	1	37
JE511060	10	3	JE541267	6	15	JE571224	11	16	JF113842	13	20	JF161201	2	46
JE511085	4	2	JE541271	2	15	JE571225	10	16	JF113844	12	54	JF161203	1	46
JE511208	2	3	JE551001	1	8	JE571227	4	16	JF121004	19	39	JF171001	21	43
JE511209	3	3	JE551200	8	8	JE571239	6	16	JF122006	10	27	JF171004	1	43
JE511212	4	3	JE551201	6	8	JE581018	6	22	JF122072	3	27	JF171009	2	43
JE511213	5	3	JE551202	2	8	JE581056	1	22	JF131008	16	27	JF171051	5	42
JE511221	7	3	JE551203	7	8	JE581084	4	22	JF131008	1	32	JF171608	7	41
JE511225	6	3	JE551206	14	8	JE581093	8	22	JF131011	3	31	JF181001	9	57
JE511233	9	4	JE551211	19	8	JE581409	12	2	JF131011	7	32	JF181210	17	49

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.
JF181272	4	53	JG161010	1	33	JH551205	11	8	JL151035	9	38	JL181008	1	49
JF181282	11	53	JG181235	3	49	JH551206	13	8	JL151038	2A	38	JL181203	6	49
JF181286	10	57	JG181236	2	49	JL111054	4	25	JL161003	14	38	JL181209	14	29
JF181287	1	40	JG181238	2	45	JL111054	12	56	JL161006	9	37	JL181211	7	57
JF181288	11	57	JG191008	5	24	JL111103	2	26	JL161008	15	38	JL181212	8	57
JF181289	1	48	JG232601	9	24	JL113012	3	28	JL161010	4	37	JL181214	4	44
JF181290	2	48	JG232606	10	24	JL113033	20	28	JL171018	13	41	JL181233	2	57
JF181340	1	47	JG351805	8	21	JL113033	8	37	JL171019	15	41	JL181234	3	57
JF181401	15	29	JG401036	14	52	JL113038	21	28	JL171020	9	41	JL181236	14	49
JF181401	1	57	JG511010	15	23	JL113201	9	30	JL171024	5	43	JL181237	16	49
JF181402	4	29	JG531220	2	4	JL113207	7	30	JL171024	18	43	JL181241	4	45
JF181403	1	29	JG531220	2	7	JL113209	15	30	JL171028	2	41	JL181247	5	49
JF181464	6	47	JG541074	10	17	JL113210	3	30	JL171029	3	41	JL181249	15	49
JF181466	7	47	JG551428	3A	18	JL113212	8	30	JL171030	4	41	JL181256	6	40
JF181467	8	47	JG571024	13	12	JL113223	18	30	JL171031	5	41	JL181257	23	49
JF181468	9	47	JG581056	7	22	JL113803	6	52	JL171038	6	41	JL181263	26	50
JF231214	1	56	JG581407	13	2	JL113809	1	26	JL171040	19	43	JL181265	15	59
JF231215	2	56	JG581424	3	21	JL113810	7	52	JL171045	5	57	JL181266	16	59
JF232606	17	38	JG581424	7	21	JL113811	8	52	JL171046	6	57	JL181283	22	49
JF351404	7	53	JG581442	12	22	JL113812	9	52	JL171049	10	41	JL181288	1	44
JF401017	9	49	JG591038	3	23	JL113818	19	30	JL171057	3	43	JL181297	2	47
JF401405	10	30	JG591039	6	23	JL113825	4	54	JL171061	9	43	JL181411	5	29
JF401600	7	54	JG611006	4	21	JL113828	10	35	JL171062	8	43	JL191001	1	24
JF402247	1	53	JG611206	6	21	JL113836	16	20	JL171063	12	41	JL191004	7	24
JF402411	1	45	JH541210	17	15	JL122006	1	27	JL171070	6	43	JL191008	13	59
JF511052	5	2	JH551001	10	8	JL122008	13	27	JL171071	4	43	JL191009	14	59
JF561204	9	10	JH551002	22	8	JL122026	14	27	JL171073	11	41	JL191017	2	24
JF561205	12	10	JH551202	24	8	JL131930	18	36	JL171078	15	43	JL231209	5	47
JG131219	14	36	JH551203	15	8	JL151021	1	38	JL171825	4	57	JL231404	3	56
JG151022	16	38	JH551204	12	8	JL151028	5	38	JL171842	1	41	JL231405	4	56
JG161008	12	38	JH551205	3	8	JL151034	7	38	JL171856	1	42	JL231600	21	38

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.	PARTE No.	FIG. No.	PAG. No.
JL231601	20	38	JW131807	5	34	KADA0612	5	48	KCGD0808	6	56	LAE00015	7	7
JL232604	12	24	JW131810	4	34	KADA0614	17	43	KCGD1010	3	51	LAE00015	4	11
JL232808	10	52	JW561206	2	10	KADB0516	13	30	KCHA0608	15	20	LAE00024	12	12
JL233002	17	59	JY113864	17	53	KADB0516	10	43	KCJD1212	11	24	LAE00025	8	11
JL233316	1	57	JY113872	12	53	KADD0610	12	52	KDAA0510	9	29	LBC00002	8	2
JL401002	1	52	JY113873	13	53	KADD0630	12	23	KDAA0611	11	49	LBR00002	8	49
JL401003	5	51	JY113874	16	53	KADD0830	3	37	KDAA1018	11	56	LBS00002	4	49
JL401004	4	51	JY113877	15	53	KADE0614	10	49	KDBA0512	7	49	LBU00039	6	48
JL401005	2	51	JY151011	23	39	KADF0610	12	28	KJAC1824	6	2	LBU00077	4	48
JL401006	1	51	JY171007	14	53	KADF0614	2	16	KPBB6301	5	32	LCB00005	4	36
JL401400	18	38	JY181255	3	48	KADF0820	7	29	KPBF6305	2	6	LCD00001	8	6
JL401405	19	38	JY401404	13	38	KADF0820	14	41	LAC00008	12	20	LCJ00002	18	27
JL401406	6	37	JY402235	7	42	KADF0875	7	48	LAC00019	2	27	LCJ00002	21	36
JL402003	1	20	JY403604	14	20	KAEA0622	5	53	LAC00020	4	38	LDA00025	12	6
JL402219	3	54	JY541039	8	9	KAED0625	6	53	LAC00022	12	43	LDB00007	7	45
JL403000	2	54	JY611003	5	21	KAED0630	2	20	LAC00031	7	56	LDB00023	10	29
JL403200	1	54	JZ113061	23	28	KAEQ0630	2	22	LAC00035	10	44	LDB00023	6	44
JL403600	14	30	JZ122008	8	27	KBBA0514	3	52	LAC00035	5	56	LDB00029	17	27
JL541223	5	17	JZ122012	9	27	KBBF0408	8	53	LAC00037	11	47	LDB00029	2	36
JL541227	12	15	JZ551412	8	18	KBRC3513	12	27	LAC00054	6	45	LDB00044	5	10
JL561409	13	10	JZ561002	4	9	KBUA0514	2	40	LAC00054	3	47	LDC00001	10	56
JL581055	9	22	JZ621000	7	14	KBUA0516	12	49	LAC00063	7	43	LFB00001	4	6
JL591156	9	23	KACA0616	6	29	KBUA0612	2	44	LAC00128	13	47	LJA00004	14	12
JL591157	8	23	KACA0820	6	28	KBUA0616	27	50	LAD00037	13	33	MF12V5-1A-GEL	11	54
JL591165	10	23	KACB0622	4	47	KBUB0516	13	43	LAD00040	7	37	MTX5L-BS-GEL-M	11	54
JL601216	10	40	KACD0516	8	41	KBUF0410	10	47	LAD00104	6	7	MTX5L-BS-MEGA	11	54
JN351604	10	54	KACH0616	13	56	KCAA0504	3	45	LAD00131	8	10	PA181292	25	49
JU231205	9	56	KACH0835	18	49	KCGA0606	4	40	LAD00134	4	30	PA181293	24	49
JU581006	15	2	KADA0510	13	23	KCGA0606	18	53	LAD00135	6	30	PA561209	6	10
JV541007	18	12	KADA0512	14	43	KCGD0606	5	52	LAD00154	3	42	PF131220	5	36
JV541207	2	17	KADA0610	9	16	KCGD0808	5	25	LAE00010	13	19	PF541018	10	11

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
YJF22009	1	35

PARTE No.	FIG. No.	PAG. No.

PARTE No.	FIG. No.	PAG. No.

PARTE No.	FIG. No.	PAG. No.

PARTE No.	FIG. No.	PAG No.

FICHA TÉCNICA PULSAR NS 160 FI

CARACTERÍSTICAS	UNIDAD
Motor	4T, Monocilíndrico
Cilindrada	160,3 cc
Relación de Compresión	9.8:1
Potencia Máxima	14.82 HP @ 8500 RPM
Torque Máximo	14.12 NM @ 6000 RPM
Bujía	CHAMPION P-RZ9HC
Arranque	Eléctrico y Pedal
Transmisión	Mecánica 5 Velocidades
Sistema de Alimentación	Inyección Electrónica
Refrigeración	Aire

FRENOS

Freno Delantero	Hidráulico, Disco
Freno Trasero	Hidráulico, Disco

SUSPENSIÓN

Suspensión Delantera	Telescópica, recorrido de 130 mm.
Suspensión Trasera	Monoamortiguador, recorrido 120 mm.

CAPACIDAD DEL TANQUE

Lleno	12 Litros
Combustible	Gasolina

LLANTAS

Llanta Delantera	80/100 -17 46P ó 90/90-17 49P
Llanta Trasera	110/80 -17 57P ó 120/80-17 61P
Rines	Aspas de Aleación

SISTEMA ELÉCTRICO

Sistema de Ignición	C.D.I
Bombillo Farola	55/60 W
Luz de Stop	LED
Luces Direccionales	10 W
Velocímetro	LED
Pito	12V
Batería	12V 8AH

DIMENSIONES

Largo x Ancho x Alto	2012 mm x 803.5 mm x 1060 mm
Distancia Entre Ejes	1363 mm.
Altura al Piso	176 mm.
Peso en Seco	142 Kg

pulsar
NS160FI



Identifica los repuestos BAJAJ comercializados con el respaldo de AUTECO

1.



**TOCAR ✓
Y SENTIR**

Al tocar el holograma dorado no debe sentir diferencia de altura con la etiqueta de papel.

2.



**EFFECTO ✓
DE CAMBIO**

Si giras la etiqueta dorada 90° a la derecha deben verse las palabras GENUINE PARTS y BAJAJ.

3.



**TEXTO ✓
OCULTO**

Cuando la etiqueta dorada es raspada, aparecerá la palabra "genuine"

4.



**IDENTIFICA ✓
EL COLOR
DE LA ETIQUETA**

Las etiquetas de los repuestos importados con el respaldo de AUTECO son color ROSADO.

¡RUEDA
TRANQUILO Y SEGURO!



**COMPRA REPUESTOS
ORIGINALES BAJAJ-AUTECO**
¡A un súper precio!

