

# Discover DTS-i

Modelo: Discover DTS-i  
Motor N° DSGBN51260~DSGBP71909  
Versión 01: Chasis N° MD2DSB3Z37VG00135~MD2DSB3ZX8VB00720

Versión 02: Motor N° DSGBPC01165~  
Chasis N° MD2DSB5Z38VC00106~



## CATÁLOGO DE PARTES

[www.auteco.com.co/repuestosauteco](http://www.auteco.com.co/repuestosauteco)

# INTRODUCCIÓN

Esta publicación contiene las referencias para el modelo Discover DTS-i en sus versiones 01 y 02.

La versión 01 corresponde a los vehículos ensamblados desde Agosto de 2006 hasta Agosto 15 de 2007 y están identificados con el **Nº de motor desde DSGBNG51260 hasta el Nº DSGBPB71909 y chasis desde el Nº MD2DSB3Z37VG00135 hasta el Nº MD2DSB3ZX8VB00720.**

La versión 02 corresponde a los vehículos ensamblados a partir del 16 de Agosto de 2007 desde el **Nº de motor DSGBPC01165 y chasis Nº MD2DSB5Z38VC00106.**

En el interior del catálogo en la columna “CANT./VEH.” están detalladas las cantidades por referencia para cada versión.

Recuerde hacer los cambios de aceite de motor (1.000 cc de Shell Advance 20W50 API SG + JASO MA) según la TABLA DE MANTENIMIENTO PERIÓDICO (Máximo cada 2.000 Kms. de recorrido) .

No lave la moto con agua a presión, ni con vapor, ni con el motor caliente. Estos procedimientos pueden ocasionar daños en sus componentes eléctricos.

---

## PREFACIO

---

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco-Kawasaki.



## DIRECTORIO TELEFÓNICO - DIVISIÓN REPUESTOS

| NOMBRE                    | CARGO                                    | CELULAR       | TELÉFONO            |
|---------------------------|------------------------------------------|---------------|---------------------|
| ALVARO VÉLEZ V.           | JEFE LINEAS ESPECIALES                   | 03310-3739023 | 306 84 58           |
| JOSE IGNACIO ROJAS L.     | JEFE LINEAS ORIGINALES                   | 03313-7677836 | 306 84 59           |
| GABRIEL JAIME CARMONA     | VENTAS ORIGINALES                        | 03313-7677843 | 306 84 74           |
| JORGE GIL                 | VENTAS ORIGINALES                        | 03313-6727353 | 306 84 71           |
| JORGE MARIO MAYA V.       | VENTAS ORIGINALES                        | 03312-2589384 | 306 84 75           |
| ALEXANDER GRAJALES        | VENTAS                                   | 03310-3739019 | 306 84 73           |
| BERNARDO MURIEL G.        | VENTAS                                   | 03310-4362742 | 306 84 67           |
| CARLOS H. TOBON R.        | VENTAS                                   | 03310-4473611 | 306 84 63           |
| CARLOS MARIO SALAZAR      | VENTAS                                   | 03310-4148845 | 306 84 65           |
| ELKIN GALLEGO R.          | VENTAS                                   | 03310-4362598 | 306 84 64           |
| GONZALO A. SALDARRIAGA S. | VENTAS                                   | 03310-4068874 | 306 84 60           |
| HECTOR A. VALENCIA R.     | VENTAS                                   | 03310-4473652 | 306 84 61           |
| HECTOR JAIRO LOPEZ C.     | VENTAS                                   | 03312-2576791 | 306 84 70           |
| JOHN JAIRO LÓPEZ CH.      | VENTAS                                   | 03310-4442215 | 306 84 62           |
| MAURICIO MEJÍA            | VENTAS                                   | 03312-2576175 | 306 84 72           |
| NESTOR R. ADARVE          | VENTAS                                   | 03310-4362689 | 306 84 68           |
| UBERNEY ORTIZ V.          | VENTAS                                   | 03313-6727337 | 306 84 66           |
| WILLIAM GUTIÉRREZ CH.     | VENTAS                                   | 03310-4074072 | 306 84 69           |
| JUAN DIEGO ARANGO         | ASESOR SERVICIO<br>POSTVENTAS MOTOCARROS |               | 306 81 81 Ext. 8306 |

| DIAGONAL 38 A N° 34-56 B. SAN JOSÉ ITAGÜÍ |                   | FAX BODEGA: 373 83 94 | FAX OFICINAS: 373 03 75 |
|-------------------------------------------|-------------------|-----------------------|-------------------------|
| SERVICIO AL CLIENTE                       | ANDRÉS CARDONA    | 306 84 78             |                         |
|                                           | DORIS CARMONA     | 306 84 77             |                         |
| FACTURACIÓN                               | RICARDO CUARTAS   | 306 84 76             |                         |
| DEVOLUCIONES RECLAMOS Y MOTOS VARADAS     | ALEJANDRO POSADA  | 306 84 79             |                         |
|                                           | JUAN G.MO. GARCÍA | 306 84 80             |                         |

**LÍNEA GRATUITA SERVICIO AL CLIENTE - ACLARA -**

**01 8000 52 00 90**

## ÍNDICE

| FIGURA<br>Nº | DESCRIPCIÓN                       | PAG.<br>Nº |
|--------------|-----------------------------------|------------|
| 1            | Culata                            | 1          |
| 2            | Múltiple Admisión                 | 2          |
| 3            | Válvulas                          | 3          |
| 4            | Eje Levas / Tensor Cadenilla      | 4          |
| 5            | Cilindro y Pistón                 | 5          |
| 6            | Cigüeñal                          | 6          |
| 7            | Transmisión                       | 7          |
| 8            | Selector de Cambios               | 8          |
| 9            | Eje de Cambios                    | 9          |
| 10           | Carcasa Derecha                   | 10         |
| 11           | Carcasa Izquierda                 | 11         |
| 12           | Cubierta Clutch                   | 12         |
| 13           | Cubierta Volante                  | 13         |
| 14           | Clutch                            | 14         |
| 15           | Pedal Crank                       | 15         |
| 16           | Carburador                        | 16         |
| 17           | Filtro de Aire                    | 17         |
| 18           | Silenciador                       | 18         |
| 19           | Sillín                            | 19         |
| 20           | Bomba de Aceite                   | 20         |
| 21           | Magneto / C.D.I. / Bobina de Alta | 21         |
| 22           | Soportes de Motor                 | 22         |
| 23           | Chasis                            | 23         |
| 24           | Brazo Oscilante / Amortiguador    | 24         |

| FIGURA<br>Nº | DESCRIPCIÓN                   | PAG.<br>Nº |
|--------------|-------------------------------|------------|
| 25           | Reposapie Delantero           | 25         |
| 26           | Reposapie Trasero             | 26         |
| 27           | Guardabarro Trasero           | 27         |
| 28           | Gato Central / Gato Lateral   | 28         |
| 29           | Rines / Llantas / Neumáticos  | 29         |
| 30           | Porta Bandas Delantero        | 30         |
| 31           | Porta Bandas Trasero          | 31-32      |
| 32           | Pedal Freno                   | 33         |
| 33           | Manubrio                      | 34-35      |
| 34           | Suspensión Delantera          | 36         |
| 35           | Partes Pintadas y Calcomanías | 37-38      |
| 36           | Grifo de Gasolina             | 39         |
| 37           | Antivibrantes Tanque y Tapas  | 40         |
| 38           | Velocímetro                   | 41         |
| 39           | Cables                        | 42         |
| 40           | Guardacadena                  | 43         |
| 41           | Farola y Carenaje Farola      | 44         |
| 42           | Direccionales                 | 45         |
| 43           | Stop                          | 46         |
| 44           | Equipo Eléctrico              | 47         |
| 45           | Herramientas                  | 48         |
| 46           | Accesorios                    | 49         |
|              | Lista de Kits                 | 50-51      |
|              | Índice de Referencias         | 52-56      |

## ÍNDICE DE GRÁFICOS

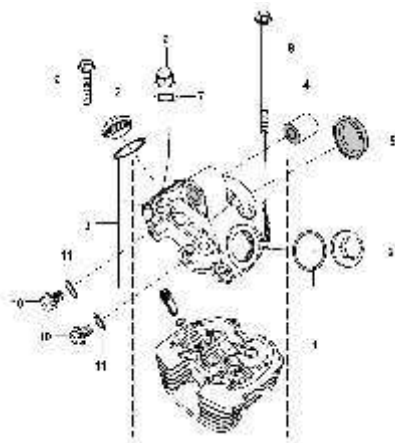


FIGURA N° 1 : CULATA

PAG. N°  
1

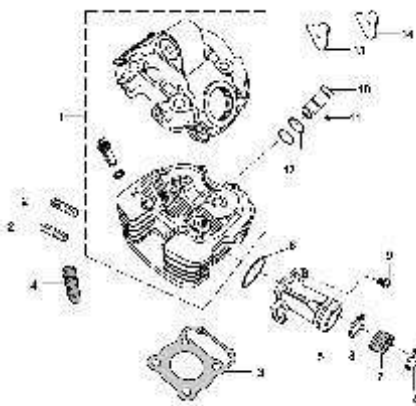


FIGURA N° 2 : MÚLTIPLE ADMISIÓN

PAG. N°  
2

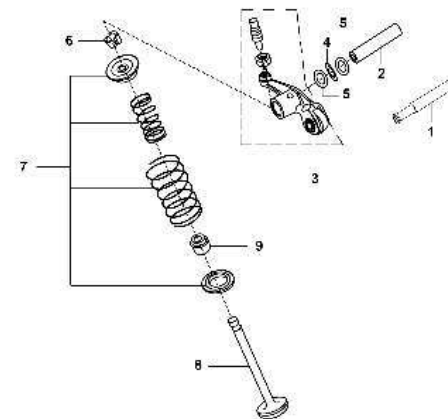


FIGURA N° 3 : VÁLVULAS

PAG. N°  
3

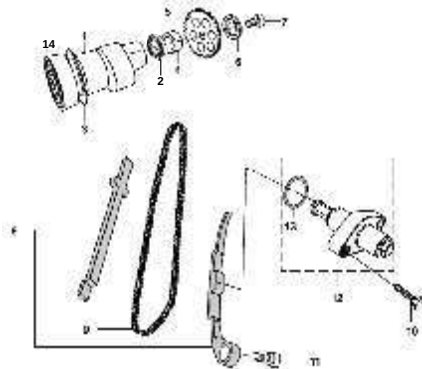


FIGURA N° 4 : EJE LEVAS / TENSOR

PAG. N°  
4

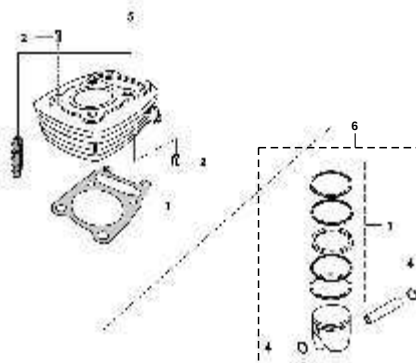


FIGURA N° 5 : CILINDRO Y PISTÓN

PAG. N°  
5

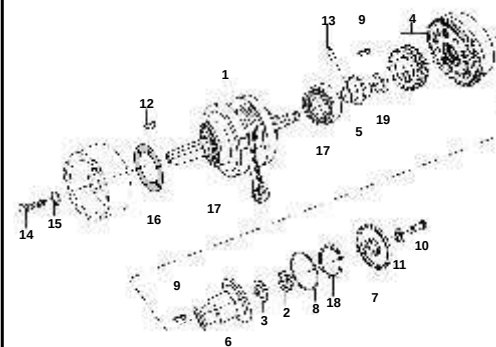
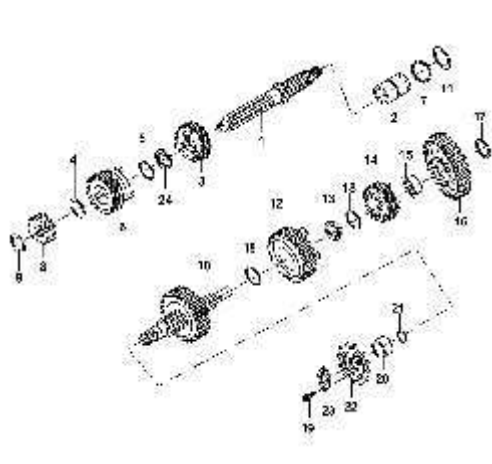
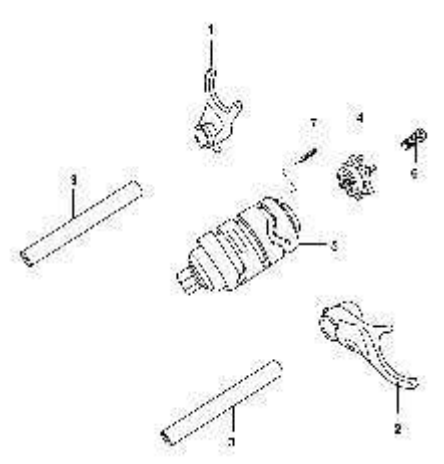
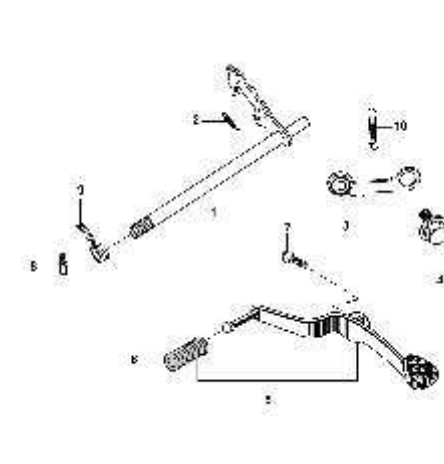
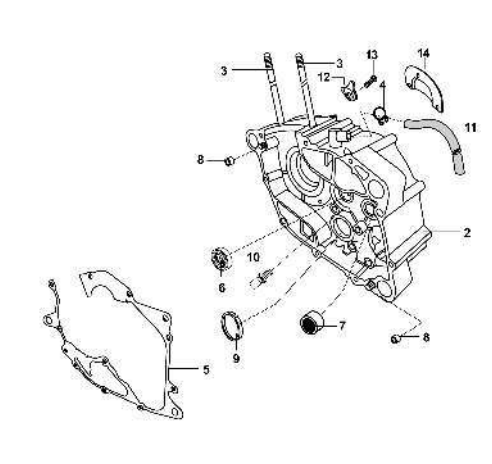
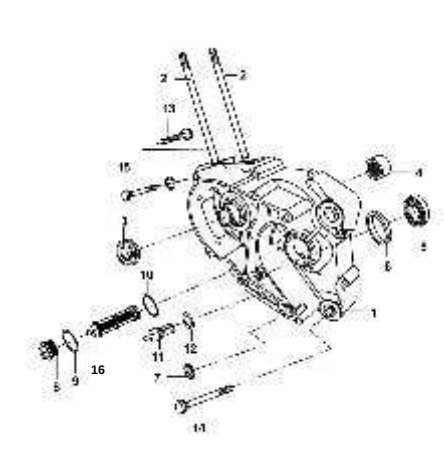
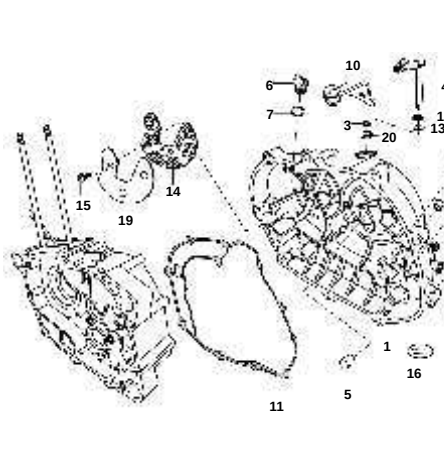








FIGURA N° 6 : CIGÜEÑAL

PAG. N°  
6




## ÍNDICE

|                                                                                   |            |                                                                                     |            |                                                                                      |            |
|-----------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|------------|--------------------------------------------------------------------------------------|------------|
|   |            |   |            |   |            |
| FIGURA N° 7 : TRANSMISIÓN                                                         | PAG. N° 7  | FIGURA N° 8 : SELECTOR DE CAMBIOS                                                   | PAG. N° 8  | FIGURA N° 9 : EJE DE CAMBIOS                                                         | PAG. N° 9  |
|  |            |  |            |  |            |
| FIGURA N° 10 : CARCASA DERECHA                                                    | PAG. N° 10 | FIGURA N° 11 : CARCASA IZQUIERDA                                                    | PAG. N° 11 | FIGURA N° 12 : CUBIERTA CLUTCH                                                       | PAG. N° 12 |






# ÍNDICE
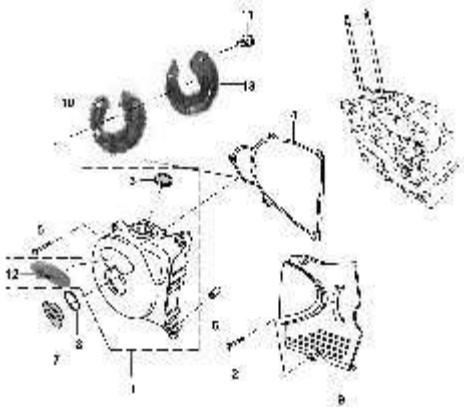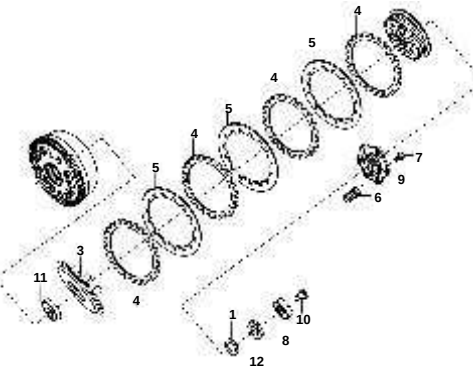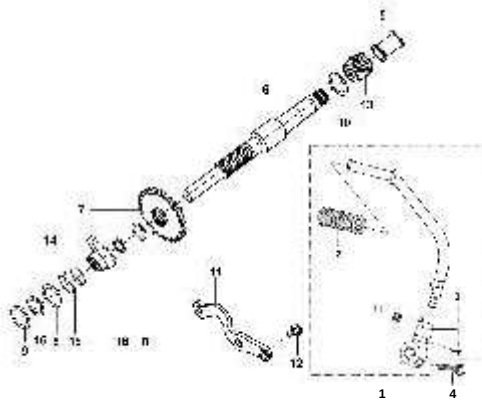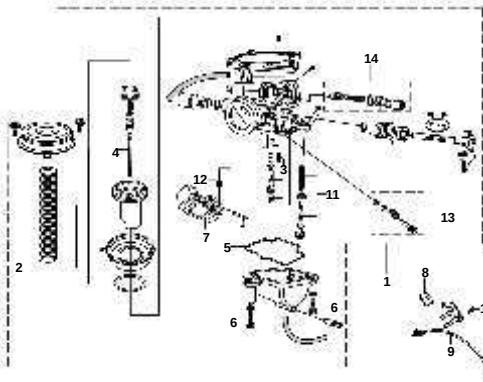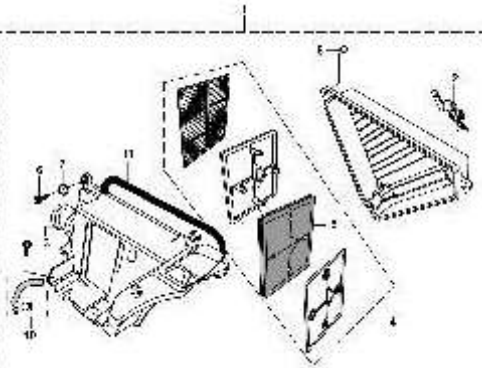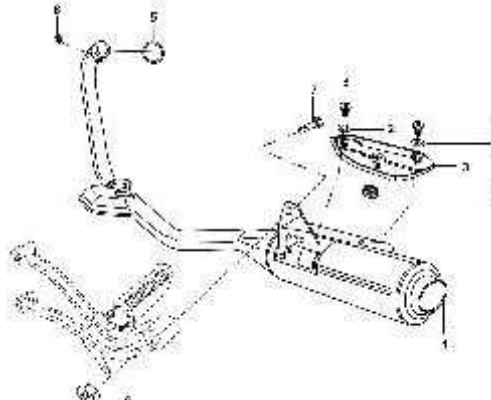
|                                                                                    |            |                                                                                     |            |                                                                                      |            |
|------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|------------|--------------------------------------------------------------------------------------|------------|
|   |            |   |            |   |            |
| FIGURA N° 13 : CUBIERTA VOLANTE                                                    | PAG. N° 13 | FIGURA N° 14 : CLUTCH                                                               | PAG. N° 14 | FIGURA N° 15 : PEDAL CRANK                                                           | PAG. N° 15 |
|  |            |  |            |  |            |
| FIGURA N° 16 : CARBURADOR                                                          | PAG. N° 16 | FIGURA N° 17 : FILTRO DE AIRE                                                       | PAG. N° 17 | FIGURA N° 18 : SILENCIADOR                                                           | PAG. N° 18 |

# ÍNDICE
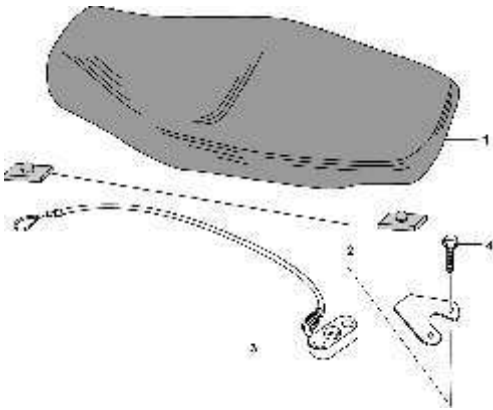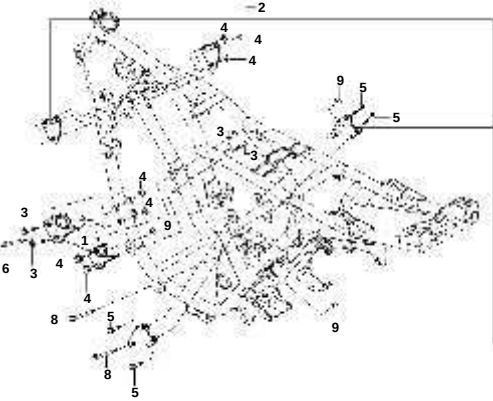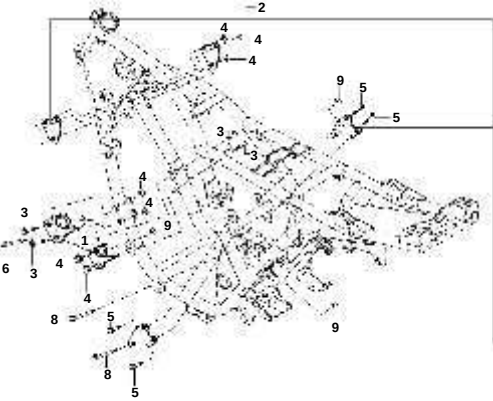
|                                                                                  |                                                                                   |                                                                                   |  |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--|
|  |  |  |  |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--|

# ÍNDICE
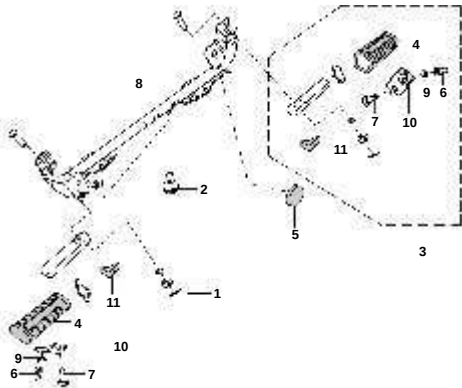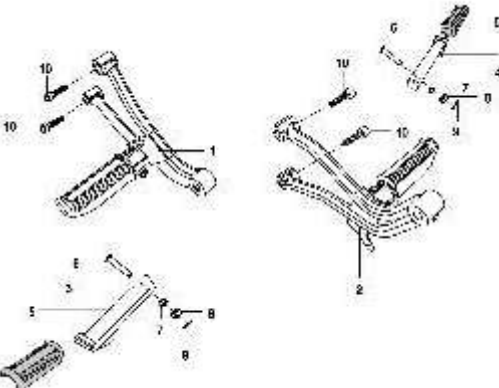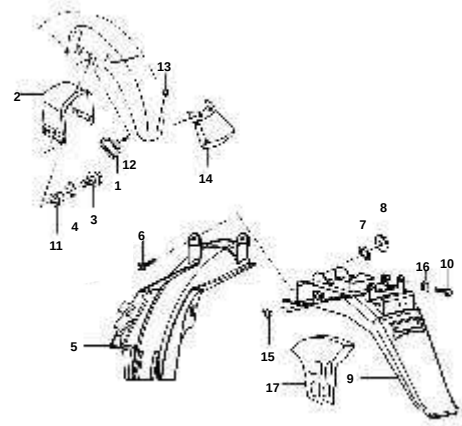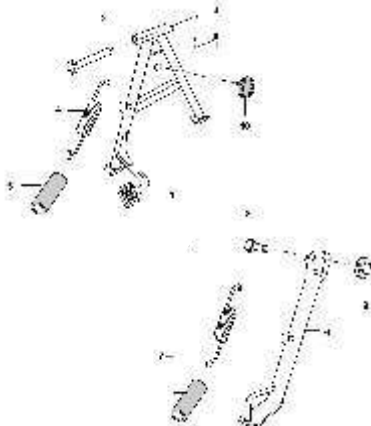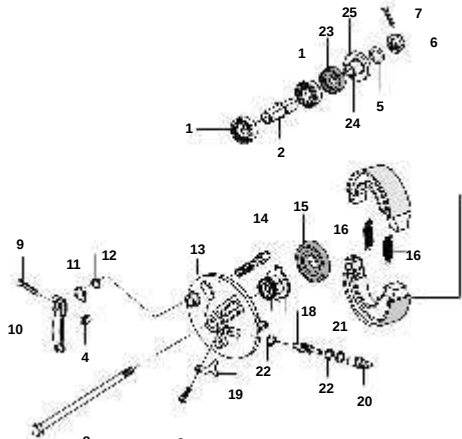
|                                                                                    |                                                                                     |                                                                                      |                   |                                           |                   |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|-------------------|-------------------------------------------|-------------------|
|   |   |   |                   |                                           |                   |
| <b>FIGURA N° 25 : REPOSAPIE DELANTERO</b>                                          | <b>PAG. N° 25</b>                                                                   | <b>FIGURA N° 26 : REPOSAPIE TRASERO</b>                                              | <b>PAG. N° 26</b> | <b>FIGURA N° 27 : GUARDABARRO TRASERO</b> | <b>PAG. N° 27</b> |
|  |  |  |                   |                                           |                   |
| <b>FIGURA N° 28 : GATO CENTRAL<br/>GATO LATERAL</b>                                | <b>PAG. N° 28</b>                                                                   | <b>FIGURA N° 29 : LLANTAS / RINES / NEUMÁTICOS</b>                                   | <b>PAG. N° 29</b> | <b>FIGURA N° 30 : CAMPANA DELANTERA</b>   | <b>PAG. N° 30</b> |

# ÍNDICE

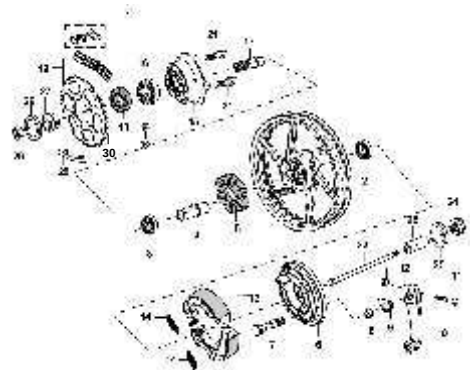


FIGURA N° 31 : CAMPANA TRASERA

PAG. N°  
31-32

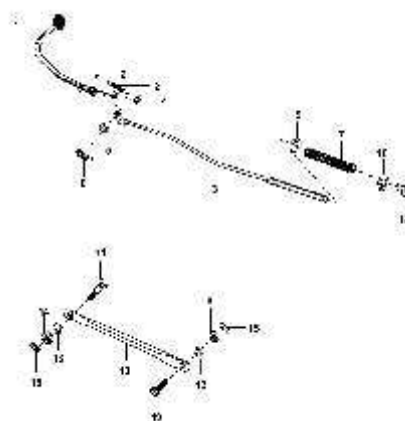


FIGURA N° 32 : PEDAL FRENO

PAG. N°  
33

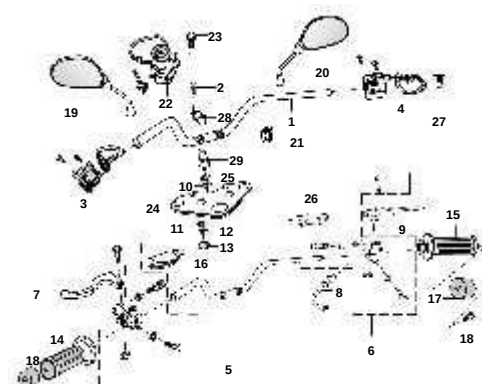


FIGURA N° 33 : MANUBRIO

PAG. N°  
34-35

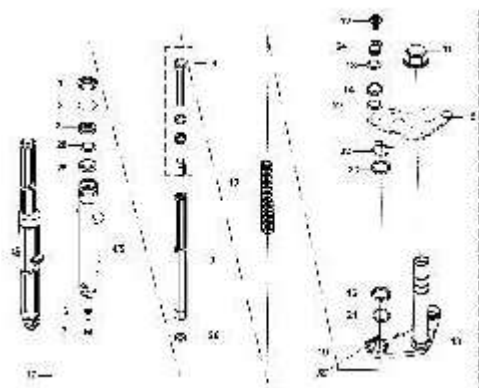


FIGURA N° 34 : SUSPENSIÓN DELANTERA

PAG. N°  
36

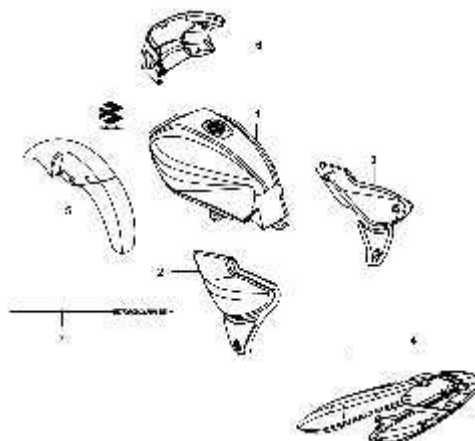


FIGURA N° 35 : PARTES PINTADAS

PAG. N°  
37-38

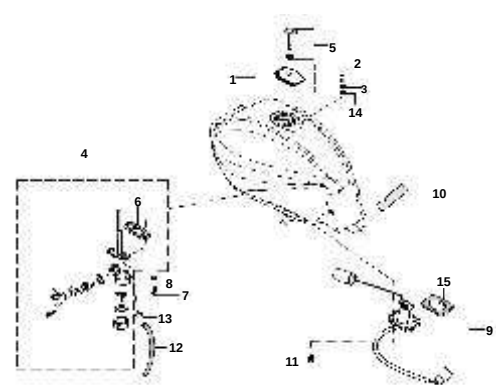
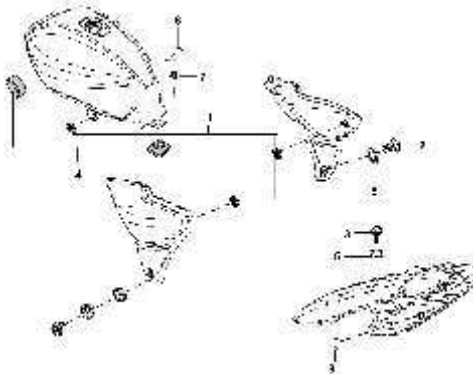
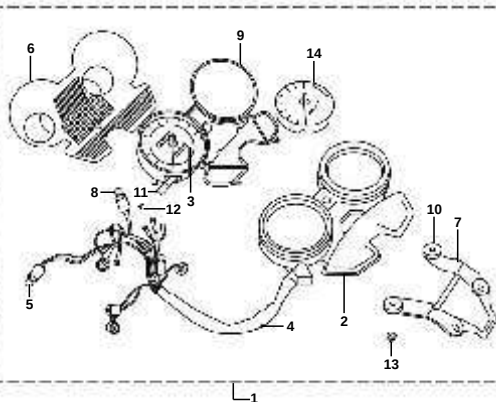
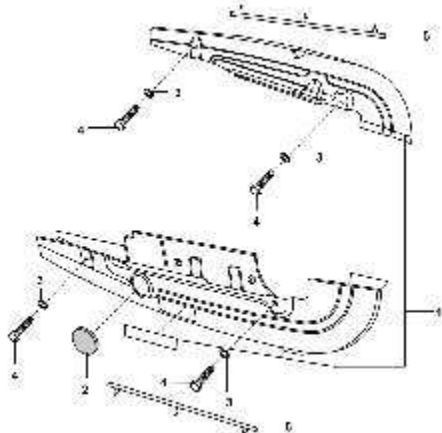
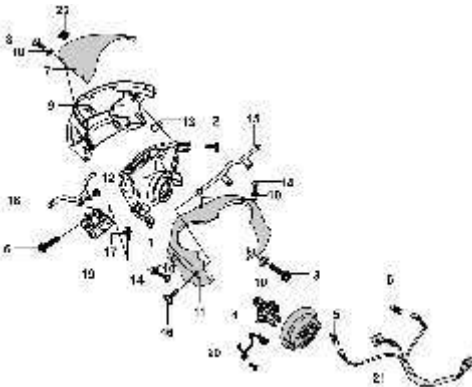
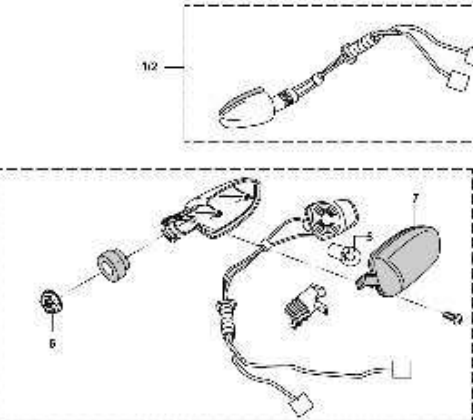






FIGURA N° 36 : GRIFO DE GASOLINA

PAG. N°  
39

# ÍNDICE

|                                                                                    |                                                                                     |                                  |                                                                                      |                              |            |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------|--------------------------------------------------------------------------------------|------------------------------|------------|
|   |   |                                  |   |                              |            |
| FIGURA N° 37 : ANTIVIBRANTES TANQUE Y TAPAS                                        | PAG. N° 40                                                                          | FIGURA N° 38 : VELOCÍMETRO       | PAG. N° 41                                                                           | FIGURA N° 39 : CABLES        | PAG. N° 42 |
|  |  |                                  |  |                              |            |
| FIGURA N° 40 : GUARDACADENA                                                        | PAG. N° 43                                                                          | FIGURA N° 41 : FAROLA Y CARENAJE | PAG. N° 44                                                                           | FIGURA N° 42 : DIRECCIONALES | PAG. N° 45 |

# ÍNDICE
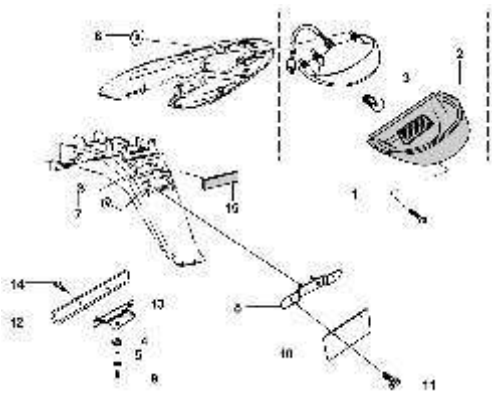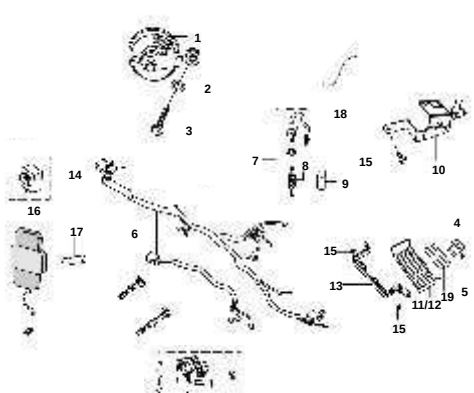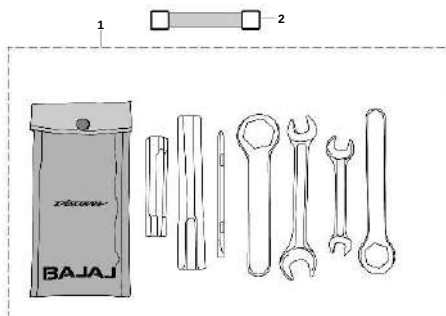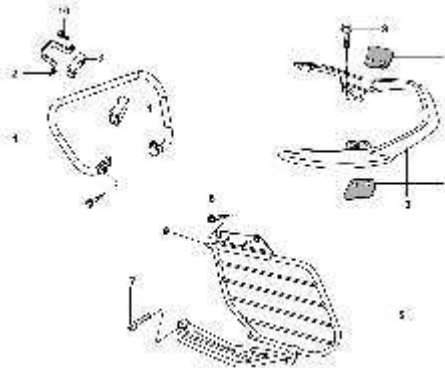
|                                                                                   |  |                                                                                    |  |                                                                                     |  |
|-----------------------------------------------------------------------------------|--|------------------------------------------------------------------------------------|--|-------------------------------------------------------------------------------------|--|
|   |  |  |  |  |  |
| FIGURA N° 43 : STOP                                                               |  | FIGURA N° 44 : EQUIPO ELÉCTRICO                                                    |  | FIGURA N° 45 : HERRAMIENTAS                                                         |  |
|  |  |                                                                                    |  |                                                                                     |  |
| FIGURA N° 46 : ACCESORIOS                                                         |  |                                                                                    |  |                                                                                     |  |

This exploded view diagram illustrates the assembly of a carburetor. The main components are labeled as follows:

- 1**: Carburetor body (main casting)
- 2**: Two O-rings (one for the float bowl, one for the jet needle)
- 3**: Jet needle
- 4**: Jet needle sleeve
- 5**: Float bowl gasket
- 6**: Jet needle pin
- 7**: Jet needle pin washer
- 8**: Jet needle pin
- 9**: Jet needle pin nut
- 10**: Two screws (for the float bowl)
- 11**: Two washers (for the float bowl)

The diagram shows the carburetor body (1) at the bottom, with the jet needle (3) and jet needle sleeve (4) being inserted into the top. The jet needle pin (6) and jet needle pin washer (7) are shown being inserted into the jet needle (3). The jet needle pin (8) and jet needle pin nut (9) are shown being inserted into the jet needle pin (6). The float bowl gasket (5) is shown being inserted into the float bowl. The two screws (10) and two washers (11) are shown being inserted into the float bowl. The jet needle pin (6) and jet needle pin washer (7) are shown being inserted into the jet needle (3).


**Discover DTS-i**

This exploded view diagram illustrates the assembly of a carburetor. The main components shown are:

- 1**: Carburetor body (top half)
- 2**: Two screws for the float bowl gasket
- 3**: Float bowl gasket
- 4**: Float bowl
- 5**: Jet needle
- 6**: Jet needle spring
- 7**: Jet needle O-ring
- 8**: Jet needle pin
- 9**: Jet needle pin O-ring
- 10**: Jet needle pin O-ring
- 11**: Jet needle pin O-ring
- 12**: Jet needle pin O-ring
- 13**: Jet needle pin O-ring
- 14**: Jet needle pin O-ring

**Discover DTS-i**

### FIGURA N° 3 : VÁLVULAS

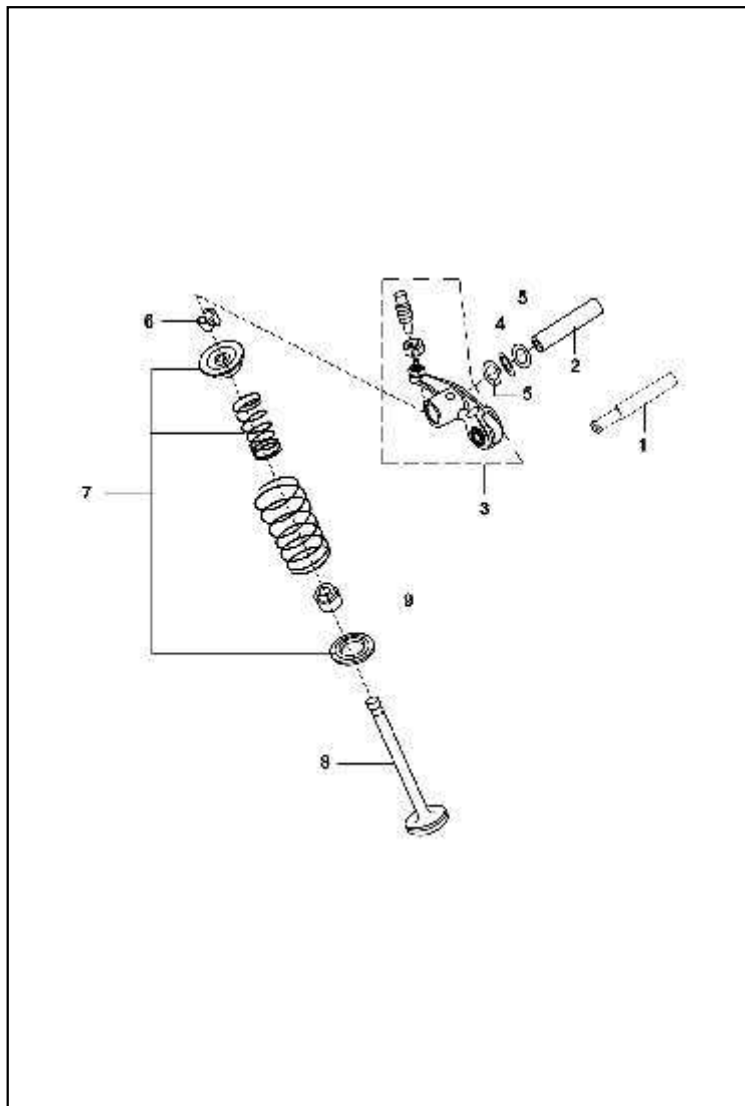[illegible]

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or valve. The parts are numbered 1 through 14. The assembly sequence is as follows:

- Part 1** is the main cylindrical housing.
- Part 3** is a seal or gasket that fits into a groove on the front of Part 1.
- Part 2** is a small O-ring that fits into a groove on the front of Part 1.
- Part 4** is a small cylindrical component that fits into the front of Part 1.
- Part 5** is a circular plate with eight holes, which fits onto the front of Part 4.
- Part 6** is a small cylindrical component that fits into the center of Part 5.
- Part 7** is a screw that secures Part 6.
- Part 8** is a long, thin, curved metal arm that fits into the side of Part 1.
- Part 9** is a long, thin, curved metal arm that fits into the side of Part 1.
- Part 10** is a long, thin, curved metal arm that fits into the side of Part 1.
- Part 11** is a small cylindrical component that fits into the side of Part 1.
- Part 12** is a small cylindrical component that fits into the side of Part 1.
- Part 13** is a small cylindrical component that fits into the side of Part 1.
- Part 14** is a small cylindrical component that fits into the side of Part 1.


**Discover DTS-i**

**Discover DTS-i**

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 20. The assembly is shown in a disassembled state, with parts arranged along a central axis. Key components include a large outer housing (1), a central shaft (17), a drive pulley (4), a timing belt (20), and various internal gears and bearings (2, 3, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 18, 19). The diagram uses dashed lines to indicate the alignment and relative positions of the parts.

**Discover DTS-i**

FIGURA N° 7 : TRANSMISIÓN

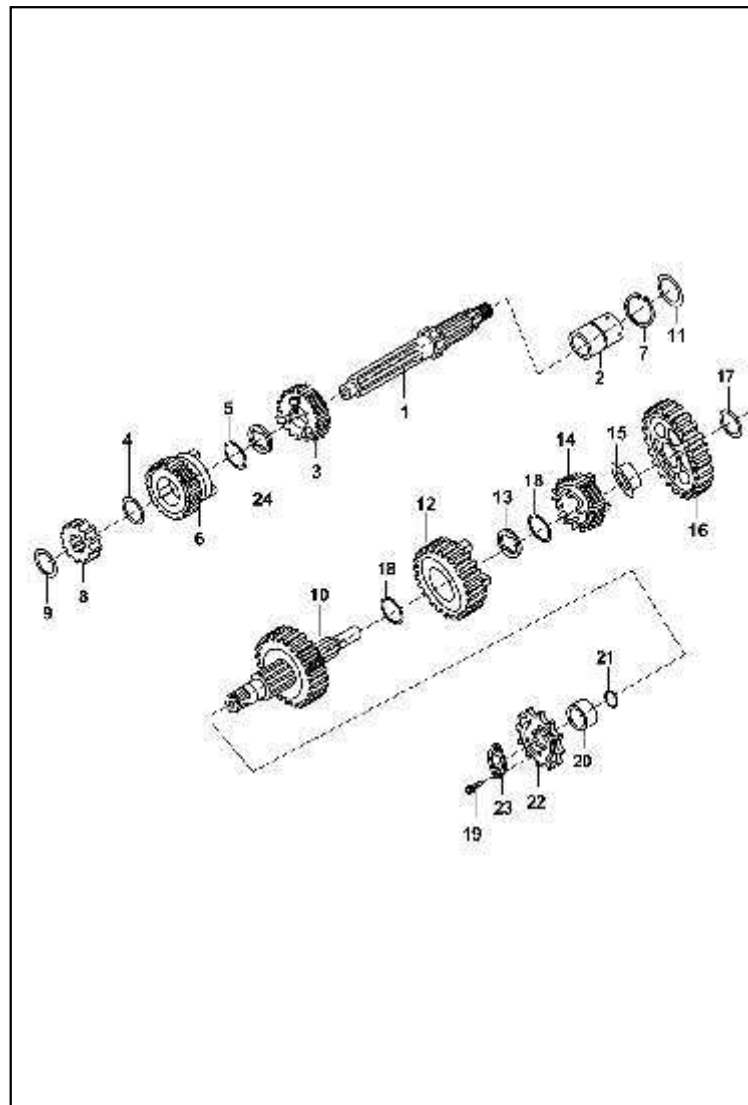

| FIG. N° | PARTE N°   | DESCRIPCIÓN                  | CANT. VEH. |     | OBSERVACIÓN    |
|---------|------------|------------------------------|------------|-----|----------------|
|         |            |                              | V01        | V02 |                |
| 1       | DS-1010-46 | Eje Clutch                   | 1          | 1   |                |
| 2       | DS-1012-05 | Buje Eje Caja                | 1          | 1   |                |
| 3       | DS-1010-49 | Piñón de 4ª                  | 1          | 1   |                |
| 4       | DS-1011-28 | Arandela Caja                | 1          | 1   |                |
| 5       | 39-0987-17 | Pines Eje Caja               | 1          | 1   |                |
| 6       | DS-1010-48 | Piñón de 3ª                  | 1          | 1   |                |
| 7       | 39-0337-17 | Pin                          | 1          | 1   |                |
| 8       | DS-1010-47 | Piñón de 2ª                  | 1          | 1   |                |
| 9       | DS-1011-29 | Arandela Caja                | 1          | 1   |                |
| 10      | DS-1012-65 | Eje Piñón Salida             | 1          |     |                |
|         | DS-1099-07 | Eje Piñón Salida             |            | 1   | Desde Enero-07 |
| 11      | DS-1012-04 | Arandela Caja                | 1          | 1   |                |
| 12      | DS-1010-54 | Piñón de 3ª                  | 1          | 1   |                |
| 13      | DH-1010-79 | Arandela Caja                | 1          | 1   |                |
| 14      | DS-1010-55 | Piñón de 4ª                  | 1          | 1   |                |
| 15      | DH-1011-11 | Buje Piñón Caja              | 1          | 1   |                |
| 16      | DS-1010-52 | Piñón de 1ª                  | 1          | 1   |                |
| 17      | DS-1012-03 | Arandela Caja                | 1          | 1   |                |
| 18      | DH-1012-35 | Pin Piñones Caja             | 2          | 1   |                |
| 19      | 39-1981-04 | Tornillo Arandela Eje Salida | 2          | 2   |                |
| 20      | DH-1011-16 | Buje Eje Piñón Delantero     | 1          | 1   |                |
| 21      | 30-1010-61 | "O" Ring                     | 1          | 1   |                |
| 22      | DS-1011-97 | Piñón Salida                 | 1          | 1   |                |
| 23      | DS-1011-98 | Arandela Piñón Salida        | 1          | 1   |                |
| 24      | DS-1011-07 | Arandela Caja                | 1          | 1   |                |
|         |            |                              |            |     |                |
|         |            |                              |            |     |                |


This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 1**: A bracket or arm with a circular feature at its base.
- 2**: A bracket or arm, similar to part 1 but with a different shape.
- 3**: A long, hollow cylindrical tube.
- 4**: A small, complex mechanical component with a circular face.
- 5**: A central cylindrical component with multiple longitudinal slots or vanes.
- 6**: A small, cylindrical pin or fastener.
- 7**: A small, dark, rectangular component, possibly a seal or gasket.

The diagram illustrates how these parts fit together. Part 5 is the central hub. Part 3 is a sleeve that fits over part 5. Part 4 is a component that fits into the end of part 5. Part 7 is a small component that fits into a slot on part 5. Parts 1 and 2 are brackets that attach to the ends of part 3.

**Discover DTS-i**

**FIGURA N° 9 : EJE DE CAMBIOS**

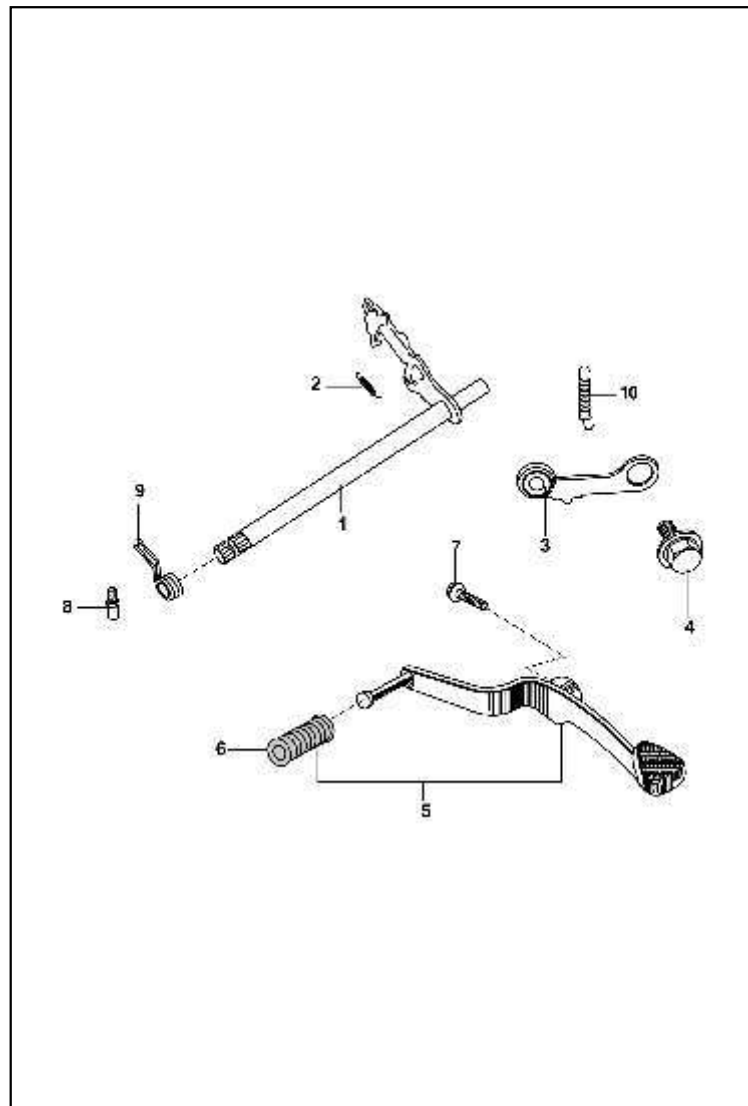[illegible]


[illegible]

**Discover DTS-i**

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The main housing is labeled 1. Two long shafts, labeled 2, are shown being inserted into the top of the housing. A bolt, labeled 13, is used to secure the shafts. A cap screw, labeled 15, is used to secure the front cover, labeled 3. A seal, labeled 4, is shown being installed into the front cover. A gasket, labeled 5, is shown being installed between the front cover and the housing. A ring, labeled 6, is shown being installed around the front cover. A bolt, labeled 10, is used to secure the front cover. A seal, labeled 8, is shown being installed into the front cover. A gasket, labeled 9, is shown being installed between the front cover and the housing. A bolt, labeled 16, is used to secure the front cover. A bolt, labeled 11, is used to secure the front cover. A bolt, labeled 12, is used to secure the front cover. A bolt, labeled 17, is used to secure the front cover. A bolt, labeled 18, is used to secure the front cover. A bolt, labeled 7, is used to secure the front cover. A bolt, labeled 14, is used to secure the front cover.

**Discover DTS-i**

FIGURA N° 12 : CUBIERTA CLUTCH

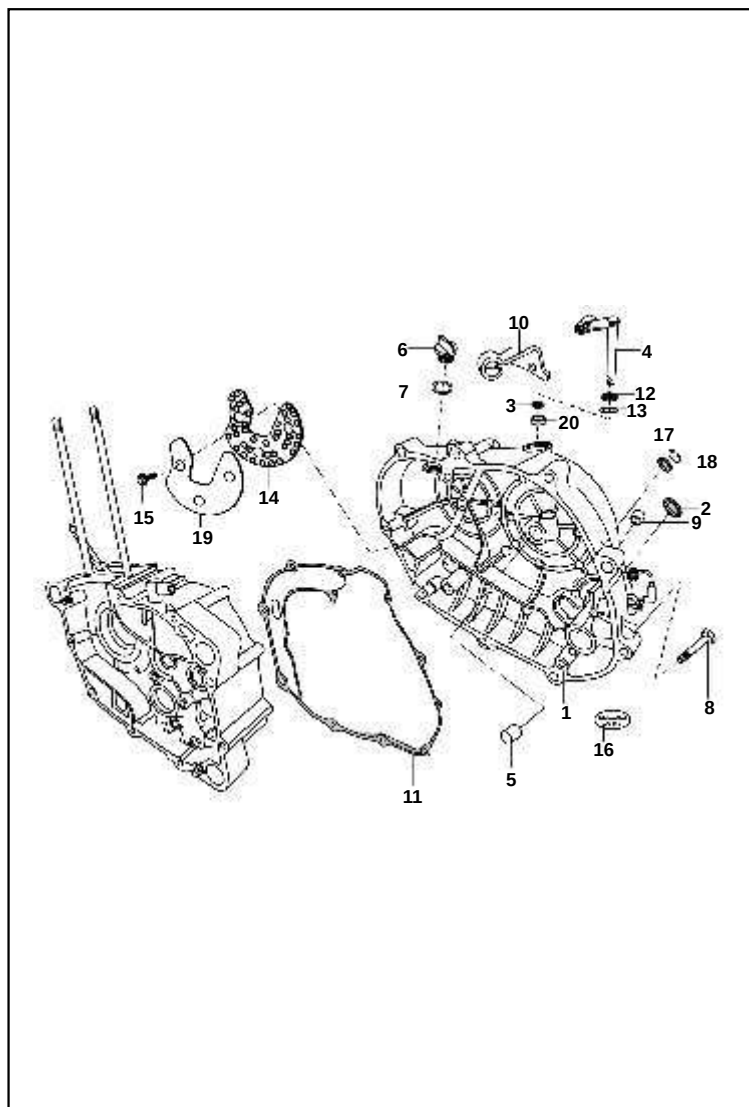

| FIG. N° | PARTE N°   | DESCRIPCIÓN                 | CANT. VEH. |     | OBSERVACIÓN                        |
|---------|------------|-----------------------------|------------|-----|------------------------------------|
|         |            |                             | V01        | V02 |                                    |
| 1       | DS-1011-69 | Carcasa Clutch              | 1          |     |                                    |
|         | 52-JN00-05 | Carcasa Clutch              |            | 1   | Desde Ag. 16-07 (M. # DSGBPC01165) |
| 2       | 39-1917-19 | Retén Carcasa               | 1          | 1   |                                    |
| 3       | 39-1041-19 | Retén Eje Leva de Clutch    | 1          | 1   |                                    |
| 4       | DS-1010-67 | Leva Interna Clutch         | 1          | 1   |                                    |
| 5       | DS-1010-50 | Buje Clutch                 | 1          | 1   |                                    |
|         |            |                             |            |     |                                    |
| 6       | DS-1010-71 | Tapón Aceite                | 1          | 1   |                                    |
| 7       | DH-1011-52 | Anillo Retén                | 1          | 1   |                                    |
| 8       | 39-1075-04 | Tornillo Carcasa            | 8          | 8   |                                    |
| 9       | 39-0999-06 | Pin Guía Carcasa            | 2          | 2   |                                    |
| 10      | DS-1010-73 | Soporte Cable Clutch        | 1          | 1   |                                    |
|         |            |                             |            |     |                                    |
| 11      | DS-1010-72 | Junta Carcasa               | 1          | 1   |                                    |
| 12      | DS-1011-23 | Resorte Leva Interna Clutch | 1          | 1   |                                    |
| 13      | 39-2443-11 | Arandela                    | 1          | 1   |                                    |
| 14      | DS-1012-11 | Antivibrante Carcasa Clutch | 1          | 1   |                                    |
| 15      | 39-2208-04 | Tornillo                    | 3          | 3   |                                    |
|         |            |                             |            |     |                                    |
| 16      | DS-1012-52 | Calcomania Carcasa Clutch   | 1          | 1   |                                    |
| 17      | DG-1014-18 | Visor Nivel Aceite          | 1          | 1   |                                    |
| 18      | DS-1012-15 | Pin Seguridad               | 1          | 1   |                                    |
| 19      | DS-1012-12 | Antivibrante Carcasa Clutch | 1          | 1   |                                    |
| 20      | DS-1012-01 | Buje Eje Carcasa Clutch     | 1          | 1   |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The central part is labeled 1. Surrounding it are various sub-components: 2 (a screw), 3 (a small circular cap), 4 (a large, curved, bowl-shaped part), 5 (a small pin or clip), 6 (a small pin or clip), 7 (a small circular cap), 8 (a small circular cap), 9 (a rectangular plate with a grid pattern), 10 and 13 (two large, curved, bowl-shaped parts), 11 (a small circular cap), and 12 (a small circular cap). Dashed lines indicate the assembly path and alignment of these parts.

**Discover DTS-i**

This diagram illustrates the exploded view of a mechanical assembly, likely a timing belt or gear train component. The parts are numbered as follows:

- 1, 12:** Small circular components, possibly pulleys or gears, located at the bottom left.
- 2:** A large circular component with a textured outer rim, located at the top right.
- 3:** A circular component with a central hub and a flange, located on the left side.
- 4:** A series of five circular components with a serrated outer edge, arranged diagonally across the center.
- 5:** A series of five circular components with a smooth outer edge, arranged diagonally across the center, alternating with the serrated components.
- 6:** A small cylindrical component, located near the bottom right.
- 7:** A small cylindrical component with a central pin, located near the bottom right.
- 8:** A small cylindrical component, located near the bottom right.
- 9:** A small cylindrical component with a central pin, located near the bottom right.
- 10:** A small cylindrical component with a central pin, located near the bottom right.
- 11:** A small circular component, located on the left side.

The components are shown in their relative positions as they would be assembled, with dashed lines indicating the alignment and sequence of assembly.

**Discover DTS-i**

This diagram illustrates the exploded view of a mechanical assembly. The components are numbered as follows:

- 1:** Base plate or housing.
- 2:** A coiled spring.
- 3:** A vertical rod or pin.
- 4:** A small screw or pin.
- 5:** A small cylindrical component.
- 6:** A long central shaft.
- 7:** A large gear.
- 8:** A small washer or spacer.
- 9:** A small cylindrical component.
- 10:** A small ring or washer.
- 11:** A lever arm.
- 12:** A small pin or screw.
- 13:** A small gear or pinion.
- 14:** A small cylindrical component.
- 15:** A coiled spring.
- 16:** A small washer or spacer.

The assembly is shown in a disassembled state to illustrate the relationship between the parts. A dashed box encloses the sub-assembly consisting of parts 1, 2, 3, 4, and 12.

**Discover DTS-i**

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor component. The parts are numbered 1 through 14. The assembly is shown in a disassembled state, with dashed lines indicating the alignment and assembly sequence of the components. Key parts include a central shaft assembly (1, 11, 13, 14), a motor or actuator unit (12), a housing or cover (5), and various seals and fasteners (2, 3, 4, 6, 7, 8, 9, 10). The diagram is enclosed in a dashed rectangular border.

**Discover DTS-i**

This diagram illustrates the exploded view of a car's front end assembly. The main components are labeled as follows:

- 1**: The main front end frame or chassis.
- 2**: A small component, possibly a bolt or nut, located near the top right.
- 3**: A component, likely a headlight or fog light, located on the left side.
- 4**: A rectangular component, possibly a radiator or grille, located in the center.
- 5**: A square component, possibly a filter or a plate, located below the center.
- 6**: A small component, possibly a bolt or nut, located on the left side.
- 7**: A component, possibly a headlight or fog light, located on the left side.
- 8**: A component, possibly a headlight or fog light, located on the right side.
- 9**: A small component, possibly a bolt or nut, located on the left side.
- 10**: A component, possibly a headlight or fog light, located on the left side.
- 11**: The engine or motor, located on the left side.

**Discover DTS-i**

This diagram illustrates the assembly of a mechanical component, likely a control lever or actuator. The main assembly consists of a cylindrical body (1) with a lever arm (2) attached. The lever arm has a curved end (3) and a mounting bracket (4). A separate component (5) is shown being inserted into the lever arm. A small rectangular plate (6) is attached to the lever arm. A separate component (7) is shown being inserted into the lever arm. A separate component (8) is shown being inserted into the lever arm. A separate component (9) is shown being inserted into the lever arm. A separate component (10) is shown being inserted into the lever arm.

**Discover DTS-i**

**Discover DTS-i**


This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 1**: The main housing or frame, which has several mounting points and a central opening.
- 2**: A small rectangular block, likely a bearing or a spacer, positioned to the left of the housing.
- 3**: A cylindrical component with a flange, positioned between the block (2) and the housing (1).
- 4**: Two screws or bolts, one positioned above and one below the housing (1), used for securing it.
- 5**: A large gear or pulley with many teeth, mounted on a shaft that passes through the center of the housing (1).
- 6**: A small pin or dowel, positioned to the left of the housing (1), likely used to align it.

Dashed lines indicate the assembly path and alignment of the parts.

**Discover DTS-i**

FIGURA N° 21 : MAGNETO / C.D.I. / PLATO BOBINAS

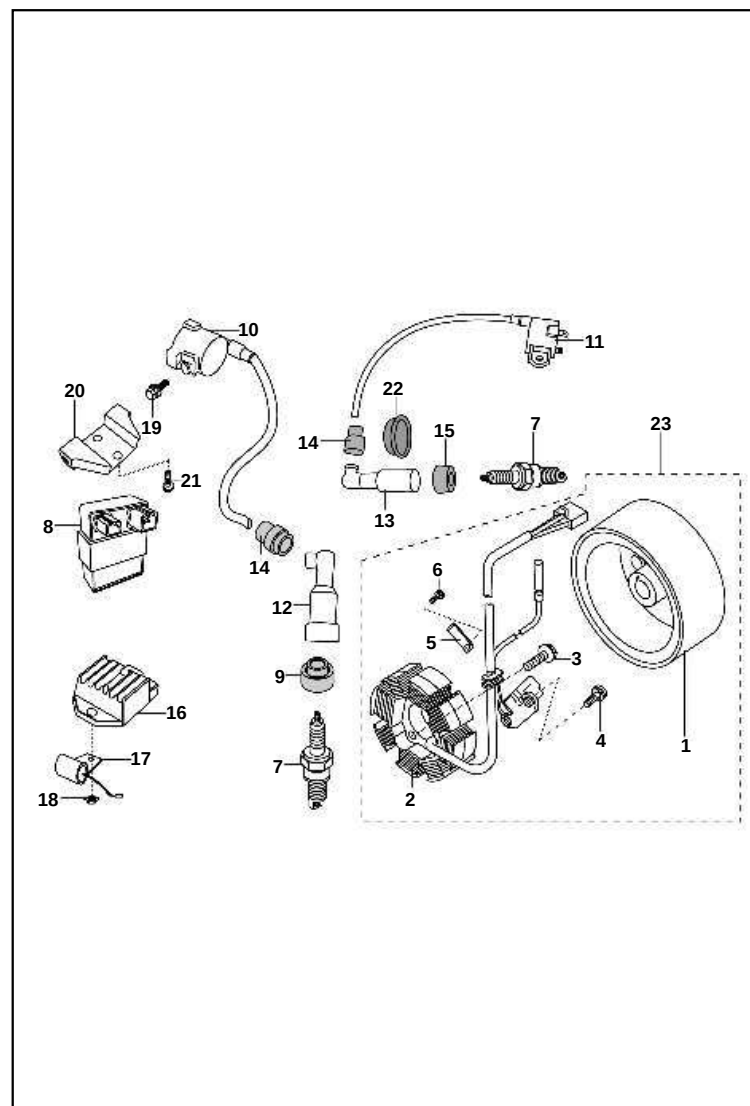

Discover-DTS-I

| FIG. N° | PARTE N°   | DESCRIPCIÓN                 | CANT. VEH. |     | OBSERVACIÓN    |
|---------|------------|-----------------------------|------------|-----|----------------|
|         |            |                             | V01        | V02 |                |
| 1       | DS-1110-17 | Volante                     | 1          | 1   |                |
| 2       | DS-1110-15 | Plato de Bobinas            | 1          | 1   |                |
| 3       | 39-1674-04 | Tornillo                    | 2          | 2   |                |
| 4       | 39-0761-01 | Tornillo                    | 2          | 2   |                |
| 5       | DH-1011-99 | Platina                     | 1          | 1   |                |
| 6       | 39-0746-01 | Tornillo de Estrella 6x13   | 1          | 1   |                |
| 7       | DG-1110-08 | Bujía (Champion RG4HC)      | 2          | 2   |                |
| 8       | DS-1110-43 | C. D. I.                    | 1          | 1   |                |
| 9       | DD-1110-11 | Antivibrante Capuchón Bujía | 1          | 1   |                |
| 10      | DS-1110-29 | Bobina de Alta Izquierda    | 1          |     | Hasta Dic-06   |
|         | DS-1110-36 | Bobina de Alta Izquierda    | 1          | 1   | Desde Enero-07 |
| 11      | DS-1110-30 | Bobina de Alta Derecha      | 1          |     | Hasta Dic-06   |
|         | DS-1110-35 | Bobina de Alta Derecha      | 1          | 1   | Desde Enero-07 |
| 12      | DD-1110-48 | Capuchón Bujía              | 1          | 1   |                |
| 13      | DH-1110-15 | Capuchón Bujía              | 1          | 1   |                |
| 14      | DD-1110-12 | Capuchón Bujía              | 1          | 1   |                |
| 15      | DH-1110-13 | Antivibrante                | 2          | 2   |                |
| 16      | DH-2010-18 | Regulador                   | 1          | 1   |                |
| 17      | DD-2010-24 | Condensador                 | 1          | 1   |                |
| 18      | 39-0798-15 | Tuerca de 6 mm.             | 1          | 1   |                |
| 19      | 39-1902-04 | Tornillo                    | 2          | 2   |                |
| 20      | DJ-1610-67 | Soporte Bobina              | 1          | 1   |                |
| 21      | 39-1680-04 | Tornillos                   | 2          | 2   |                |
| 22      | DH-1110-16 | Antivibrante                | 1          | 1   |                |
| 23      | DS-1110-41 | Magneto Completo            | 1          | 1   |                |

This diagram shows an exploded view of a mechanical assembly, likely a vehicle chassis or suspension component. The parts are represented by dashed lines indicating their relative positions and assembly sequence. The numbered callouts are as follows:

- 1:** A central mounting bracket or plate.
- 2:** A large, curved structural component at the top.
- 3:** A small, rectangular component, possibly a bush or spacer.
- 4:** Multiple small, cylindrical components, likely bolts or pins.
- 5:** A larger, curved component, possibly a control arm or a part of the suspension.
- 6:** A small, circular component, possibly a washer or a small pulley.
- 8:** A small, cylindrical component, likely a pin or a small bolt.
- 9:** A small, rectangular component, possibly a bush or a small plate.

**Discover DTS-i**

This diagram shows an exploded view of a mechanical assembly. The main components are a large curved bracket (1) and a long horizontal bar (4). The assembly includes various fasteners and smaller components labeled with numbers 2 through 7. Callout 2 points to a bolt, 3 to a washer, 5 to a nut, and 6 to a circular plate. Callout 7 points to a small pin or clip. The diagram illustrates how these parts fit together to form the complete assembly.

**Discover DTS-i**

This exploded view diagram illustrates the assembly of a mechanical component, likely a hinge or bracket. The main body is a U-shaped bracket (5) with a curved end. A plate (17) is attached to the curved end via a pin (18) and a bush (4). A handle or lever (9) is attached to the straight end via a pin (10) and a bush (11). A spring (3) is shown in a dashed box, indicating its position relative to the assembly. The spring is connected to a pin (1) and a bush (2). A pin (12) is shown passing through the straight end of the bracket (5) and a bush (6). A pin (13) is shown passing through the curved end of the bracket (5) and a bush (6). A pin (14) is shown passing through the straight end of the bracket (5) and a bush (15). A pin (16) is shown passing through the straight end of the bracket (5) and a bush (16). A pin (19) is shown passing through the straight end of the bracket (5) and a bush (20). A pin (20) is shown passing through the straight end of the bracket (5) and a bush (14).

**Discover DTS-i**

This diagram shows an exploded view of a mechanical assembly. The main component is a long, angled arm (1) with a mounting bracket at one end. A circular disc (5) is positioned near the arm. A detailed inset shows the internal components of the mounting bracket, including a long rectangular block (4), a smaller rectangular piece (11), a cylindrical pin (7), a small circular washer (10), a small rectangular plate (9), a small circular disc (6), and a small cylindrical pin (3). The arm (1) is shown with a small circular component (2) attached to its end. The diagram uses dashed lines to indicate the assembly path and alignment of the parts.

**Discover DTS-i**

The image contains two exploded view diagrams of a mechanical assembly, likely a hinge or bracket. The parts are numbered 1 through 10.

**Left Diagram:** Shows the main assembly (1) with two long, curved arms. Two screws (10) are shown being inserted into the top of the arms. Below the main assembly, a separate component (5) is shown, which is a long, flat plate with a series of holes along one edge. A small pin (6) is shown being inserted into the top of this plate. A small screw (7) is shown being inserted into the bottom of the plate. A small pin (8) is shown being inserted into the bottom of the plate. A small pin (9) is shown being inserted into the bottom of the plate.

**Right Diagram:** Shows the main assembly (2) with two long, curved arms. Two screws (10) are shown being inserted into the top of the arms. A separate component (5) is shown, which is a long, flat plate with a series of holes along one edge. A small pin (6) is shown being inserted into the top of this plate. A small screw (7) is shown being inserted into the bottom of the plate. A small pin (8) is shown being inserted into the bottom of the plate. A small pin (9) is shown being inserted into the bottom of the plate.

**Discover DTS-i**

This exploded view diagram illustrates the assembly of a mechanical component, likely a bracket or support. The parts are numbered as follows:

- 1:** A small cylindrical pin or bush.
- 2:** A U-shaped bracket or connector.
- 3:** A small cylindrical pin or bush.
- 4:** A small cylindrical pin or bush.
- 5:** A large, curved structural component, possibly a bracket or housing.
- 6:** A small cylindrical pin or bush.
- 7:** A small cylindrical pin or bush.
- 8:** A small cylindrical pin or bush.
- 9:** A rectangular plate or insert with two circular holes.
- 10:** A small cylindrical pin or bush.
- 11:** A small cylindrical pin or bush.
- 12:** A small cylindrical pin or bush.
- 13:** A small cylindrical pin or bush.
- 14:** A small cylindrical pin or bush.
- 15:** A small cylindrical pin or bush.
- 16:** A small cylindrical pin or bush.
- 17:** A small cylindrical pin or bush.

The diagram shows the relative positions and assembly sequence of these parts. Dashed lines indicate the alignment and movement of the components during assembly. For example, part 2 is shown being inserted into part 5, and part 9 is shown being inserted into part 5. The pins (1, 3, 4, 6, 7, 8, 10, 11, 12, 13, 14, 15, 16, 17) are shown being inserted into various holes in the components.

**Discover DTS-i**

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 1**: A rectangular base plate with a textured surface.
- 2**: A long, thin cylindrical pin or shaft.
- 3**: A small circular washer or spacer.
- 4**: A coiled spring with hooks at both ends.
- 5**: A short, thick cylindrical sleeve or bush.
- 6**: A long, curved lever or arm with a hook at one end and a mounting hole at the other.
- 7**: A short, thick cylindrical sleeve or bush, similar to part 5.
- 8**: A small cylindrical pin or bolt.
- 9**: A circular nut or cap nut.
- 10**: A circular washer or spacer, similar to part 3.


Dashed lines indicate the assembly path and alignment of the parts.

**Discover DTS-i**

The diagram illustrates two different wheel and tire configurations. The top configuration consists of a wheel (1) with a smooth tire (2) and a rim (3). The bottom configuration consists of a wheel (4) with a treaded tire (5) and a rim (3). The wheels (1) and (4) are shown in a perspective view, while the tires (2) and (5) and rims (3) are shown in a side view.


**Discover DTS-i**

**FIGURA N° 30 : PORTA BANDAS DELANTERO**

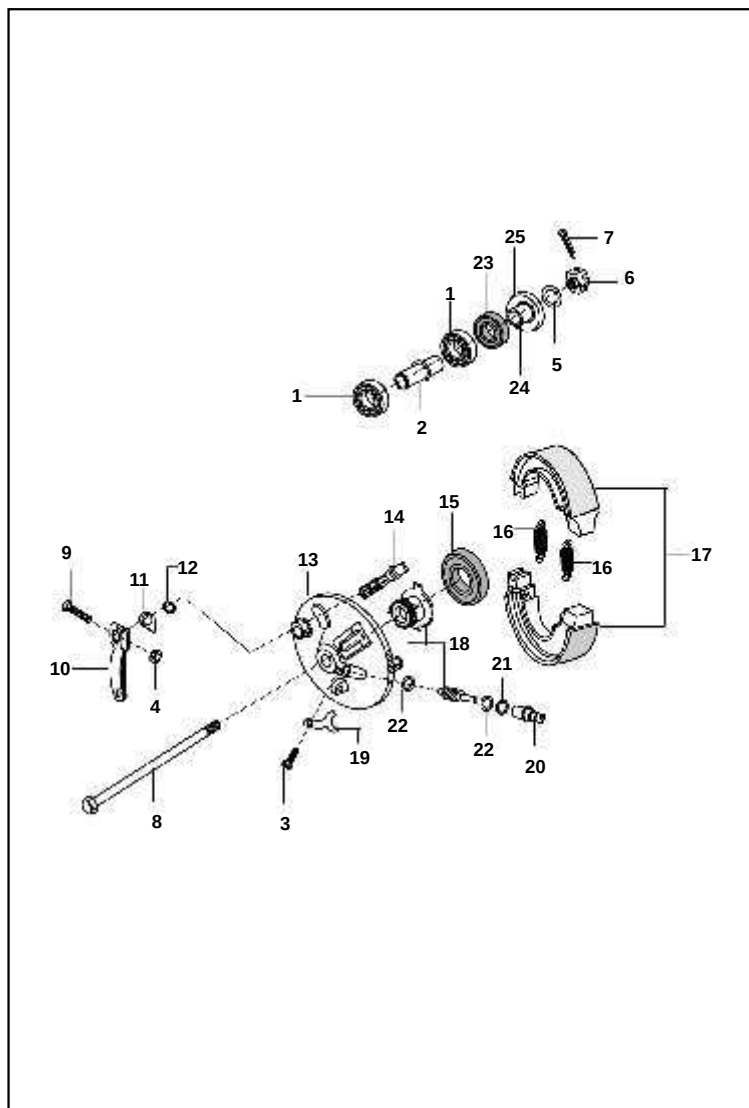

| FIG. N° | PARTE N°   | DESCRIPCIÓN                    | CANT. VEH. |     | OBSERVACIÓN                       |
|---------|------------|--------------------------------|------------|-----|-----------------------------------|
|         |            |                                | V01        | V02 |                                   |
| 1       | 39-2688-20 | Balnera Rin Delantero 6301C3   | 2          | 2   |                                   |
| 2       | 30-1510-32 | Buje Eje Delantero             | 1          | 1   |                                   |
| 3       | 39-0840-01 | Tornillo 3x6                   | 1          | 1   | Ref. Pag. N° 50                   |
| 4       | 39-0798-15 | Tuerca 6 mm.                   | 1          | 1   |                                   |
| 5       | 39-0781-11 | Wasa                           | 1          | 1   |                                   |
| 6       | 39-0786-15 | Tuerca                         | 1          | 1   |                                   |
| 7       | 39-0787-08 | Pin Pasador                    | 1          | 1   |                                   |
| 8       | DJ-1510-81 | Eje Rueda Delantera            | 1          | 1   |                                   |
| 9       | 39-0775-04 | Tornillo Hexágono 6x30         | 1          | 1   |                                   |
| 10      | DD-1510-08 | Leva Freno                     | 1          |     | Hasta Dic-06                      |
|         | JA-1316-07 | Leva Freno                     | 1          | 1   | Desde Enero-07                    |
| 11      | DD-1510-09 | Arandela                       | 1          | 1   |                                   |
| 12      | 30-1510-38 | Pin                            | 1          | 1   |                                   |
| 13      | DS-1510-40 | Porta Bandas Delantero         | 1          |     | Hasta Dic-06                      |
|         | JA-1316-05 | Porta Bandas Delantero         | 1          |     | Desde Enero-07 Hasta Ag.15-07     |
|         | DS-1510-87 | Porta Bandas Delantero         |            | 1   | Desde Ag. 16-07 (M. # DSGBC01165) |
| 14      | 30-1510-04 | Leva Freno                     | 1          | 1   |                                   |
| 15      | 30-1510-35 | Retén Campana Delantera        | 1          | 1   |                                   |
| 16      | 30-1510-69 | Resorte Bandas Freno           | 2          | 2   |                                   |
| 17      | 30-1511-05 | Banda de Freno Trasero         | 1          | 1   |                                   |
| 18      | 36-DS15-02 | Kit Piñón Velocímetro          | 1          | 1   | Ref. Pag. N° 51                   |
| 19      | 30-1511-18 | Platina                        | 1          | 1   |                                   |
| 20      | 30-1511-19 | Buje                           | 1          |     | Hasta Dic-06                      |
|         | JA-1316-06 | Buje                           | 1          | 1   | Desde Enero-07                    |
| 21      | 39-1013-21 | Anillo Retén                   | 1          | 1   |                                   |
| 22      | 30-1510-42 | Arandela Piñón Velocímetro     | 2          | 2   |                                   |
| 23      | 30-1510-33 | Retén Eje Delantero            | 1          | 1   |                                   |
| 24      | DS-1510-42 | Buje Campana Delantera         | 1          | 1   |                                   |
| 25      | DS-1510-56 | Guardapolvo                    | 1          | 1   |                                   |
| 26      | JA-1316-03 | Buje Montaje Cable Velocímetro | 1          | 1   | No Ilustrado                      |
| 27      | 39-0900-12 | Arandela                       | 1          | 1   | No Ilustrado                      |

**FIGURA N° 31 : PORTA BANDAS TRASERO (1/2)**

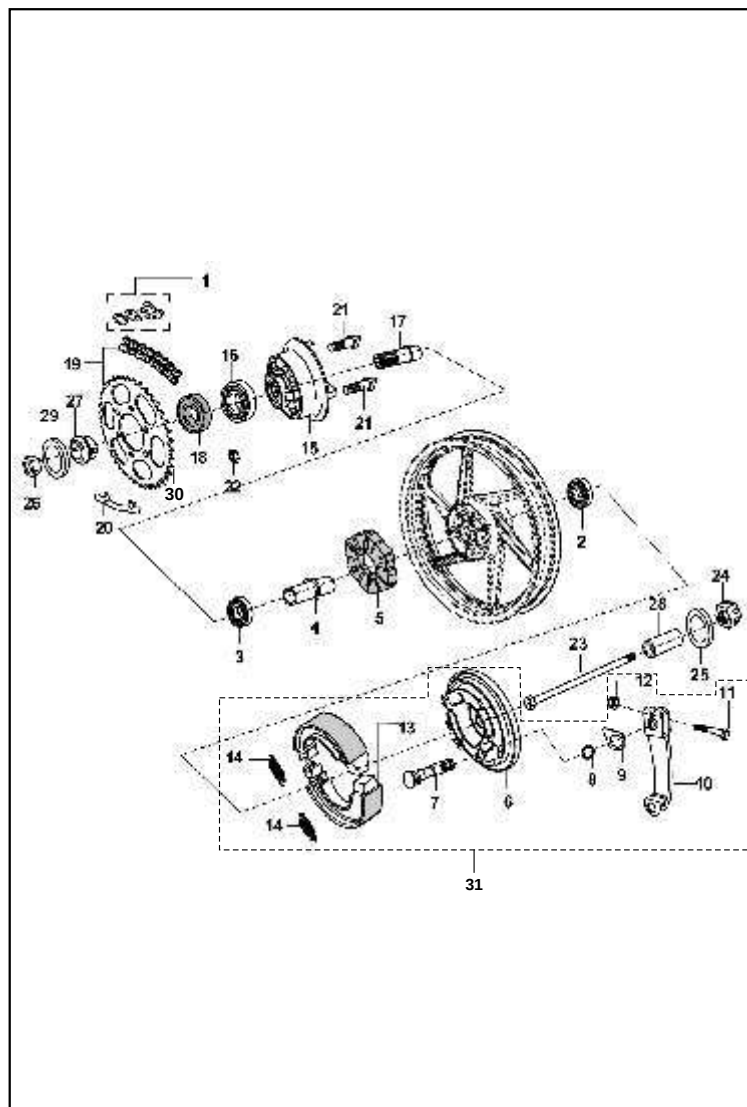

| FIG. N° | PARTE N°   | DESCRIPCIÓN                 | CANT. VEH. |     | OBSERVACIÓN                        |
|---------|------------|-----------------------------|------------|-----|------------------------------------|
|         |            |                             | V01        | V02 |                                    |
| 1       | DJ-1510-53 | Empate Cadena               | 1          | 1   |                                    |
| 2       | 39-2686-20 | Balinera Rin Trasero 6202C3 | 1          | 1   |                                    |
| 3       | 39-2687-20 | Balinera Rin Trasero 6302C3 | 1          | 1   |                                    |
| 4       | 30-1510-75 | Buje Campana Trasera        | 1          | 1   |                                    |
| 5       | DS-1510-70 | Antivibrante Campana        | 1          | 1   |                                    |
| 6       | DS-1510-69 | Porta Bandas Trasero (Sólo) | 1          |     |                                    |
|         | JN-1316-00 | Porta Bandas Trasero (Sólo) |            | 1   | Desde Ag. 16-07 (M. # DSGBPC01165) |
| 7       | 30-1510-12 | Leva Freno                  | 1          | 1   |                                    |
| 8       | 30-1510-38 | Pin                         | 1          | 1   |                                    |
| 9       | 30-1510-05 | Arandela                    | 1          | 1   |                                    |
| 10      | DJ-1510-59 | Leva Freno Trasero          | 1          | 1   |                                    |
| 11      | 39-2447-04 | Tornillo                    | 1          | 1   |                                    |
| 12      | 39-0798-15 | Tuerca 6 mm.                | 1          | 1   |                                    |
| 13      | 30-1511-05 | Banda de Freno Trasero      | 1          | 1   |                                    |
| 14      | 30-1510-69 | Resorte Bandas Freno        | 1          | 1   |                                    |
| 15      | DS-1510-68 | Porta Sprocket              | 1          | 1   |                                    |
| 16      | 39-2240-20 | Balinera Porta Sprocket     | 1          | 1   |                                    |
| 17      | DJ-1510-33 | Leva                        | 1          | 1   |                                    |
| 18      | 30-1510-82 | Retén Porta Sprocket        | 1          | 1   |                                    |
| 19      | 36-DS40-11 | Sprocket (45T) y Cadena     | 1          |     | Hasta Dic-06                       |
|         | 36-DS40-12 | Sprocket (42T) y Cadena     | 1          | 1   | Desde Enero-07                     |
|         | 36-DJ15-02 | Sprocket (44T) y Cadena     | 1          | 1   | Opcional                           |
| 20      | 30-1510-81 | Laina Sprocket              | 3          | 3   |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |
|         |            |                             |            |     |                                    |

**Discover DTS-i**

This diagram illustrates the exploded view of a rear suspension assembly. The components are numbered as follows:

- 1**: Upper control arm
- 2**: Upper control arm ball joint
- 3**: Lower control arm
- 4**: Lower control arm ball joint
- 5**: Lower control arm bush
- 6**: Lower control arm bush
- 7**: Shock absorber
- 8**: Shock absorber mounting bracket
- 9**: Shock absorber mounting bracket
- 10**: Shock absorber mounting bracket
- 11**: Shock absorber mounting bracket
- 12**: Shock absorber mounting bracket
- 13**: Shock absorber mounting bracket
- 14**: Shock absorber mounting bracket
- 15**: Shock absorber mounting bracket
- 16**: Shock absorber mounting bracket
- 17**: Shock absorber mounting bracket

**Discover DTS-i**

This exploded view diagram illustrates the assembly of a motorcycle rearview mirror. The components are numbered as follows:

- 1:** Main mirror arm.
- 2:** Small connector pin.
- 3:** Mounting bracket.
- 4:** Electrical switch assembly.
- 5:** Base mounting plate.
- 6:** Central pivot joint.
- 7:** Secondary mirror arm.
- 8:** Cable or hose connector.
- 9:** Adjustment lever.
- 10:** Mounting plate for the base.
- 11:** Small pin/bush.
- 12:** Small pin/bush.
- 13:** Small pin/bush.
- 14:** Cylindrical mounting component.
- 15:** Long cylindrical adjustment rod.
- 16:** Secondary mirror arm.
- 17:** Small circular component.
- 18:** Small pin/bush.
- 19:** Small pin/bush.
- 20:** Mirror head.
- 21:** Mirror head.
- 22:** Small circular component.
- 23:** Small pin/bush.
- 24:** Small pin/bush.
- 25:** Mounting plate for the base.
- 26:** Small pin/bush.
- 27:** Small pin/bush.
- 28:** Small pin/bush.
- 29:** Small pin/bush.
- 30:** Small pin/bush.


Dashed lines indicate the assembly sequence and alignment of the parts.

**Discover DTS-i**

This exploded view diagram illustrates the assembly of a motorcycle engine. The components are numbered 1 through 30. Dashed lines indicate the assembly sequence and fitment of the parts. Key sub-assemblies shown include the cylinder and piston (14, 15, 16, 17, 18), the crankshaft (19), the timing chain drive (20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30), and the valve train (3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13). The diagram shows how these major components are joined together to form the complete engine block.


**Discover DTS-i**

FIGURA N° 34 : SUSPENSIÓN DELANTERA

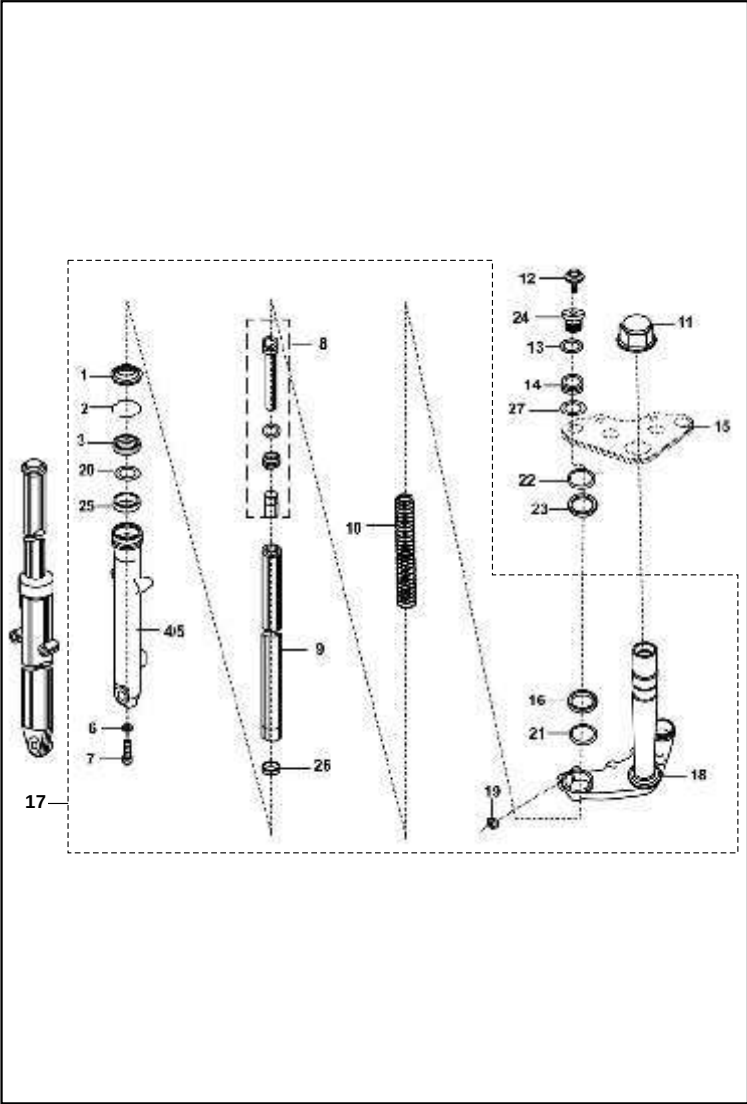

| FIG. N° | PARTE N°   | DESCRIPCIÓN                       | CANT. VEH. |     | OBSERVACIÓN                        |
|---------|------------|-----------------------------------|------------|-----|------------------------------------|
|         |            |                                   | V01        | V02 |                                    |
| 1       | DJ-1810-89 | Guardapolvo Telescópico           | 2          | 2   |                                    |
| 2       | DJ-1810-88 | Pin seguridad                     | 2          | 2   |                                    |
| 3       | DJ-1810-87 | Retén Tubo Telescópico            | 2          | 2   |                                    |
| 4       | DS-1810-42 | Camisa Tubo Telescópico Izq.      | 1          |     |                                    |
|         | DS-1811-20 | Camisa Tubo Telescópico Izq.      | 1          |     | Desde Ag. 16-07 (M. # DSGBPC01165) |
| 5       | DS-1810-43 | Camisa Tubo Telescópico Der.      | 1          |     |                                    |
|         | DS-1811-21 | Camisa Tubo Telescópico Der.      | 1          |     | Desde Ag. 16-07 (M. # DSGBPC01165) |
| 6       | 31-1811-05 | Junta                             | 2          | 2   |                                    |
| 7       | 31-1811-06 | Tornillo Camisa Telescópico       | 2          | 2   |                                    |
| 8       | DS-1810-77 | Cilindro Interno Tubo Telescópico | 2          | 2   |                                    |
| 9       | DS-1810-83 | Tubo Telescópico                  | 2          | 2   |                                    |
| 10      | DS-1810-84 | Resorte Tubo Telescópico          | 2          | 2   |                                    |
| 11      | DS-1810-15 | Tapón Tubo Telescópico            | 1          | 1   |                                    |
| 12      | DS-1810-75 | Tornillo Tapón Telescópico        | 2          | 2   |                                    |
| 13      | 31-1811-02 | Anillo Retén                      | 2          | 2   |                                    |
| 14      | DS-1810-85 | Buje Separador Cabeza Espiga      | 2          | 2   |                                    |
| 15      | DS-1810-05 | Cabeza Espiga                     | 1          | 1   |                                    |
| 16      | DJ-1810-43 | Arandela Espiga                   | 2          | 2   |                                    |
| 17      | DS-1810-80 | Suspensión Delantera              | 1          |     |                                    |
|         | 52-DS02-65 | Suspensión Delantera              | 1          |     | Alt. DS-1811-17                    |
| 18      | DS-1810-20 | Espiga Central                    | 1          | 1   |                                    |
| 19      | 39-0789-12 | Arandela Presión                  | 2          | 2   |                                    |
| 20      | 39-1714-04 | Tornillo                          | 2          | 2   |                                    |
| 21      | DS-1810-72 | Arandela                          | 2          | 2   |                                    |
| 22      | DJ-1810-85 | Junta Soporte Farola              | 2          | 2   |                                    |
| 23      | DS-1810-17 | Espaciador de Nylon               | 2          | 2   |                                    |
| 24      | DF-1810-85 | Tapón Tubo Telescópico            | 2          | 2   |                                    |
| 25      | DS-1810-12 | Tornillo Telescópico              | 2          | 2   |                                    |
| 26      | DS-1810-70 | Buje Guía Tubo Telescópico        | 2          | 2   |                                    |
| 27      | DS-1810-71 | Buje Guía Tubo Telescópico        | 2          | 2   |                                    |
| 28      | DS-1810-86 | Arandela                          | 2          | 2   |                                    |


FIGURA N° 35 : PARTES PINTADAS Y CALCOMANÍAS (1/2)

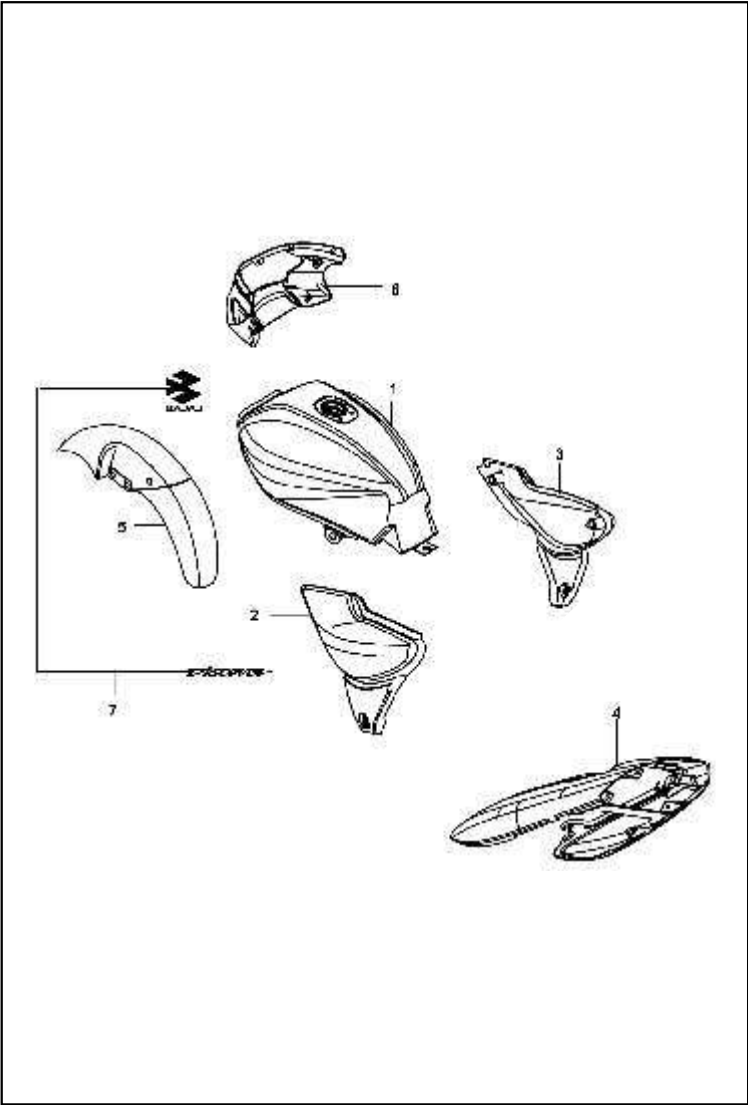

Discover DTS-I

| FIG. N° | PARTE N°   | DESCRIPCIÓN                    | CANT. VEH. |     | OBSERVACIÓN             |
|---------|------------|--------------------------------|------------|-----|-------------------------|
|         |            |                                | V01        | V02 |                         |
| 1       | DS-7101-23 | Tanque Gasolina sin Pintar     | 1          |     | Para Medidor DS-2010-55 |
|         |            |                                |            |     | Hasta Dic-06            |
|         | DS-7114-23 | Tanque Gasolina sin Pintar     | 1          | 1   | Para Medidor DS-2010-79 |
|         |            |                                |            |     | Desde Enero-07          |
|         | DS-7101-1C | Tanque Gas. Aluminio con Calc. | 1          |     |                         |
|         | DS-7101-X6 | Tanque Gas. Azul con Calc.     | 1          |     |                         |
|         | DS-7101-2Q | Tanque Gas. Naranja con Calc.  | 1          |     |                         |
|         | DS-7101-X3 | Tanque Gas. Negro con Calc.    | 1          |     |                         |
|         | DS-7101-X4 | Tanque Gas. Rojo con Calc.     | 1          |     |                         |
|         |            |                                |            |     |                         |
| 2       | 52-DS00-92 | Tapa Lateral Izq. sin Pintar   | 1          | 1   |                         |
|         | DS-7303-1C | Tapa Lateral Izq. Aluminio     | 1          |     |                         |
|         | DS-7303-X6 | Tapa Lateral Izq. Azul         | 1          |     |                         |
|         | DS-7303-2Q | Tapa Lateral Izq. Naranja      | 1          |     |                         |
|         | DS-7303-X3 | Tapa Lateral Izq. Negra        | 1          |     |                         |
|         | DS-7303-X4 | Tapa Lateral Izq. Roja         | 1          |     |                         |
|         |            |                                |            |     |                         |
| 3       | 52-DS00-93 | Tapa Lateral Der. sin Pintar   | 1          | 1   |                         |
|         | DS-7304-X6 | Tapa Lateral Der. Azul         | 1          |     |                         |
|         | DS-7304-1C | Tapa Lateral Der. Gris         | 1          |     |                         |
|         | DS-7304-2Q | Tapa Lateral Der. Naranja      | 1          |     |                         |
|         | DS-7304-X3 | Tapa Lateral Der. Negra        | 1          |     |                         |
|         | DS-7304-X4 | Tapa Lateral Der. Roja         | 1          |     |                         |
|         |            |                                |            |     |                         |
| 4       | DS-1610-66 | Cubierta Sillín sin Pintar     | 1          | 1   |                         |
|         | DS-7301-1C | Cubierta Sillín Aluminio       | 1          |     |                         |
|         | DS-7301-X6 | Cubierta Sillín Azul           | 1          |     |                         |
|         | DS-7301-2Q | Cubierta Sillín Naranja        | 1          |     |                         |
|         | DS-7301-X3 | Cubierta Sillín Negra          | 1          |     |                         |
|         | DS-7301-X4 | Cubierta Sillín Roja           | 1          |     |                         |
|         |            |                                |            |     |                         |

FIGURA N° 35 : PARTES PINTADAS Y CALCOMANÍAS (2/2)

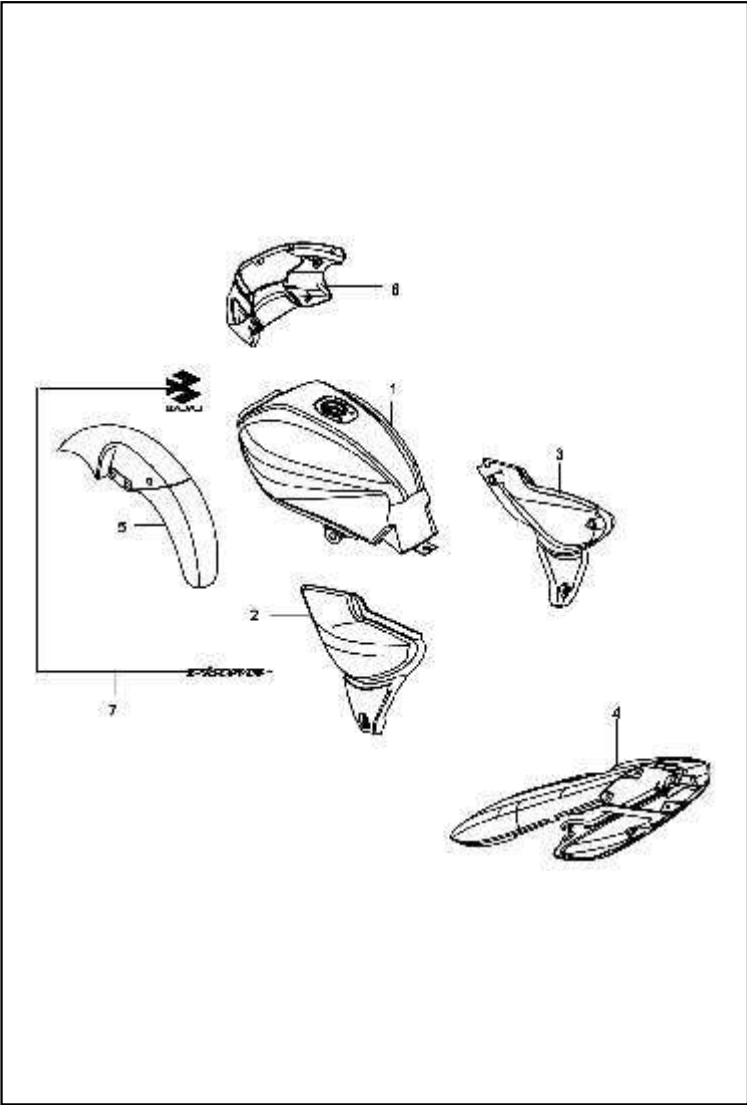

| FIG. N° | PARTE N°   | DESCRIPCIÓN                          | CANT. VEH. |     | OBSERVACIÓN                        |
|---------|------------|--------------------------------------|------------|-----|------------------------------------|
|         |            |                                      | V01        | V02 |                                    |
| 5       | 52-DS00-94 | Guardabarro Del. sin Pintar          | 1          | 1   |                                    |
|         | DS-7302-1C | Guardabarro Del. Aluminio            | 1          |     |                                    |
|         | DS-7302-X6 | Guardabarro Del. Azul                | 1          |     |                                    |
|         | DS-7302-2Q | Guardabarro Del. Naranja             | 1          |     |                                    |
|         | DS-7302-X3 | Guardabarro Del. Negro               | 1          |     |                                    |
|         | DS-7302-X4 | Guardabarro Del. Rojo                | 1          |     |                                    |
|         |            |                                      |            |     |                                    |
| 6       | DS-1810-23 | Carenaje Farola sin Pintar           | 1          | 1   |                                    |
|         | DS-7401-1C | Carenaje Farola Aluminio             | 1          |     |                                    |
|         | DS-7401-X6 | Carenaje Farola Azul                 | 1          |     |                                    |
|         | DS-7401-2Q | Carenaje Farola Naranja              | 1          |     |                                    |
|         | DS-7401-X3 | Carenaje Farola Negro                | 1          |     |                                    |
|         | DS-7401-X4 | Carenaje Farola Rojo                 | 1          |     |                                    |
|         |            |                                      |            |     |                                    |
| 7       | 36-DS40-03 | Kit Calcomanía Negro - Gris          | 1          |     | Hasta Dic - 06                     |
|         | 36-DS40-04 | Kit Calcomanía Negro - Magenta       | 1          |     | Hasta Dic - 06                     |
|         | 36-DS40-05 | Kit Calcomanía Negro - Azul          | 1          |     | Hasta Dic - 06                     |
|         | 36-DS40-06 | Kit Calcomanía Azul Claro            | 1          |     | Hasta Dic - 06                     |
|         | 36-DS40-07 | Kit Calcomanía Rojo Claro            | 1          |     | Hasta Dic - 06                     |
|         |            |                                      |            |     |                                    |
|         |            |                                      |            |     |                                    |
|         | 36-DS40-15 | Kit Calcomanía Negra-Gris            | 1          |     | Desde Enero-07 Hasta Ag.15-07      |
|         | 36-DS40-16 | Kit Calcomanía Negra-Azul            | 1          |     | Desde Enero-07 Hasta Ag.15-07      |
|         | 36-DS40-17 | Kit Calcomanía Negra-Roja            | 1          |     | Desde Enero-07 Hasta Ag.15-07      |
|         | 36-DS40-18 | Kit Calcomanía Rojo-Rojo Claro       | 1          |     | Desde Enero-07 Hasta Ag.15-07      |
|         | 36-DS40-19 | Kit Calcomanía Azul-Azul Claro       | 1          |     | Desde Enero-07 Hasta Ag.15-07      |
|         |            |                                      |            |     |                                    |
|         | DS-1410-70 | Kit Calc. Tanque Azul-Azul Oscuro    | 1          |     | Desde Ag. 16-07 (M. # DSGBPC01165) |
|         | DS-1410-73 | Kit Calc. Tanque Rojo-Rojo Oscuro    | 1          |     | Desde Ag. 16-07 (M. # DSGBPC01165) |
|         | DS-1612-71 | Kit Calc. Tapa Lat. Azul-Azul Oscuro | 1          |     | Desde Ag. 16-07 (M. # DSGBPC01165) |
|         | DS-1612-76 | Kit Calc. Tapa Lat. Rojo-Rojo Oscuro | 1          |     | Desde Ag. 16-07 (M. # DSGBPC01165) |
|         |            |                                      |            |     |                                    |

This exploded view diagram illustrates the assembly of a portable power station. The main unit is a large, rounded rectangular device. Key components and their assembly points are indicated by numbered callouts:


- 1**: A circular panel or cover for the top of the unit.
- 2**: A screw used to secure the top panel.
- 3**: A small component, possibly a gasket or spacer, located between the top panel and the unit.
- 4**: A dashed box containing a detailed exploded view of the internal assembly, including a fan (6), a motor or pump (7), and various mounting brackets and screws (8, 12, 13).
- 5**: A small component, possibly a sensor or indicator, located on the top panel.
- 10**: A small, rectangular component, possibly a battery cell or a connector, located on the side of the unit.
- 11**: A cable or hose connected to the bottom of the unit.
- 14**: A small component, possibly a connector or a plug, located on the bottom of the unit.
- 15**: A small, rectangular component, possibly a battery cell or a connector, located on the side of the unit.
- 9**: A dashed box containing a detailed exploded view of the bottom assembly, including a motor or pump (11), a fan (12), and various mounting brackets and screws (13, 14, 15).

**Discover DTS-i**

This diagram illustrates the assembly of a boat's transom. It shows the motor, motor plate, motor bracket, motor plate bracket, motor plate bracket bracket, motor plate bracket bracket bracket, motor plate bracket bracket bracket bracket, and motor plate bracket bracket bracket bracket bracket. The components are numbered 1 through 8, corresponding to the parts list on the right.

**Discover DTS-i**

**FIGURA N° 38 : VELOCÍMETRO**

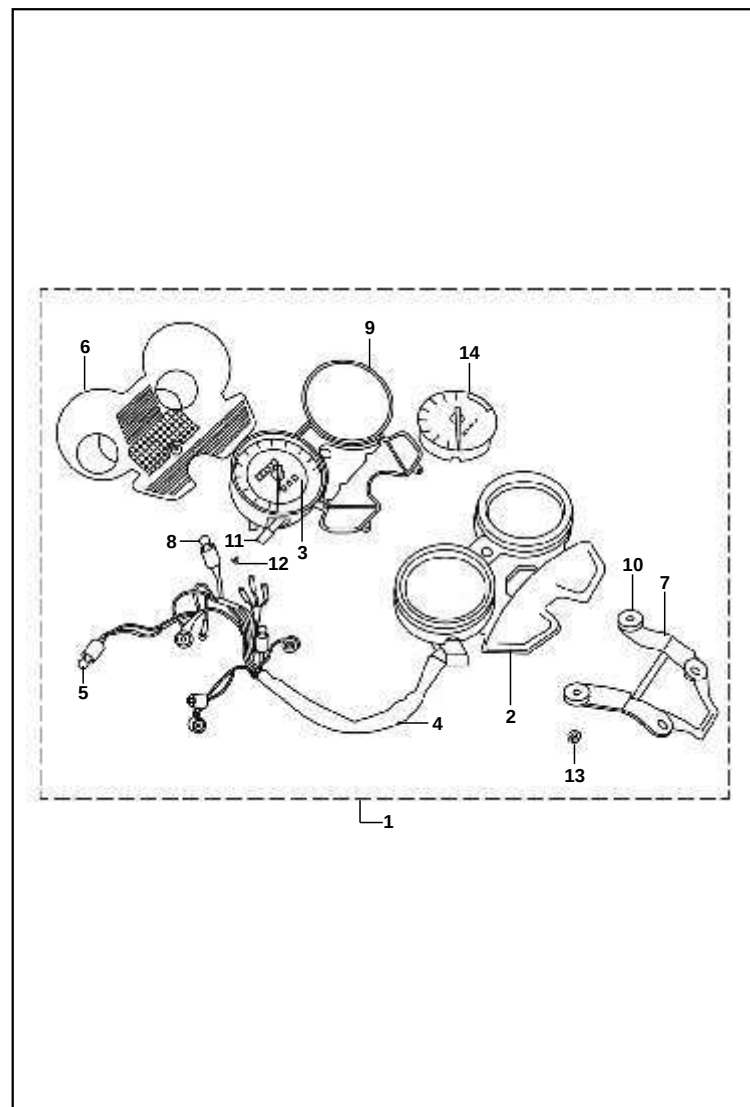[illegible]

This diagram illustrates the assembly of a vehicle suspension component, likely a control arm or steering knuckle. The components are numbered as follows:

- 1**: A long, curved metal arm with a ball joint at one end and a mounting bracket at the other.
- 2**: A shorter, curved metal arm with a ball joint at one end and a mounting bracket at the other.
- 3**: A shorter, curved metal arm with a ball joint at one end and a mounting bracket at the other.
- 4**: A dashed rectangular outline representing the main housing or frame.
- 5**: A long, straight metal rod or pin, likely a shock absorber or strut rod.
- 6**: A small, curved metal pin or clip used for securing the assembly.

**Discover DTS-i**


This diagram illustrates the exploded view of a car door latch assembly. The main components are labeled with numbers 1 through 5:

- 1**: The main door latch body, which includes a handle and a locking mechanism.
- 2**: A circular component, likely a pin or a bush, located near the bottom of the latch body.
- 3**: A small, dark, cylindrical component, possibly a pin or a bush, located near the top of the latch body.
- 4**: A long, thin, cylindrical component, likely a pin or a bush, located near the bottom of the latch body.
- 5**: A long, thin, cylindrical component, likely a pin or a bush, located near the top of the latch body.

The diagram shows the assembly of these components into the main latch body (1). The components are shown in their relative positions, indicating how they fit together.

**Discover DTS-i**

FIGURA N° 41 : FAROLA Y CARENAJE FAROLA

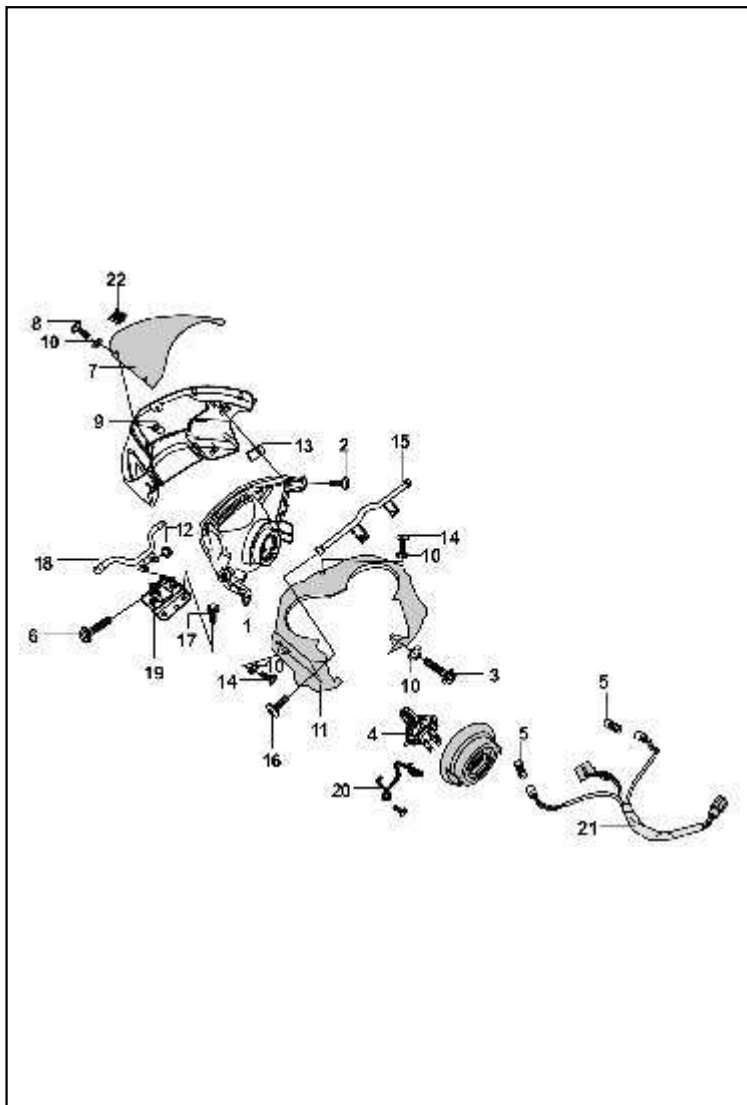

| FIG. No. | PARTE No.  | DESCRIPCIÓN                    | CANT. VEH. |     | OBSERVACIÓN |
|----------|------------|--------------------------------|------------|-----|-------------|
|          |            |                                | V01        | V02 |             |
| 1        | DS-2010-35 | Unidad de Farola               | 1          | 1   |             |
| 2        | 39-1778-02 | Tornillo Farola                | 4          | 4   |             |
| 3        | 39-0716-01 | Tornillo Carenaje Farola       | 2          | 2   |             |
| 4        | CL-2010-23 | Bombillo Farola 12V 35/35W-HS1 | 1          | 1   |             |
| 5        | DJ-2010-72 | Bombillo Piloto 12V 5W         | 2          | 2   |             |
|          |            |                                |            |     |             |
| 6        | 39-1961-04 | Tornillo Soporte Carenaje      | 1          | 1   |             |
| 7        | DS-1810-66 | Visor Carenaje                 | 1          | 1   |             |
| 8        | DF-1810-98 | Tornillo Visera                | 4          | 4   |             |
| 9        | DL-1810-10 | Tuerca                         | 4          | 4   |             |
| 10       | 39-2141-24 | Arandela                       | 9          | 9   |             |
|          |            |                                |            |     |             |
| 11       | DS-1810-31 | Carenaje Farola                | 1          | 1   |             |
| 12       | 39-0817-15 | Tuerca                         | 1          | 1   |             |
| 13       | 35-1610-60 | Platina                        | 5          | 5   |             |
| 14       | 39-1766-01 | Tornillo                       | 3          | 3   |             |
| 15       | DS-1810-45 | Soporte Carenaje Farola        | 1          | 1   |             |
|          |            |                                |            |     |             |
| 16       | DG-1611-21 | Tornillo                       | 2          | 2   |             |
| 17       | 39-1943-04 | Tornillo                       | 2          | 2   |             |
| 18       | DS-1810-29 | Soporte Carenaje               | 1          | 1   |             |
| 19       | DS-1810-27 | Soporte Farola                 | 1          | 1   |             |
| 20       | DS-2010-36 | Pin Bombillo Farola            | 1          | 1   |             |
|          |            |                                |            |     |             |
| 21       | DS-2010-39 | Instalación Farola             | 1          | 1   |             |
| 22       | DS-1810-69 | Calcomanía "BAJAJ"             | 1          | 1   |             |
|          |            |                                |            |     |             |
|          |            |                                |            |     |             |
|          |            |                                |            |     |             |
|          |            |                                |            |     |             |
|          |            |                                |            |     |             |

**Discover DTS-i**

This exploded view diagram illustrates the assembly of a bicycle seat. The components are numbered as follows:

- 1**: The main seat body.
- 2**: A small circular cap or plug.
- 3**: A small rectangular component, likely a spring or spacer.
- 4**: A small circular cap or plug.
- 5**: A small rectangular component, likely a spring or spacer.
- 6**: A small circular cap or plug.
- 7**: A small rectangular component, likely a spring or spacer.
- 8**: A small rectangular component, likely a spring or spacer.
- 9**: A small rectangular component, likely a spring or spacer.
- 10**: A small rectangular component, likely a spring or spacer.
- 11**: A small rectangular component, likely a spring or spacer.
- 12**: A small rectangular component, likely a spring or spacer.
- 13**: A small rectangular component, likely a spring or spacer.
- 14**: A small circular cap or plug.
- 15**: A small rectangular component, likely a spring or spacer.

The diagram shows the seat body (1) with various internal components (2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15) and a small circular cap (2) being inserted into the seat body. The seat body is shown in a dashed outline, indicating its position relative to the other components.

**Discover DTS-i**

This exploded view diagram illustrates the assembly of a vehicle's rear suspension and drivetrain. The components are labeled as follows:

- 1:** Rear differential housing.
- 2:** Differential pinion shaft.
- 3:** Differential pinion gear.
- 4:** Rear axle flange.
- 5:** Rear axle nut.
- 6:** Rear axle tube.
- 7:** Rear suspension arm.
- 8:** Suspension arm bushing.
- 9:** Suspension arm bracket.
- 10:** Rear suspension spring.
- 11/12:** Rear suspension spring plate.
- 13:** Rear suspension spring.
- 14:** Rear suspension spring.
- 15:** Rear suspension spring.
- 16:** Rear suspension spring.
- 17:** Rear suspension spring.
- 18:** Rear suspension spring.
- 20:** Rear suspension spring.

**Discover DTS-i**

**Discover DTS-i**

This exploded view diagram illustrates the assembly of a motorcycle seat. The components are numbered as follows:

- 1**: The main seat cushion, shown in its folded position.
- 2**: A small pin or clip used to secure the front of the seat cushion.
- 3**: A small rectangular component, likely a hinge or support piece.
- 4**: A rectangular plate or bracket that serves as a base for the seat.
- 5**: The seat backrest, featuring a ribbed design for ventilation.
- 6**: A bolt or screw used to attach the backrest to the main seat frame.
- 7**: A small pin or clip used to secure the bottom of the backrest.
- 8**: A small rectangular component, likely a hinge or support piece.
- 9**: A larger rectangular plate or bracket that serves as a base for the backrest.
- 10**: A small pin or clip used to secure the top of the backrest.

**Discover DTS-i**

# LISTA DE KITS

| Item | Referencia | Descripción              | Contenido del Kit |                          |       |
|------|------------|--------------------------|-------------------|--------------------------|-------|
|      |            |                          | Referencia        | Descripción              | Cant. |
| 1    | 36-DS10-01 | Kit Anillos Retén Culata | 39-2391-21        | Anillo Retenedor         | 2     |
|      |            |                          | 39-1283-21        | Anillo Retenedor         | 2     |
| 2    | 36-DS10-02 | Kit Válvulas             | DS-1010-23        | Válvula de Admisión      | 1     |
|      |            |                          | DS-1010-24        | Válvula de Escape        | 1     |
| 3    | 36-DS10-03 | Kit Resortes Válvula     | DS-1010-83        | Arandela Resorte Válvula | 2     |
|      |            |                          | DS-1011-10        | Resorte Interno Válvula  | 2     |
|      |            |                          | DS-1011-11        | Resorte Externo Válvula  | 2     |
|      |            |                          | DH-1010-26        | Arandela Resorte Válvula | 2     |
| 4    | 36-DS10-04 | Kit Guías Cadenilla      | DS-1010-12        | Guía Cadenilla           | 1     |
|      |            |                          | DS-1010-11        | Guía Cadenilla           | 1     |
| 5    | 36-DS10-07 | Kit Moñón Crank          | DH-1011-85        | Resorte Moñón Crank      | 1     |
|      |            |                          | DH-1010-68        | Balín                    | 1     |
|      |            |                          | DS-1012-08        | Moñón Crank              | 1     |
|      |            |                          | DH-1013-20        | Tornillo                 | 1     |
| 6    | 36-DS12-01 | Kit Diafragma Carburador | DS-1210-55        | Pistón Diafragma         | 1     |
|      |            |                          | DS-1210-73        | Resorte Diafragma        | 1     |
|      |            |                          | DS-1210-57        | Diafragma                | 1     |
| 7    | 36-DS12-02 | Kit Difusor Carburador   | DS-1210-68        | Boquerel                 | 1     |
|      |            |                          | DS-1210-67        | Porta Boquerel           | 1     |
|      |            |                          | DS-1210-69        | Boquerel de Baja         | 1     |

## LISTA DE KITS

| Item | Referencia | Descripción                           | Contenido del Kit |                                   |       |
|------|------------|---------------------------------------|-------------------|-----------------------------------|-------|
|      |            |                                       | Referencia        | Descripción                       | Cant. |
| 8    | 36-DS12-03 | Kit Tornillos Carburador              | DS-1210-73        | Resorte Tornillo Carburador       | 1     |
|      |            |                                       | DS-1210-72        | Tornillo Ajuste Carburacion       | 1     |
| 9    | 36-DS12-04 | Kit Manguera y Abrazadera Filtro Aire | DS-1211-17        | Manguera                          | 1     |
|      |            |                                       | DS-1012-35        | Abrazadera                        | 1     |
| 10   | 36-DS14-01 | Kit Antivibrantes Tapas Laterales     | DS-1410-12        | Antivibrante Tapa Delantero       | 2     |
|      |            |                                       | DS-1610-82        | Antivibrante Tapa Trasero         | 2     |
| 11   | 36-DS14-02 | Kit Antivibrantes Tanque Gasolina     | DS-1410-21        | Antivibrante Interno Tanque       | 1     |
|      |            |                                       | DJ-1410-08        | Antivibrante Tanque Gasolina      | 2     |
| 12   | 36-DS15-02 | Kit Piñones Speedometro               | DL-1510-14        | Piñón Speedometro                 | 1     |
|      |            |                                       | 30-1510-41        | Piñón Speedometro                 | 1     |
| 13   | 36-DS16-01 | Kit Platinas Soporte Motor            | DS-1610-31        | Platina Motor Izquierda           | 1     |
|      |            |                                       | DS-1611-28        | Platina Motor Derecha             | 1     |
|      |            |                                       | DS-1610-56        | Platina Motor Derecha Trasera     | 2     |
| 14   | 36-DS16-02 | Kit Platinas Soporte Motor            | DS-1611-30        | Platina Motor Delantera Izquierda | 1     |
|      |            |                                       | DS-1611-31        | Platina Motor Delantera Derecha   | 1     |
| 15   | 36-DS18-02 | Kit Cunas de Dirección                | DH-1810-25        | Cuna Chasis                       | 1     |
|      |            |                                       | DH-1810-26        | Cuna Dirección                    | 1     |
|      |            |                                       | DH-1810-24        | Cuna Superior                     | 1     |
| 16   | 36-DS21-01 | Kit Antivibrantes Sillín              | DS-2110-04        | Antivibrante Sillín I             | 7     |
|      |            |                                       | DS-2110-05        | Antivibrante Sillín II            | 2     |

# ÍNDICE DE REFERENCIAS

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| 06-2010-83   | 5           | 45          |
| 15-1610-69   | 2           | 43          |
| 15-1910-26   | 16          | 33          |
| 28-1011-10   | 16          | 6           |
| 28-1210-07   | 2           | 20          |
| 28-1210-08   | 3           | 20          |
| 29-2011-17   | 8           | 34          |
| 30-1010-61   | 21          | 7           |
| 30-1410-15   | 13          | 39          |
| 30-1410-31   | 7           | 26          |
| 30-1410-31   | 14          | 39          |
| 30-1410-32   | 11          | 39          |
| 30-1410-39   | 6           | 39          |
| 30-1510-04   | 14          | 30          |
| 30-1510-05   | 9           | 31          |
| 30-1510-12   | 7           | 31          |
| 30-1510-32   | 2           | 30          |
| 30-1510-33   | 23          | 30          |
| 30-1510-35   | 15          | 30          |
| 30-1510-38   | 12          | 30          |
| 30-1510-38   | 8           | 31          |
| 30-1510-41   | 12          | 51          |
| 30-1510-42   | 22          | 30          |
| 30-1510-69   | 16          | 30          |
| 30-1510-69   | 14          | 31          |
| 30-1510-75   | 4           | 31          |
| 30-1510-81   | 20          | 31          |
| 30-1510-82   | 18          | 31          |
| 30-1510-95   | 12          | 33          |
| 30-1511-05   | 17          | 30          |
| 30-1511-05   | 13          | 31          |
| 30-1511-18   | 19          | 30          |

| PARTE<br>No.  | FIG.<br>No. | PAG.<br>No. |
|---------------|-------------|-------------|
| 30-1511-19    | 20          | 30          |
| 30-1810-06    | 5           | 23          |
| 30-1910-35    | 7           | 33          |
| 30-1910-36    | 17          | 33          |
| 30-1910-38    | 4           | 33          |
| 30-1910-48    | 22          | 35          |
| 30-2010-06    | 3           | 46          |
| 30-2010-85    | 17          | 47          |
| 30-2011-04    | 16          | 47          |
| 31-1011-08    | 6           | 9           |
| 31-1011-73    | 12          | 6           |
| 31-1210-43    | 8           | 17          |
| 31-1811-02    | 13          | 36          |
| 31-1811-05    | 6           | 36          |
| 31-1811-06    | 7           | 36          |
| 31-2010-27/00 | 20          | 47          |
| 31-2010-81    | 11          | 11          |
| 35-1610-60    | 13          | 44          |
| 36-DJ15-02    | 19          | 31          |
| 36-DS10-01    | 3           | 1           |
| 36-DS10-01    | 12          | 2           |
| 36-DS10-01    | 1           | 50          |
| 36-DS10-02    | 8           | 3           |
| 36-DS10-02    | 2           | 50          |
| 36-DS10-03    | 7           | 3           |
| 36-DS10-03    | 3           | 50          |
| 36-DS10-04    | 8           | 4           |
| 36-DS10-04    | 4           | 50          |
| 36-DS10-07    | 3           | 15          |
| 36-DS10-07    | 5           | 50          |
| 36-DS12-01    | 2           | 16          |
| 36-DS12-01    | 6           | 50          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| 36-DS12-02   | 3           | 16          |
| 36-DS12-02   | 7           | 50          |
| 36-DS12-03   | 11          | 16          |
| 36-DS12-03   | 8           | 51          |
| 36-DS12-04   | 10          | 17          |
| 36-DS12-04   | 9           | 51          |
| 36-DS14-01   | 1           | 40          |
| 36-DS14-01   | 10          | 51          |
| 36-DS14-02   | 4           | 40          |
| 36-DS14-02   | 11          | 51          |
| 36-DS15-02   | 18          | 30          |
| 36-DS15-02   | 12          | 51          |
| 36-DS16-01   | 2           | 22          |
| 36-DS16-01   | 13          | 51          |
| 36-DS16-02   | 1           | 22          |
| 36-DS16-02   | 14          | 51          |
| 36-DS18-02   | 4           | 23          |
| 36-DS18-02   | 15          | 51          |
| 36-DS21-01   | 2           | 19          |
| 36-DS21-01   | 16          | 51          |
| 36-DS40-02   | 17          | 27          |
| 36-DS40-03   | 7           | 38          |
| 36-DS40-04   | 7           | 38          |
| 36-DS40-05   | 7           | 38          |
| 36-DS40-06   | 7           | 38          |
| 36-DS40-07   | 7           | 38          |
| 36-DS40-10   | 1           | 43          |
| 36-DS40-11   | 19          | 31          |
| 36-DS40-12   | 19          | 31          |
| 36-DS40-15   | 7           | 38          |
| 36-DS40-16   | 7           | 38          |
| 36-DS40-17   | 7           | 38          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| 36-DS40-18   | 7           | 38          |
| 36-DS40-19   | 7           | 38          |
| 36-DS40-20   | 1           | 43          |
| 39-0071-04   | 6           | 17          |
| 39-0211-11   | 7           | 27          |
| 39-0211-11   | 16          | 27          |
| 39-0219-11   | 5           | 33          |
| 39-0258-11   | 4           | 24          |
| 39-0292-15   | 16          | 24          |
| 39-0326-15   | 13          | 27          |
| 39-0337-17   | 7           | 7           |
| 39-0422-15   | 9           | 28          |
| 39-0422-15   | 13          | 34          |
| 39-0454-11   | 11          | 24          |
| 39-0553-02   | 10          | 24          |
| 39-0694-15   | 22          | 32          |
| 39-0711-11   | 20          | 24          |
| 39-0711-11   | 3           | 43          |
| 39-0712-15   | 7           | 24          |
| 39-0714-11   | 2           | 24          |
| 39-0716-01   | 3           | 44          |
| 39-0737-12   | 8           | 24          |
| 39-0738-17   | 16          | 15          |
| 39-0740-11   | 8           | 39          |
| 39-0746-01   | 13          | 10          |
| 39-0746-01   | 6           | 21          |
| 39-0761-01   | 4           | 21          |
| 39-0761-01   | 2           | 39          |
| 39-0775-04   | 9           | 30          |
| 39-0781-11   | 5           | 30          |
| 39-0784-08   | 9           | 26          |
| 39-0786-15   | 6           | 30          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| 39-0787-08   | 7           | 30          |
| 39-0789-12   | 13          | 33          |
| 39-0789-12   | 19          | 36          |
| 39-0794-15   | 8           | 33          |
| 39-0794-15   | 14          | 33          |
| 39-0797-08   | 3           | 28          |
| 39-0798-15   | 18          | 21          |
| 39-0798-15   | 8           | 27          |
| 39-0798-15   | 4           | 30          |
| 39-0798-15   | 12          | 31          |
| 39-0798-15   | 13          | 41          |
| 39-0801-15   | 26          | 32          |
| 39-0807-08   | 15          | 33          |
| 39-0808-08   | 6           | 33          |
| 39-0817-15   | 12          | 44          |
| 39-0817-15   | 6           | 46          |
| 39-0840-01   | 3           | 30          |
| 39-0849-14   | 19          | 11          |
| 39-0897-04   | 7           | 25          |
| 39-0897-04   | 4           | 43          |
| 39-0899-01   | 10          | 16          |
| 39-0900-12   | 27          | 30          |
| 39-0983-08   | 6           | 40          |
| 39-0987-17   | 5           | 7           |
| 39-0993-11   | 9           | 15          |
| 39-0999-06   | 9           | 12          |
| 39-0999-06   | 6           | 13          |
| 39-1013-21   | 21          | 30          |
| 39-1040-11   | 8           | 26          |
| 39-1041-19   | 3           | 12          |
| 39-1054-11   | 7           | 40          |
| 39-1062-04   | 9           | 46          |

# ÍNDICE DE REFERENCIAS

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| 39-1075-04   | 9           | 1           |
| 39-1075-04   | 8           | 12          |
| 39-1075-04   | 5           | 13          |
| 39-1225-15   | 7           | 22          |
| 39-1282-15   | 6           | 25          |
| 39-1283-21   | 10          | 11          |
| 39-1283-21   | 8           | 13          |
| 39-1283-21   | 1           | 50          |
| 39-1358-15   | 13          | 24          |
| 39-1507-11   | 4           | 27          |
| 39-1507-11   | 2           | 47          |
| 39-1553-04   | 7           | 14          |
| 39-1556-04   | 5           | 22          |
| 39-1660-05   | 2           | 2           |
| 39-1672-04   | 12          | 15          |
| 39-1674-04   | 9           | 2           |
| 39-1674-04   | 10          | 4           |
| 39-1674-04   | 2           | 13          |
| 39-1674-04   | 4           | 20          |
| 39-1674-04   | 3           | 21          |
| 39-1677-04   | 14          | 11          |
| 39-1680-04   | 21          | 21          |
| 39-1680-04   | 9           | 33          |
| 39-1681-04   | 8           | 49          |
| 39-1714-04   | 2           | 34          |
| 39-1714-04   | 20          | 36          |
| 39-1714-04   | 6           | 49          |
| 39-1715-19   | 3           | 11          |
| 39-1754-21   | 9           | 11          |
| 39-1765-11   | 7           | 17          |
| 39-1766-01   | 14          | 44          |
| 39-1773-04   | 18          | 24          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| 39-1778-02   | 2           | 44          |
| 39-1783-01   | 14          | 46          |
| 39-1789-24   | 5           | 40          |
| 39-1845-04   | 15          | 11          |
| 39-1880-20   | 2           | 4           |
| 39-1880-20   | 8           | 14          |
| 39-1902-04   | 4           | 19          |
| 39-1902-04   | 19          | 21          |
| 39-1917-19   | 2           | 12          |
| 39-1940-04   | 9           | 17          |
| 39-1940-04   | 2           | 25          |
| 39-1943-04   | 19          | 24          |
| 39-1943-04   | 10          | 27          |
| 39-1943-04   | 24          | 35          |
| 39-1943-04   | 3           | 40          |
| 39-1943-04   | 17          | 44          |
| 39-1943-04   | 11          | 46          |
| 39-1943-04   | 5           | 47          |
| 39-1956-04   | 3           | 47          |
| 39-1961-04   | 6           | 44          |
| 39-1963-04   | 13          | 11          |
| 39-1964-04   | 20          | 11          |
| 39-1970-15   | 6           | 18          |
| 39-1970-15   | 4           | 22          |
| 39-1970-15   | 6           | 45          |
| 39-1972-15   | 16          | 39          |
| 39-1972-15   | 7           | 46          |
| 39-1972-15   | 16          | 46          |
| 39-1981-04   | 19          | 7           |
| 39-2017-19   | 9           | 3           |
| 39-2040-21   | 13          | 4           |
| 39-2132-17   | 4           | 5           |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| 39-2141-24   | 10          | 44          |
| 39-2165-11   | 15          | 6           |
| 39-2179-24   | 3           | 39          |
| 39-2181-06   | 2           | 5           |
| 39-2181-06   | 8           | 10          |
| 39-2183-04   | 14          | 6           |
| 39-2189-19   | 6           | 11          |
| 39-2190-19   | 7           | 11          |
| 39-2198-04   | 7           | 4           |
| 39-2200-11   | 3           | 6           |
| 39-2200-11   | 1           | 14          |
| 39-2203-07   | 13          | 6           |
| 39-2203-07   | 6           | 20          |
| 39-2208-04   | 15          | 12          |
| 39-2208-04   | 11          | 13          |
| 39-2208-04   | 15          | 47          |
| 39-2214-04   | 10          | 49          |
| 39-2240-20   | 16          | 31          |
| 39-2276-11   | 8           | 15          |
| 39-2310-04   | 3           | 27          |
| 39-2312-04   | 3           | 22          |
| 39-2391-21   | 1           | 50          |
| 39-2427-04   | 18          | 34          |
| 39-2440-11   | 5           | 3           |
| 39-2443-11   | 13          | 12          |
| 39-2447-04   | 11          | 31          |
| 39-2453-04   | 7           | 9           |
| 39-2495-04   | 7           | 49          |
| 39-2531-05   | 3           | 10          |
| 39-2531-05   | 2           | 11          |
| 39-2532-04   | 8           | 1           |
| 39-2539-21   | 6           | 2           |

| PARTE<br>No.       | FIG.<br>No. | PAG.<br>No. |
|--------------------|-------------|-------------|
| 39-2561-20         | 17          | 6           |
| 39-2562-20         | 4           | 11          |
| 39-2566-11         | 29          | 32          |
| 39-2567-11         | 25          | 32          |
| 39-2583-20         | 6           | 10          |
| 39-2583-20         | 5           | 11          |
| 39-2608-01         | 11          | 2           |
| 39-2639-04         | 6           | 8           |
| 39-2647-15         | 6           | 1           |
| 39-2662-20         | 7           | 10          |
| 39-2686-20         | 2           | 31          |
| 39-2687-20         | 3           | 31          |
| 39-2688-20         | 1           | 30          |
| 39-2701-04         | 6           | 27          |
| 39-2702-04         | 8           | 22          |
| 39-2712-17         | 18          | 6           |
| 39-2713-21         | 8           | 6           |
| 39-2718-04         | 6           | 22          |
| 39-2722-04         | 10          | 26          |
| 39-2723-15         | 9           | 22          |
| 39-2730-04         | 7           | 18          |
| 39-2758-21         | 15          | 39          |
| 41070-2717-NR2/18  | 2           | 29          |
| 41070-2717-NR53/18 | 2           | 29          |
| 41070-2717-SP1/19  | 2           | 29          |
| 41070-2717-TM8/18  | 2           | 29          |
| 41070-3017-TM8/18  | 5           | 29          |
| 41075-2717/18      | 3           | 29          |
| 41075-2717/23      | 3           | 29          |
| 52-DS00-92         | 2           | 37          |
| 52-DS00-93         | 3           | 37          |
| 52-DS00-94         | 5           | 38          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| 52-DS02-65   | 17          | 36          |
| 52-JN00-04   | 1           | 13          |
| 52-JN00-05   | 1           | 12          |
| 52-JN00-08   | 9           | 13          |
| CL-2010-23   | 4           | 44          |
| CL-2010-42   | 5           | 41          |
| DD-1010-97   | 2           | 15          |
| DD-1110-11   | 9           | 21          |
| DD-1110-12   | 14          | 21          |
| DD-1110-48   | 12          | 21          |
| DD-1410-22   | 7           | 39          |
| DD-1510-08   | 10          | 30          |
| DD-1510-09   | 11          | 30          |
| DD-1610-71   | 4           | 18          |
| DD-1613-81   | 6           | 26          |
| DD-1911-42   | 9           | 34          |
| DD-2010-11   | 4           | 46          |
| DD-2010-24   | 17          | 21          |
| DF-1611-02   | 8           | 28          |
| DF-1810-85   | 24          | 36          |
| DF-1810-98   | 8           | 44          |
| DG-1010-29   | 6           | 3           |
| DG-1014-18   | 17          | 12          |
| DG-1014-18   | 3           | 13          |
| DG-1014-98   | 11          | 1           |
| DG-1014-98   | 18          | 11          |
| DG-1110-08   | 7           | 21          |
| DG-1611-21   | 2           | 40          |
| DG-1611-21   | 16          | 44          |
| DG-1611-24   | 10          | 28          |
| DG-1612-24   | 5           | 25          |
| DG-1710-38   | 1           | 24          |

# ÍNDICE DE REFERENCIAS

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DG-2010-40   | 8           | 41          |
| DH-1010-11   | 11          | 4           |
| DH-1010-16   | 1           | 5           |
| DH-1010-26   | 3           | 50          |
| DH-1010-33   | 3           | 2           |
| DH-1010-48   | 6           | 4           |
| DH-1010-61   | 17          | 11          |
| DH-1010-66   | 10          | 6           |
| DH-1010-68   | 5           | 50          |
| DH-1010-72   | 10          | 1           |
| DH-1010-79   | 13          | 7           |
| DH-1011-11   | 15          | 7           |
| DH-1011-16   | 20          | 7           |
| DH-1011-21   | 15          | 15          |
| DH-1011-52   | 7           | 12          |
| DH-1011-57   | 7           | 13          |
| DH-1011-85   | 5           | 50          |
| DH-1011-95   | 2           | 6           |
| DH-1011-99   | 5           | 21          |
| DH-1012-25   | 8           | 9           |
| DH-1012-25   | 10          | 10          |
| DH-1012-35   | 18          | 7           |
| DH-1012-64   | 12          | 11          |
| DH-1012-83   | 13          | 13          |
| DH-1012-95   | 4           | 3           |
| DH-1013-01   | 2           | 18          |
| DH-1013-02   | 8           | 18          |
| DH-1013-20   | 5           | 50          |
| DH-1013-44   | 3           | 14          |
| DH-1013-46   | 2           | 14          |
| DH-1014-12   | 4           | 4           |
| DH-1014-20   | 3           | 4           |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DH-1014-68   | 3           | 18          |
| DH-1014-81   | 9           | 18          |
| DH-1014-84   | 9           | 14          |
| DH-1014-85   | 10          | 14          |
| DH-1015-08   | 4           | 2           |
| DH-1015-20   | 12          | 14          |
| DH-1015-54   | 4           | 14          |
| DH-1015-57   | 5           | 14          |
| DH-1016-61   | 10          | 1           |
| DH-1110-12   | 10          | 2           |
| DH-1110-13   | 15          | 21          |
| DH-1110-15   | 13          | 21          |
| DH-1110-16   | 22          | 21          |
| DH-1210-38   | 8           | 2           |
| DH-1211-01   | 8           | 16          |
| DH-1211-02   | 9           | 16          |
| DH-1510-29   | 11          | 33          |
| DH-1610-53   | 4           | 25          |
| DH-1610-56   | 10          | 25          |
| DH-1611-00   | 9           | 25          |
| DH-1611-21   | 4           | 28          |
| DH-1611-45   | 5           | 28          |
| DH-1611-58   | 15          | 27          |
| DH-1612-40   | 7           | 28          |
| DH-1710-19   | 24          | 32          |
| DH-1810-14   | 3           | 23          |
| DH-1810-22   | 17          | 34          |
| DH-1810-24   | 15          | 51          |
| DH-1810-25   | 15          | 51          |
| DH-1810-26   | 15          | 51          |
| DH-1910-19   | 16          | 34          |
| DH-1910-36   | 6           | 42          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DH-2010-17   | 20          | 47          |
| DH-2010-18   | 16          | 21          |
| DH-2010-19   | 9           | 47          |
| DJ-1010-64   | 5           | 18          |
| DJ-1012-16   | 12          | 4           |
| DJ-1012-17   | 2           | 1           |
| DJ-1410-08   | 11          | 51          |
| DJ-1510-32   | 23          | 32          |
| DJ-1510-33   | 17          | 31          |
| DJ-1510-35   | 27          | 32          |
| DJ-1510-36   | 14          | 24          |
| DJ-1510-37   | 15          | 24          |
| DJ-1510-53   | 1           | 31          |
| DJ-1510-59   | 10          | 31          |
| DJ-1510-81   | 8           | 30          |
| DJ-1610-67   | 20          | 21          |
| DJ-1610-69   | 12          | 27          |
| DJ-1610-72   | 8           | 46          |
| DJ-1610-90   | 11          | 25          |
| DJ-1611-22   | 5           | 26          |
| DJ-1611-26   | 1           | 25          |
| DJ-1611-27   | 3           | 25          |
| DJ-1611-28   | 3           | 26          |
| DJ-1611-29   | 4           | 26          |
| DJ-1810-43   | 16          | 36          |
| DJ-1810-83   | 5           | 46          |
| DJ-1810-85   | 22          | 36          |
| DJ-1810-87   | 3           | 36          |
| DJ-1810-88   | 2           | 36          |
| DJ-1810-89   | 1           | 36          |
| DJ-1910-55   | 7           | 34          |
| DJ-2010-24   | 3           | 34          |

| PARTE<br>No.  | FIG.<br>No. | PAG.<br>No. |
|---------------|-------------|-------------|
| DJ-2010-35    | 19          | 34          |
| DJ-2010-72    | 5           | 44          |
| DJ-2011-10    | 19          | 34          |
| DJ-2011-13    | 3           | 45          |
| DJ-2011-14    | 4           | 45          |
| DJ-2011-15    | 1           | 45          |
| DJ-2011-16    | 2           | 45          |
| DJ-2011-46    | 3           | 45          |
| DJ-2011-47    | 4           | 45          |
| DJ-2011-48    | 1           | 45          |
| DJ-2011-49    | 2           | 45          |
| DJ-2210-03    | 20          | 34          |
| DJ-2210-04    | 21          | 34          |
| DL-1510-14    | 12          | 51          |
| DL-1810-10    | 9           | 44          |
| DL-1910-12    | 5           | 34          |
| DP-1611-44    | 12          | 46          |
| DP-1611-45    | 10          | 46          |
| DP-1611-45/00 | 10          | 46          |
| DP-1710-06    | 7           | 23          |
| DP-2010-48    | 7           | 45          |
| DP-2210-24    | 2           | 48          |
| DS-1010-01    | 1           | 10          |
| DS-1010-08    | 14          | 10          |
| DS-1010-09    | 12          | 10          |
| DS-1010-11    | 4           | 50          |
| DS-1010-12    | 4           | 50          |
| DS-1010-23    | 2           | 50          |
| DS-1010-24    | 2           | 50          |
| DS-1010-26    | 2           | 1           |
| DS-1010-36    | 9           | 4           |
| DS-1010-46    | 1           | 7           |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DS-1010-47   | 8           | 7           |
| DS-1010-48   | 6           | 7           |
| DS-1010-49   | 3           | 7           |
| DS-1010-50   | 5           | 12          |
| DS-1010-52   | 16          | 7           |
| DS-1010-54   | 12          | 7           |
| DS-1010-55   | 14          | 7           |
| DS-1010-57   | 6           | 15          |
| DS-1010-58   | 5           | 15          |
| DS-1010-59   | 13          | 15          |
| DS-1010-60   | 7           | 15          |
| DS-1010-61   | 11          | 15          |
| DS-1010-62   | 3           | 8           |
| DS-1010-63   | 1           | 8           |
| DS-1010-64   | 2           | 8           |
| DS-1010-67   | 4           | 12          |
| DS-1010-71   | 6           | 12          |
| DS-1010-72   | 11          | 12          |
| DS-1010-73   | 10          | 12          |
| DS-1010-76   | 4           | 13          |
| DS-1010-77   | 6           | 6           |
| DS-1010-78   | 5           | 8           |
| DS-1010-79   | 4           | 8           |
| DS-1010-83   | 3           | 50          |
| DS-1010-84   | 7           | 1           |
| DS-1010-96   | 5           | 1           |
| DS-1011-03   | 10          | 9           |
| DS-1011-04   | 4           | 9           |
| DS-1011-05   | 11          | 14          |
| DS-1011-07   | 24          | 7           |
| DS-1011-10   | 3           | 50          |
| DS-1011-11   | 3           | 50          |

# ÍNDICE DE REFERENCIAS

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DS-1011-12   | 11          | 6           |
| DS-1011-16   | 6           | 14          |
| DS-1011-18   | 2           | 9           |
| DS-1011-19   | 9           | 9           |
| DS-1011-23   | 12          | 12          |
| DS-1011-28   | 4           | 7           |
| DS-1011-29   | 9           | 7           |
| DS-1011-32   | 7           | 8           |
| DS-1011-34   | 1           | 9           |
| DS-1011-45   | 10          | 15          |
| DS-1011-52   | 19          | 6           |
| DS-1011-54   | 9           | 6           |
| DS-1011-67   | 5           | 10          |
| DS-1011-69   | 1           | 12          |
| DS-1011-73   | 3           | 9           |
| DS-1011-84   | 1           | 6           |
| DS-1011-89   | 1           | 4           |
| DS-1011-90   | 14          | 15          |
| DS-1011-93   | 4           | 1           |
| DS-1011-97   | 22          | 7           |
| DS-1011-98   | 23          | 7           |
| DS-1012-01   | 20          | 12          |
| DS-1012-03   | 17          | 7           |
| DS-1012-04   | 11          | 7           |
| DS-1012-05   | 2           | 7           |
| DS-1012-06   | 1           | 15          |
| DS-1012-08   | 5           | 50          |
| DS-1012-09   | 4           | 15          |
| DS-1012-10   | 10          | 13          |
| DS-1012-11   | 14          | 12          |
| DS-1012-12   | 19          | 12          |
| DS-1012-14   | 11          | 10          |

| PARTE<br>No.      | FIG.<br>No. | PAG.<br>No. |
|-------------------|-------------|-------------|
| DS-1012-15        | 18          | 12          |
| DS-1012-34        | 4           | 10          |
| DS-1012-35        | 9           | 51          |
| DS-1012-51        | 5           | 9           |
| DS-1012-52        | 16          | 12          |
| DS-1012-53        | 12          | 13          |
| DS-1012-55        | 4           | 6           |
| DS-1012-60        | 7           | 6           |
| DS-1012-65        | 10          | 7           |
| DS-1012-67        | 9           | 13          |
| DS-1012-69        | 1           | 18          |
| DS-1012-74        | 1           | 13          |
| DS-1012-75        | 5           | 6           |
| DS-1012-76        | 5           | 4           |
| DS-1012-77        | 12          | 4           |
| DS-1013-11        | 1           | 6           |
| DS-1013-20        | 2           | 10          |
| DS-1013-33        | 3           | 3           |
| DS-1013-35        | 1           | 3           |
| DS-1013-36        | 2           | 3           |
| DS-1013-45        | 1           | 11          |
| DS-1013-59        | 1           | 1           |
| DS-1013-59        | 1           | 2           |
| DS-1013-60        | 5           | 5           |
| DS-1013-60-STD/47 | 6           | 5           |
| DS-1013-60-025/47 | 6           | 5           |
| DS-1013-60-050/47 | 6           | 5           |
| DS-1013-60-075/47 | 6           | 5           |
| DS-1013-60-100/47 | 6           | 5           |
| DS-1013-61        | 3           | 5           |
| DS-1013-61-STD/47 | 3           | 5           |
| DS-1013-61-025/47 | 3           | 5           |

| PARTE<br>No.      | FIG.<br>No. | PAG.<br>No. |
|-------------------|-------------|-------------|
| DS-1013-61-050/47 | 3           | 5           |
| DS-1013-61-075/47 | 3           | 5           |
| DS-1013-61-100/47 | 3           | 5           |
| DS-1013-63        | 20          | 6           |
| DS-1013-65        | 5           | 20          |
| DS-1013-67        | 1           | 18          |
| DS-1013-76        | 4           | 6           |
| DS-1013-88        | 1           | 10          |
| DS-1014-01        | 1           | 1           |
| DS-1014-01        | 1           | 2           |
| DS-1014-02        | 5           | 5           |
| DS-1014-03        | 1           | 18          |
| DS-1099-07        | 10          | 7           |
| DS-1110-15        | 2           | 21          |
| DS-1110-17        | 1           | 21          |
| DS-1110-29        | 10          | 21          |
| DS-1110-30        | 11          | 21          |
| DS-1110-35        | 11          | 21          |
| DS-1110-36        | 10          | 21          |
| DS-1110-41        | 23          | 21          |
| DS-1110-43        | 8           | 21          |
| DS-1210-02        | 5           | 20          |
| DS-1210-03        | 1           | 20          |
| DS-1210-04        | 16          | 11          |
| DS-1210-05        | 8           | 11          |
| DS-1210-12        | 7           | 2           |
| DS-1210-23        | 1           | 16          |
| DS-1210-55        | 6           | 50          |
| DS-1210-57        | 6           | 50          |
| DS-1210-60        | 4           | 16          |
| DS-1210-67        | 7           | 50          |
| DS-1210-68        | 7           | 50          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DS-1210-69   | 7           | 50          |
| DS-1210-72   | 8           | 51          |
| DS-1210-73   | 6           | 50          |
| DS-1210-73   | 8           | 51          |
| DS-1210-76   | 12          | 16          |
| DS-1210-80   | 7           | 16          |
| DS-1210-89   | 5           | 16          |
| DS-1210-90   | 6           | 16          |
| DS-1211-13   | 13          | 16          |
| DS-1211-15   | 14          | 16          |
| DS-1211-17   | 9           | 51          |
| DS-1211-29   | 1           | 17          |
| DS-1211-30   | 5           | 2           |
| DS-1211-31   | 3           | 17          |
| DS-1410-09   | 1           | 39          |
| DS-1410-12   | 10          | 51          |
| DS-1410-13   | 10          | 39          |
| DS-1410-14   | 12          | 39          |
| DS-1410-18   | 4           | 39          |
| DS-1410-21   | 11          | 51          |
| DS-1410-70   | 7           | 38          |
| DS-1410-73   | 7           | 38          |
| DS-1510-25   | 10          | 33          |
| DS-1510-40   | 13          | 30          |
| DS-1510-42   | 24          | 30          |
| DS-1510-56   | 25          | 30          |
| DS-1510-66   | 1           | 29          |
| DS-1510-68   | 15          | 31          |
| DS-1510-69   | 6           | 31          |
| DS-1510-70   | 5           | 31          |
| DS-1510-72   | 30          | 32          |
| DS-1510-73   | 21          | 32          |

| PARTE<br>No.  | FIG.<br>No. | PAG.<br>No. |
|---------------|-------------|-------------|
| DS-1510-76    | 31          | 32          |
| DS-1510-80    | 1           | 29          |
| DS-1510-84    | 1           | 29          |
| DS-1510-86    | 4           | 29          |
| DS-1510-87    | 13          | 30          |
| DS-1610-31    | 13          | 51          |
| DS-1610-56    | 13          | 51          |
| DS-1610-62    | 9           | 27          |
| DS-1610-66    | 4           | 37          |
| DS-1610-69    | 2           | 17          |
| DS-1610-77    | 6           | 28          |
| DS-1610-82    | 8           | 40          |
| DS-1610-82    | 10          | 51          |
| DS-1610-85    | 1           | 26          |
| DS-1610-86    | 2           | 26          |
| DS-1610-87    | 3           | 49          |
| DS-1610-88    | 4           | 49          |
| DS-1610-89    | 2           | 49          |
| DS-1610-92    | 2           | 27          |
| DS-1610-99    | 5           | 49          |
| DS-1611-00    | 1           | 49          |
| DS-1611-00/00 | 1           | 49          |
| DS-1611-08    | 11          | 27          |
| DS-1611-12    | 2           | 28          |
| DS-1611-13    | 1           | 28          |
| DS-1611-17    | 8           | 25          |
| DS-1611-18    | 11          | 47          |
| DS-1611-23    | 4           | 47          |
| DS-1611-25    | 1           | 27          |
| DS-1611-28    | 13          | 51          |
| DS-1611-30    | 14          | 51          |
| DS-1611-31    | 14          | 51          |

# ÍNDICE DE REFERENCIAS

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DS-1611-41   | 14          | 27          |
| DS-1611-60   | 13          | 2           |
| DS-1611-61   | 14          | 2           |
| DS-1611-88   | 9           | 49          |
| DS-1612-19   | 1           | 23          |
| DS-1612-71   | 7           | 38          |
| DS-1612-76   | 7           | 38          |
| DS-1710-07   | 9           | 24          |
| DS-1710-13   | 12          | 24          |
| DS-1710-14   | 17          | 24          |
| DS-1710-15   | 6           | 24          |
| DS-1810-05   | 25          | 35          |
| DS-1810-05   | 15          | 36          |
| DS-1810-06   | 29          | 35          |
| DS-1810-07   | 26          | 35          |
| DS-1810-08   | 10          | 34          |
| DS-1810-09   | 11          | 34          |
| DS-1810-10   | 12          | 34          |
| DS-1810-12   | 25          | 36          |
| DS-1810-15   | 11          | 36          |
| DS-1810-17   | 23          | 36          |
| DS-1810-18   | 2           | 23          |
| DS-1810-19   | 30          | 35          |
| DS-1810-20   | 18          | 36          |
| DS-1810-22   | 23          | 35          |
| DS-1810-23   | 6           | 38          |
| DS-1810-26   | 13          | 46          |
| DS-1810-27   | 19          | 44          |
| DS-1810-29   | 18          | 44          |
| DS-1810-31   | 11          | 44          |
| DS-1810-36   | 5           | 39          |
| DS-1810-36   | 3           | 40          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DS-1810-42   | 4           | 36          |
| DS-1810-43   | 5           | 36          |
| DS-1810-44   | 1           | 34          |
| DS-1810-45   | 15          | 44          |
| DS-1810-66   | 7           | 44          |
| DS-1810-69   | 22          | 44          |
| DS-1810-70   | 26          | 36          |
| DS-1810-71   | 27          | 36          |
| DS-1810-72   | 21          | 36          |
| DS-1810-75   | 12          | 36          |
| DS-1810-77   | 8           | 36          |
| DS-1810-80   | 17          | 36          |
| DS-1810-83   | 9           | 36          |
| DS-1810-84   | 10          | 36          |
| DS-1810-85   | 14          | 36          |
| DS-1810-86   | 28          | 36          |
| DS-1811-20   | 4           | 36          |
| DS-1811-21   | 5           | 36          |
| DS-1910-01   | 2           | 42          |
| DS-1910-02   | 1           | 33          |
| DS-1910-03   | 3           | 33          |
| DS-1910-07   | 8           | 47          |
| DS-1910-09   | 4           | 42          |
| DS-1910-10   | 5           | 42          |
| DS-1910-11   | 2           | 33          |
| DS-1910-12   | 1           | 42          |
| DS-1910-13   | 3           | 42          |
| DS-1910-15   | 14          | 34          |
| DS-1910-16   | 15          | 34          |
| DS-1910-18   | 27          | 35          |
| DS-1910-28   | 7           | 41          |
| DS-1910-29   | 9           | 41          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DS-1910-30   | 10          | 41          |
| DS-1910-31   | 11          | 41          |
| DS-1910-32   | 12          | 41          |
| DS-1910-38   | 6           | 34          |
| DS-1910-39   | 1           | 41          |
| DS-1910-41   | 3           | 41          |
| DS-1910-42   | 14          | 41          |
| DS-1910-53   | 4           | 42          |
| DS-1910-54   | 6           | 42          |
| DS-1910-55   | 5           | 42          |
| DS-2010-08   | 1           | 46          |
| DS-2010-09   | 2           | 46          |
| DS-2010-15   | 15          | 46          |
| DS-2010-16   | 1           | 47          |
| DS-2010-25   | 14          | 47          |
| DS-2010-27   | 6           | 23          |
| DS-2010-29   | 7           | 47          |
| DS-2010-33   | 4           | 34          |
| DS-2010-34   | 4           | 41          |
| DS-2010-35   | 1           | 44          |
| DS-2010-36   | 20          | 44          |
| DS-2010-39   | 21          | 44          |
| DS-2010-53   | 6           | 47          |
| DS-2010-55   | 9           | 39          |
| DS-2010-57   | 6           | 47          |
| DS-2010-65   | 18          | 47          |
| DS-2010-69   | 2           | 41          |
| DS-2010-72   | 6           | 41          |
| DS-2010-79   | 9           | 39          |
| DS-2110-01   | 1           | 19          |
| DS-2110-04   | 16          | 51          |
| DS-2110-05   | 16          | 51          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DS-2110-06   | 3           | 19          |
| DS-2210-03   | 1           | 48          |
| DS-7101-1C   | 1           | 37          |
| DS-7101-23   | 1           | 37          |
| DS-7101-2Q   | 1           | 37          |
| DS-7101-X3   | 1           | 37          |
| DS-7101-X4   | 1           | 37          |
| DS-7101-X6   | 1           | 37          |
| DS-7114-23   | 1           | 37          |
| DS-7301-1C   | 4           | 37          |
| DS-7301-2Q   | 4           | 37          |
| DS-7301-X3   | 4           | 37          |
| DS-7301-X4   | 4           | 37          |
| DS-7301-X6   | 4           | 37          |
| DS-7302-1C   | 5           | 38          |
| DS-7302-2Q   | 5           | 38          |
| DS-7302-X3   | 5           | 38          |
| DS-7302-X4   | 5           | 38          |
| DS-7302-X6   | 5           | 38          |
| DS-7303-1C   | 2           | 37          |
| DS-7303-2Q   | 2           | 37          |
| DS-7303-X3   | 2           | 37          |
| DS-7303-X4   | 2           | 37          |
| DS-7303-X6   | 2           | 37          |
| DS-7304-1C   | 3           | 37          |
| DS-7304-2Q   | 3           | 37          |
| DS-7304-X3   | 3           | 37          |
| DS-7304-X4   | 3           | 37          |
| DS-7304-X6   | 3           | 37          |
| DS-7401-1C   | 6           | 38          |
| DS-7401-2Q   | 6           | 38          |
| DS-7401-X3   | 6           | 38          |

| PARTE<br>No. | FIG.<br>No. | PAG.<br>No. |
|--------------|-------------|-------------|
| DS-7401-X4   | 6           | 38          |
| DS-7401-X6   | 6           | 38          |
| DU-1010-85   | 9           | 10          |
| DU-2010-46   | 28          | 35          |
| DX-1210-06   | 11          | 17          |
| DX-1210-07   | 4           | 17          |
| DX-1210-10   | 5           | 17          |
| DX-1510-20   | 4           | 29          |
| DX-1510-22   | 28          | 32          |
| DX-1510-23   | 30          | 32          |
| DX-1610-31   | 10          | 47          |
| DX-1610-32   | 13          | 47          |
| DX-1610-34   | 5           | 27          |
| DX-1610-44   | 12          | 47          |
| DX-1610-45   | 19          | 47          |
| DX-1610-52   | 5           | 43          |
| DX-1610-65   | 2           | 27          |
| DX-1610-66   | 18          | 27          |
| DX-1710-01   | 5           | 24          |
| DX-1710-03   | 3           | 24          |
| GH-2010-12   | 5           | 45          |
| JA-1316-03   | 26          | 30          |
| JA-1316-05   | 13          | 30          |
| JA-1316-06   | 20          | 30          |
| JA-1316-07   | 10          | 30          |
| JN-1316-00   | 6           | 31          |
| JN-1316-00   | 31          | 32          |
| JN-5410-00   | 1           | 11          |
| JN-5410-02   | 2           | 10          |
| JN-5710-01   | 8           | 11          |
| JN-5812-12   | 15          | 16          |
| JN-5814-00   | 5           | 2           |