

pulsar
NS200

pulsar
AS200

pulsar
NS200



Mobil Super
4T Ultra

www.auteco.com.co
Línea gratuita nacional: 018000 520090



SISTEMA ANTIBLOQUEO
DE FRENOS NO INCLUIDO

IRC LLANTAS

TECNOLOGÍA JAPONESA



**Los Expertos en motos
las usan y recomiendan:**

 **BAJAJ**
Distinctly Ahead

 **auteco**
www.auteco.com.co

Advierta lo que le dicen las llantas mientras conduce:

- Si su respuesta a la dirección es lenta o si en las curvas y en el frenado la respuesta es pesada, es muy probable que sus llantas estén desinfladas.
- Vibración o tambaleo durante la conducción, puede significar que la presión en las llantas es mayor a la recomendada, o que ha ocurrido un daño en la llanta y la falla es inminente.
- La llanta puede vibrar a ciertas velocidades debido al desbalanceo, en este caso su desgaste será muy acelerado.

**RECUERDE SIEMPRE REVISAR LA PRESIÓN DE AIRE EN SUS LLANTAS
ANTES DE COMENZAR A RODAR**

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página **web: www.auteco.com.co** accediendo al link **repuestos**. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco.



DIRECTORIO TELEFÓNICO - UN REPUESTOS Y ACCESORIOS ÁREA COMERCIAL Y ASESORES DE VENTAS

NOMBRE	CARGO	ZONA	CELULAR	CORREO ELECTRÓNICO
John Jahiver Salamanca Latorre	ASESOR COMERCIAL UN R&A	Bogota D.C./Girardot/Fusagasuga/Soacha	3005428756	jsalamanca@auteco.com.co
Carlos Javier Uribe Duran	ASESOR COMERCIAL UN R&A	Cucuta/Aguachica/Oca A/	3217997928	cjuribe@auteco.com.co
Andres Felipe Bustamante Castañeda	ASESOR COMERCIAL UN R&A	Granada/Acacias/	3175569320	abustamante@auteco.com.co
Michael Anderson Melo S. (Supernumerario)	ASESOR COMERCIAL UN R&A	Villavicencio	3146375950	mmelo@auteco.com.co
Yuli Andrea Pedraza Escobar	ASESOR COMERCIAL UN R&A	Bogota D.C./Cundinamarca	3224619721	ypedraza@auteco.com.co
Juan Manuel Rodríguez Villa	ASESOR COMERCIAL UN R&A	Barrancabermeja/ Santander	3174817708	jmrodriguez@auteco.com.co
Rafael Antonio Martínez Ballesteros	ASESOR COMERCIAL UN R&A	Yopal/Casanare	3186154582	rmartinez@auteco.com.co
Ivan Eduardo Fonseca Cardenas	ASESOR COMERCIAL UN R&A	Tunja/Boyaca	3186177283	ifonseca@auteco.com.co
David Andres Riaño Vidales	ASESOR COMERCIAL UN R&A	Bogotá	3218032957	driano@auteco.com.co
Yeedsander Guzman Garcia	ASESOR COMERCIAL UN R&A	Barranquilla	3005426459	yguzman@auteco.com.co
Nestor Raul Adarve Rendon	ASESOR COMERCIAL UN R&A	Medellin	3104362689	nadarve@auteco.com.co
Miguel Arturo Osorio Ruiz	ASESOR COMERCIAL UN R&A	Valledupar/Cesar	3217997887	mosorio@auteco.com.co
Jose Luis Padilla Pasiminio	ASESOR COMERCIAL UN R&A	Cartagena De Indias/Turbaco/	3122987444	jpadilla@auteco.com.co
Jhonatan Arroyo Martinez	ASESOR COMERCIAL UN R&A	Sincedejo/Magangué/Cerete/	3186186416	jarrojo@auteco.com.co
Viviana Mercedes Macias Ballesteros	ASESOR COMERCIAL UN R&A	Santa Marta/El Banco/	3167706184	vmacias@auteco.com.co
Andres Mauricio Torres Altamiranda	ASESOR COMERCIAL UN R&A	Monteria/Caucasia/Montelibano/	3184117911	amtorres@auteco.com.co
Ronald Jimenez Montenegro	ASESOR COMERCIAL UN R&A	Quibdo/Istmina/	3186186962	rjimenez@auteco.com.co
Edward Alexander Bustamante Mesa	ASESOR COMERCIAL UN R&A	Medellin/Bello/Barbosa	3217997930	ebustamante@auteco.com.co
Pedro Luis Padilla Diaz	ASESOR COMERCIAL UN R&A	Apartado/Tierralta/Turbo/	3186186650	jpadilla@auteco.com.co
Valentina Sanchez M. (Supernumeraria)	SUPER NUMERARIA	Medellin - Antioquia	3174817837	vsanchez@auteco.com.co
Leidy Johana Velasquez Sanchez	ASESOR COMERCIAL UN R&A	Ibague/La Dorada/San Sebastian De Mariquita/	3122576791	lvlasquez@auteco.com.co
Erwin Alexis Carlosama Tobar	ASESOR COMERCIAL UN R&A	Cali	3135844713	ecarlosama@auteco.com.co
Juan Esteban Castañeda Gaviria	ASESOR COMERCIAL UN R&A	Florencia/Puerto Asis/Valle Del Guamuez/Mocoa	3102156492	jcastaneda@auteco.com.co
Jhon Freddy Arias Mejia	ASESOR COMERCIAL UN R&A	Pereira/Manizales/Armenia/	3183384054	jarias@auteco.com.co
Jaime Alberto Orozco Jimenez	ASESOR COMERCIAL UN R&A	Palma/Guadalajara De Buga/Jamundi/	3165560505	jorozco@auteco.com.co
Leonardo Ramirez Polonia	ASESOR COMERCIAL UN R&A	Neiva/Pitalito/Garzon/	3174815089	lramirez@auteco.com.co
Boris Alexis Rivera Barbosa	ASESOR COMERCIAL UN R&A	Tulua/Buenaventura/Roldanillo/	3152710311	brivera@auteco.com.co
Luisa Fernanda Alpala Patiño	ASESOR COMERCIAL UN R&A	Pasto/piales/	3174393005	lalpala@auteco.com.co
Jineth Marcela Martínez Yalanda	ASESOR COMERCIAL UN R&A	Popayan/Santander De Quilichao/	3174110499	jmartinez@auteco.com.co
Jhonatan Ocampo C. (Supernumerario)	ASESOR COMERCIAL UN R&A	Cali	3124142279	jocampoc@auteco.com.co
Jimmy Herrera Hernandez	JEFE ZONA CENTRO	Zona Oriente	3103739019	jherrera@auteco.com.co
Carlos Humberto Tobon Restrepo	JEFE ZONA NORTE	Antioquia	3104473611	ctobon@auteco.com.co
Jorge Eliecer Lopez Duque	JEFE COMERCIAL CALI	Zona Sur	3206820964	jelopez@auteco.com.co

SERVICIO AL CLIENTE

LINEA ÚNICA DE SERVICIO AL CLIENTE CANAL

(4) 444 81 90 

UNIDAD DE REPUESTOS y ACCESORIOS • FAX OFICINAS: 373 03 75

ATENCIÓN EN:	NOMBRE	E-MAIL	TELÉFONO	FAX
SERVICIO PAGO ANTICIPADO	JEISSON ALEXANDER ALVAREZ M.	repuestosauteco1@auteco.com.co	3104166342	
COORDINADOR SERVICIO POSTVENTA	LUIS G. RODRIGUEZ	lrodriguez@auteco.com.co		
DEVOLUCIONES	WILMAR ANTONIO BEDOYA C.	wbedoya@auteco.com.co		
RECLAMOS	JULIAN RODRIGUEZ			
MOTO FUERA DE RUTA	JONI HOLGUIN	motofueraderuta@auteco.com.co		

AUTOTECNICA COLOMBIANA S.A.S (AUTECO S.A.S) SEDE PRINCIPAL Cra. 42 N° 45-77 Itagüí Ant. - PBX: (4)306 81 81
Atención a clientes finales: LINEA GRATUITA NACIONAL - 01 8000 52 00 90

ÍNDICE

FIGURA Nº	DESCRIPCIÓN	PÁG. Nº	FIGURA Nº	DESCRIPCIÓN	PÁG. Nº
1	TAPA CULATA	1	28	REPOSAPIÉ CONDUCTOR	36 - 37
2	SISTEMA SAI	2	29	GUARDABARRO DELANTERO	38 - 39
3	CULATA	3	30	GATO CENTRAL / GATO LATERAL	40
4	VÁLVULAS	4	31	LLANTAS / RINES	41
5	EJE DE LEVAS / TENSOR CADENILLA	5	32	RUEDA DELANTERA	42
6	CILINDRO / PISTÓN	6	33	BOMBA FRENO DELANTERO	43
7	CIGÜEÑAL	7	34	CALIPER DELANTERO	44
8	TRANSMISIÓN	8 - 9	35	RUEDA TRASERA	45
9	SELECTOR DE CAMBIOS	10	36	BOMBA FRENO TRASERO	46 - 47
10	EJE DE CAMBIOS	11	37	PEDAL FRENO	48
11	CARCASA DERECHA	12 - 13	38	MANUBRIO	49 - 50
12	CARCASA IZQUIERDA	14 - 15	39	SUSPENSIÓN DELANTERA	51 - 52
13	BOMBA DE AGUA / PIÑÓN BALANCEADOR	16	40	CUBIERTAS RADIADOR	53
14	BOMBA DE ACEITE	17	41	COMPLEMENTOS CUBIERTAS TANQUE (PULSAR 200NS-NS200 BS-IV)	54
15	RADIADOR	18 - 19	42	COMPLEMENTOS CUBIERTAS TANQUE GASOLINA (PULSAR AS200)	55
16	CUBIERTA CLUTCH	20 - 21	43	TANQUE DE GASOLINA / GRIFO GASOLINA	56 - 57
17	CUBIERTA VOLANTE	22	44	COMPLEMENTOS TAPAS LATERALES / CUBIERTA SILLÍN	58
18	CLUTCH	23 - 24	45	VELOCÍMETRO	59
19	CARBURADOR (PULSAR NS200 - PULSAR AS200)	25	46	CABLES	60
19A	CARBURADOR (PULSAR NS200 BS-IV)	26	47	GUARDACADENA / GUARDABARRO TRASERO (PULSAR 200NS-NS200 BS-IV)	61
20	FILTRO DE AIRE	27	48	FAROLA / CARENAJE (PULSAR 200NS - NS200 BS-IV)	62 - 63
21	SILENCIADOR	28	49	FAROLA / CARENAJE (PULSAR AS200)	64
22	MOTOR DE ARRANQUE / PLATO DE BOBINAS	29	50	DIRECCIONALES	65
23	C.D.I. / BOBINAS	30	51	STOP (PULSAR 200NS - NS200 BS-IV)	66
24	SILLÍN	31 - 32	52	STOP / GUARDABARRO (PULSAR AS200)	67
25	SOPORTES DE MOTOR	33	53	EQUIPO ELÉCTRICO	68 - 69
26	CHASIS	34	54	SOPORTE CUBIERTAS MOTOR (NS200 BS-IV)	70
27	BRAZO OSCILANTE / AMORTIGUADOR	35	55	HERRAMIENTAS / ACCESORIOS	71

ÍNDICE

FIGURA Nº	DESCRIPCIÓN	PÁG. Nº	FIGURA Nº	DESCRIPCIÓN	PÁG. Nº
56	CUBIERTAS (PULSAR 200NS - NS200 BS-IV)	72			
57	CUBIERTAS (PULSAR 200AS)	73			
58	CALCOMANÍAS (PULSAR 200NS)	74			
59	CALCOMANÍAS (PULSAR AS200)	75			
60	CALCOMANÍAS Y ACCESORIOS (PULSAR 200NS PRO - NS200 BS-IV PRO 1ª EDICIÓN)	76			
61	CALCOMANÍAS Y ACCESORIOS PULSARMANIA (PULSAR 200NS - NS200 BS-IV)	77 - 79			
62	CALCOMANÍAS Y ACCESORIOS COPA PULSAR (PULSAR 200NS - NS200 BS-IV)	80 - 81			
63	CALCOMANÍAS (PULSAR 200NS BS-IV 1ª EDICIÓN)	82 - 83			
64	CALCOMANÍAS (PULSAR 200NS BS-IV 2ª EDICIÓN)	84 - 86			
65	CALCOMANÍAS (NS200 BS-IV PRO 2ª EDICIÓN)	87			
66	CALCOMANÍAS (PULSAR NS200 BS-IV PRO PRO 10M)	88 - 89			
67	ACCESORIOS (PULSAR NS200 BS-IV PRO PRO 10M)	90			
68	CALCOMANÍAS EDICIÓN NEGRO MATE	91			
69	CALCOMANÍAS EDICIÓN PULSARMANIA 2019	92 - 94			
70	ACCESORIOS EDICIÓN PULSARMANIA 2019	95			
	LISTA DE KITS	96 - 97			
	ÍNDICE DE REFERENCIAS	98 - 107			

ÍNDICE DE GRÁFICOS

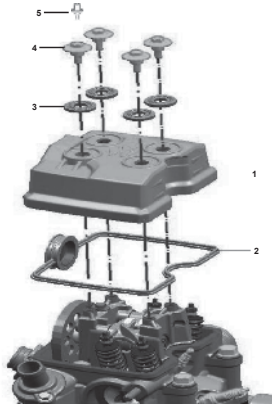


FIGURA N° 1: TAPA CULATA

PÁG. N°.
1

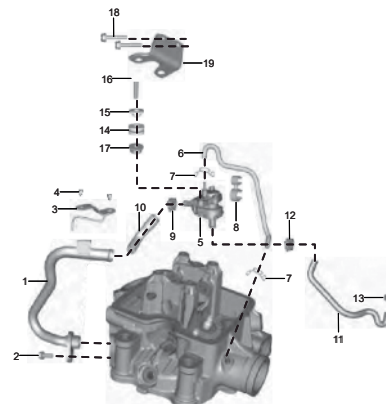


FIGURA N° 2: UNIDAD SAI

PÁG. N°.
2

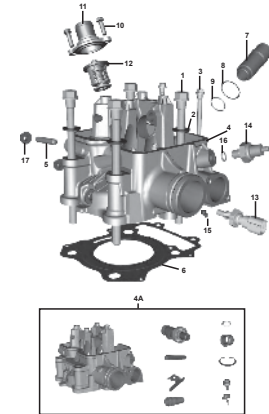


FIGURA N° 3: CULATA

PÁG. N°.
3

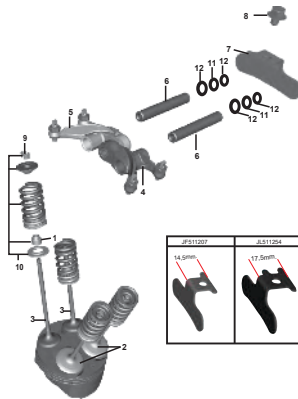


FIGURA N° 4: VÁLVULAS

PÁG. N°.
4

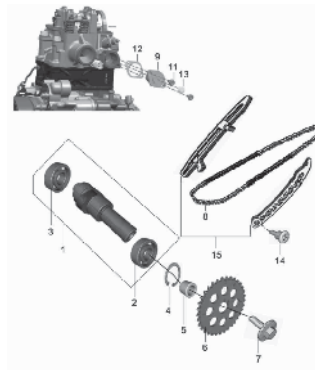


FIGURA N° 5: EJE DE LEVAS /
TENSOR CADENILLA

PÁG. N°.
5

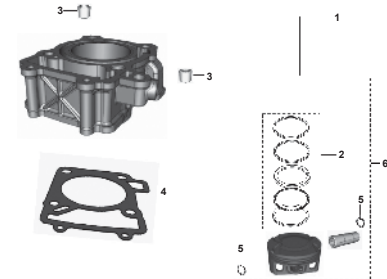
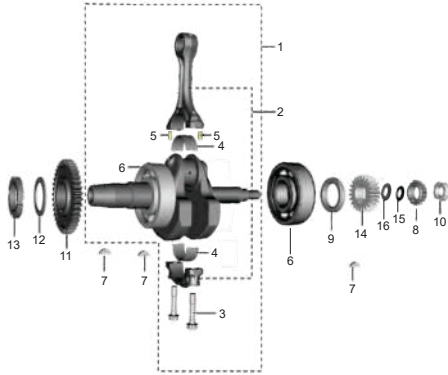
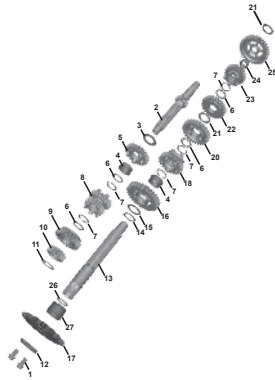
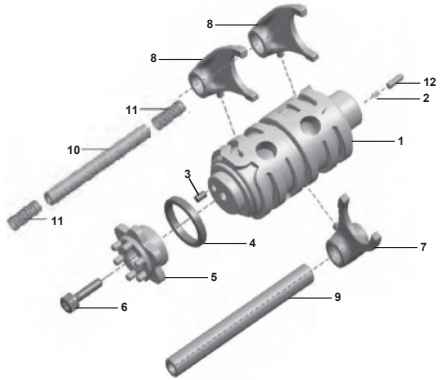
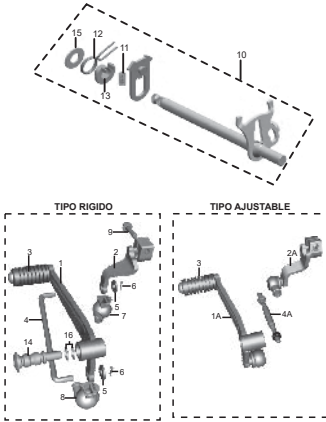
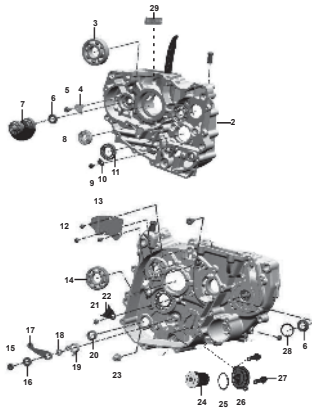
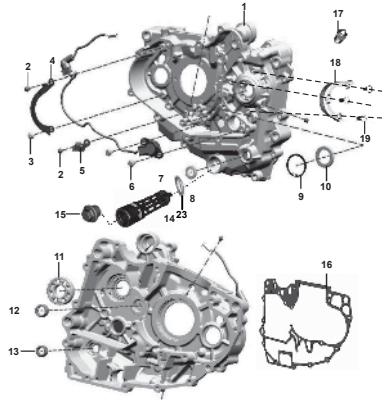



FIGURA N° 6: CILINDRO / PISTÓN

PÁG. N°.
6

ÍNDICE DE GRÁFICOS

					
FIGURA N° 7: CIGÜEÑAL	PÁG. N°. 7	FIGURA N° 8: TRANSMISIÓN	PÁG. N°. 8 - 9	FIGURA N° 9: SELECTOR DE CAMBIOS	PÁG. N°. 10
					
FIGURA N° 10: EJE DE CAMBIOS	PÁG. N°. 11	FIGURA N° 11: CARCASA DERECHA	PÁG. N°. 12 - 13	FIGURA N° 12: CARCASA IZQUIERDA	PÁG. N°. 14 - 15

ÍNDICE DE GRÁFICOS

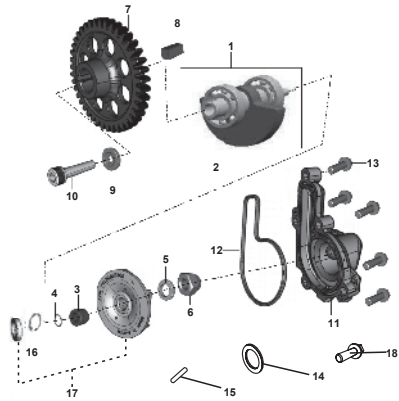

**FIGURA N° 13: BOMBA DE AGUA /
PIÑÓN BALANCEADOR**

**PÁG. N°.
16**

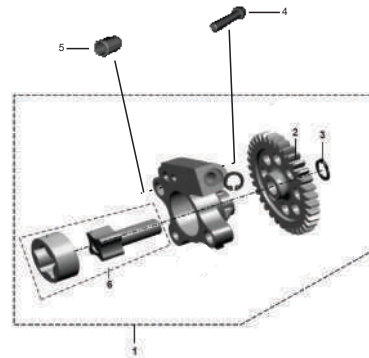


FIGURA N° 14: BOMBA DE ACEITE

**PÁG. N°.
17**

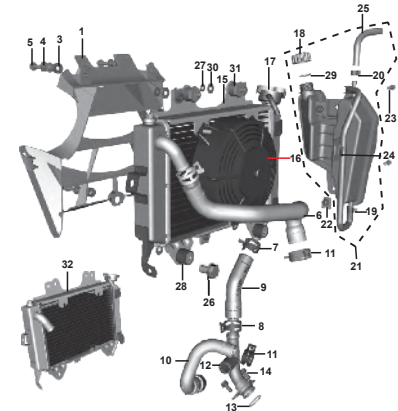


FIGURA N° 15: RADIADOR

**PÁG. N°.
18 - 19**

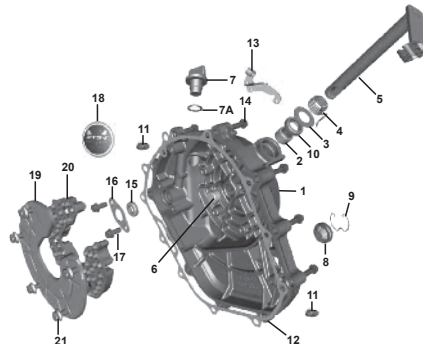


FIGURA N° 16: CUBIERTA CLUTCH

**PÁG. N°.
20 - 21**

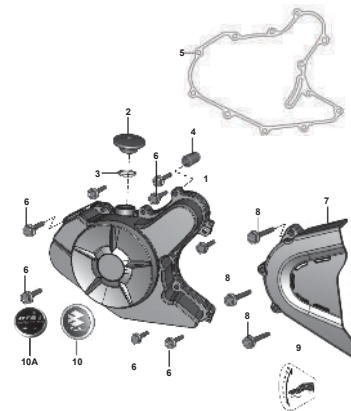


FIGURA N° 17: CUBIERTA VOLANTE

**PÁG. N°.
22**


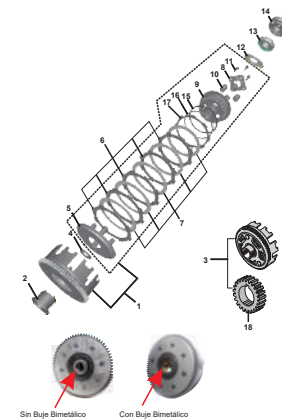


FIGURA N° 18: CLUTCH


**PÁG. N°.
23 - 24**

ÍNDICE DE GRÁFICOS

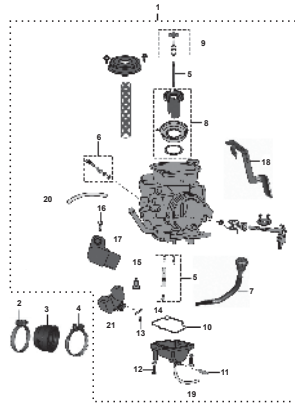

**FIGURA N° 19: CARBURADOR
(PULSAR 200NS - PULSAR AS200)**

**PÁG. N°.
25**

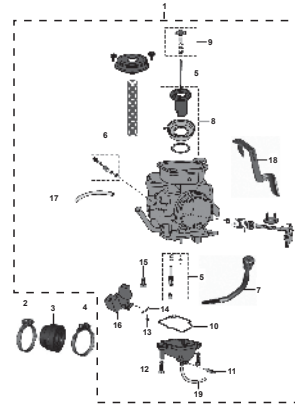

**FIGURA N° 19A: CARBURADOR
(PULSAR NS200 BS-IV)**

**PÁG. N°.
26**

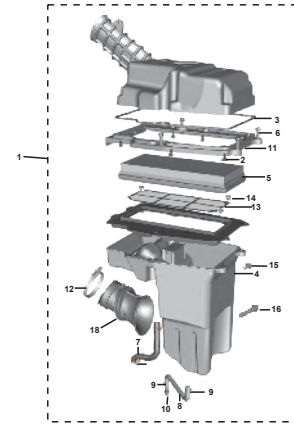


FIGURA N° 20: FILTRO DE AIRE

**PÁG. N°.
27**


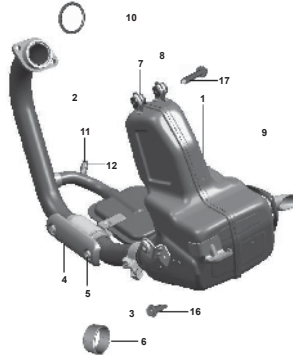


FIGURA N° 21: SILENCIADOR

**PÁG. N°.
28**

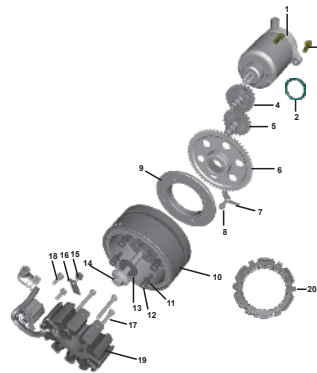

**FIGURA N° 22: MOTOR DE ARRANQUE /
PLATO DE BOBINAS**

**PÁG. N°.
29**

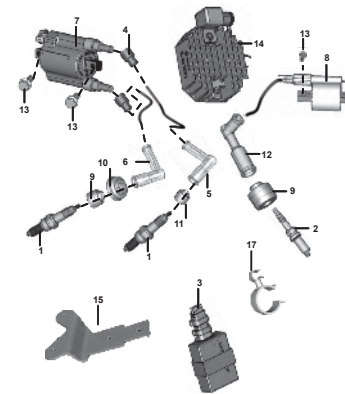


FIGURA N° 23: C.D.I / BOBINAS

**PÁG. N°.
30**

ÍNDICE DE GRÁFICOS

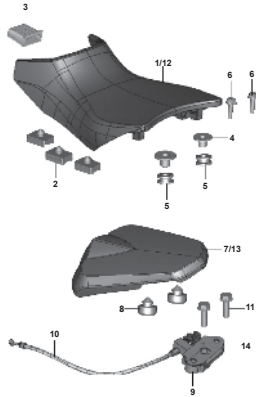


FIGURA N° 24: SILLÍN

PÁG. N°.
31 - 32

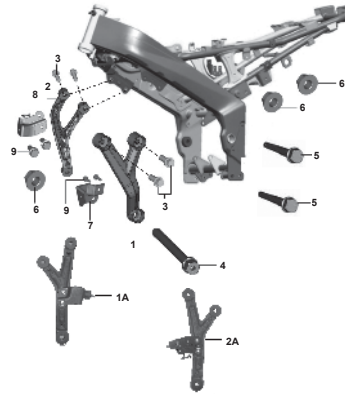


FIGURA N° 25: SOPORTES DE MOTOR

PÁG. N°.
33


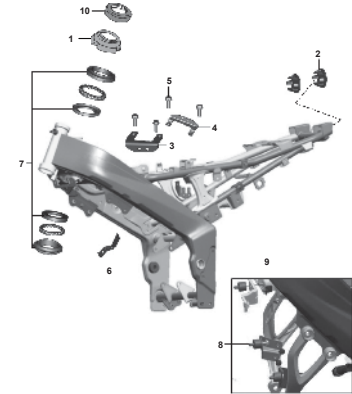


FIGURA N° 26: CHASIS

PÁG. N°.
34

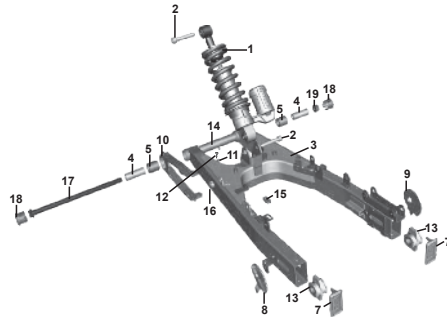

**FIGURA N° 27: BRAZO OSCILANTE /
AMORTIGUADOR**

PÁG. N°.
35

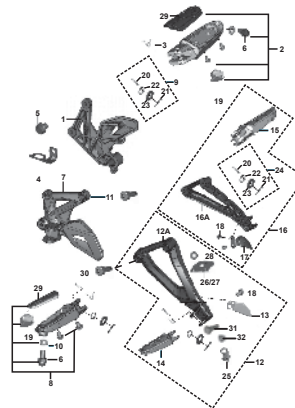


FIGURA N° 28: REPOSAPIÉ CONDUCTOR

PÁG. N°.
36 - 37


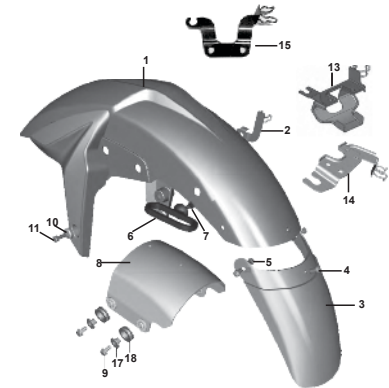


FIGURA N° 29: GUARDABARRO DELANTERO

PÁG. N°.
38 - 39

ÍNDICE DE GRÁFICOS

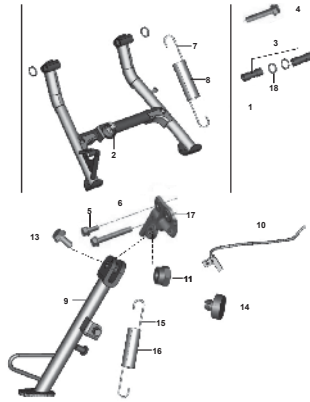

**FIGURA N° 30: GATO CENTRAL /
GATO LATERAL**

PÁG. N°.
40



FIGURA N° 31: LLANTAS / RINES

PÁG. N°.
41

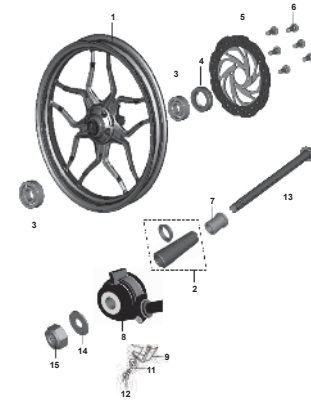


FIGURA N° 32: RUEDA DELANTERA

PÁG. N°.
42

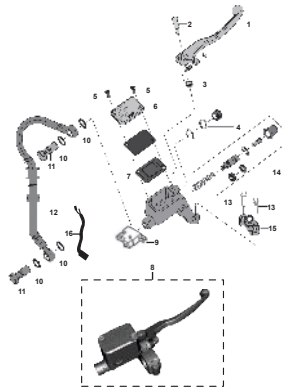


FIGURA N° 33: BOMBA FRENO DELANTERO

PÁG. N°.
43

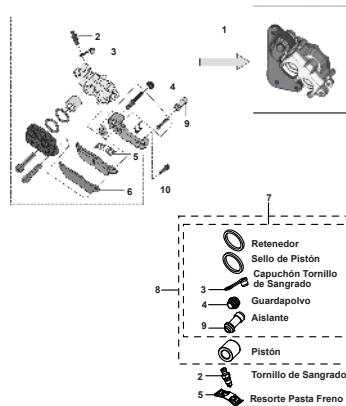


FIGURA N° 34: CALIPER DELANTERO

PÁG. N°.
44

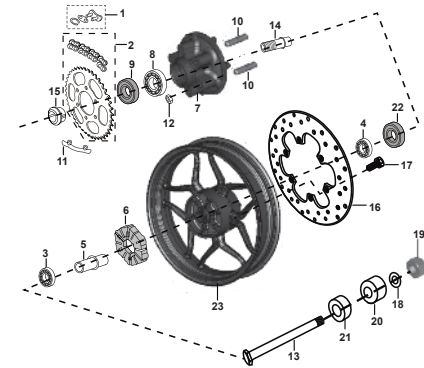


FIGURA N° 35: RUEDA TRASERA

PÁG. N°.
45

ÍNDICE DE GRÁFICOS

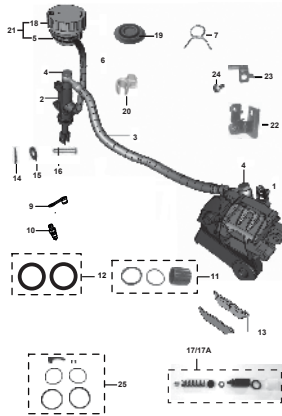


FIGURA N° 36: BOMBA FRENO TRASERO

PÁG. N°.
46 - 47

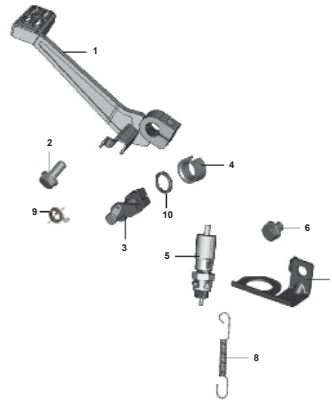


FIGURA N° 37: PEDAL FRENO

PÁG. N°.
48

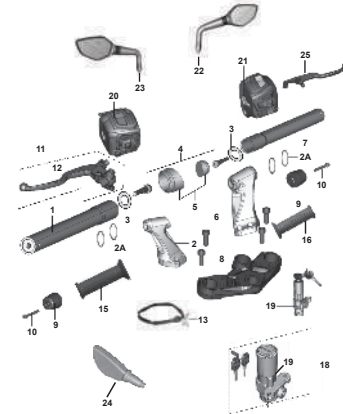


FIGURA N° 38: MANUBRIO

PÁG. N°.
49 - 50

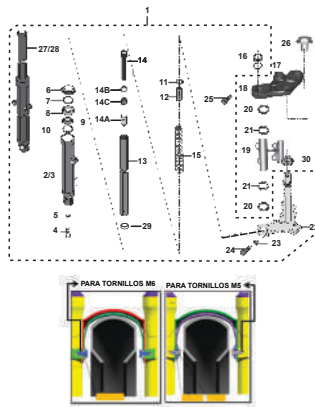


FIGURA N° 39: SUSPENSIÓN DELANTERA

PÁG. N°.
51 - 52


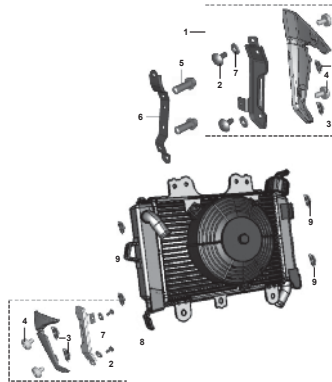


FIGURA N° 40: CUBIERTAS RADIADOR

PÁG. N°.
53





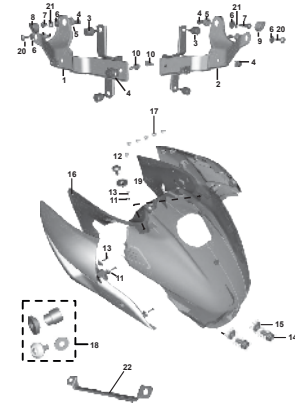


**FIGURA N° 41: COMPLEMENTOS CUBIERTAS
TANQUE GASOLINA (PULSAR NS200-NS200 BS-IV)**







PÁG. N°.

54







ÍNDICE DE GRÁFICOS

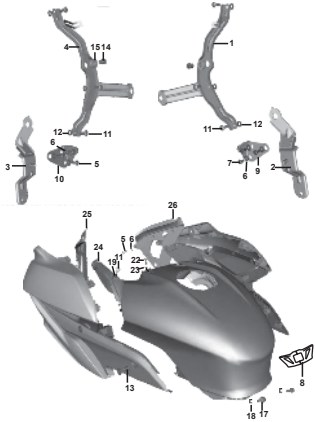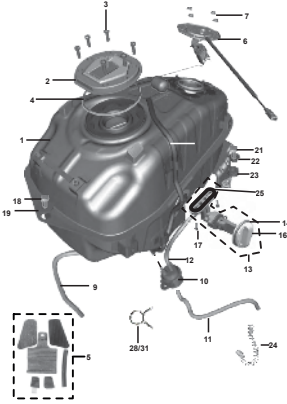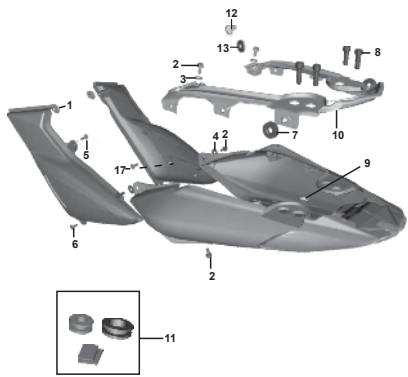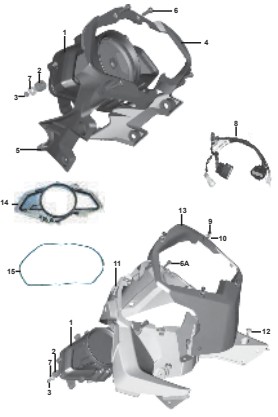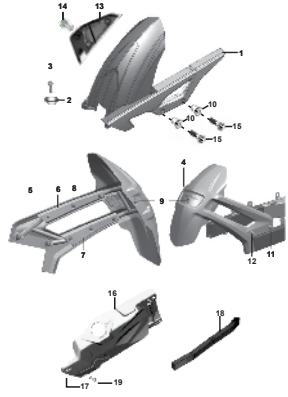					
FIGURA N° 42: COMPLEMENTOS CUBIERTAS TANQUE GASOLINA (PULSAR AS200)	PÁG. N°. 55	FIGURA N° 43: TANQUE DE GASOLINA / GRIFO GASOLINA	PÁG. N°. 56 - 57	FIGURA N° 44: COMPLEMENTOS TAPAS LATERALES / CUBIERTA SILLÍN	PÁG. N°. 58
					
FIGURA N° 45: VELOCÍMETRO	PÁG. N°. 59	FIGURA N° 46: CABLES	PÁG. N°. 60	FIGURA N° 47: GUARDACADENA / GUARDABARRO TRASERP (PULSAR 200NS-NS200 BS-IV)	PÁG. N°. 61






ÍNDICE DE GRÁFICOS

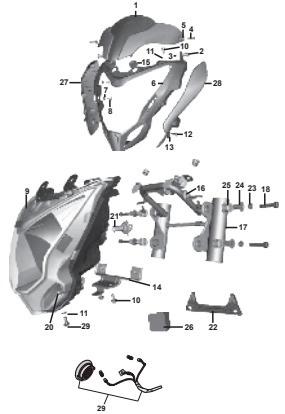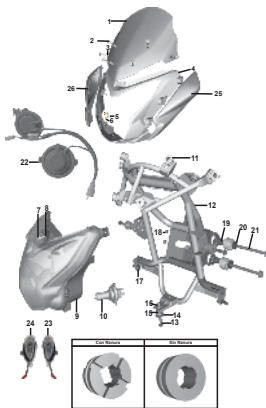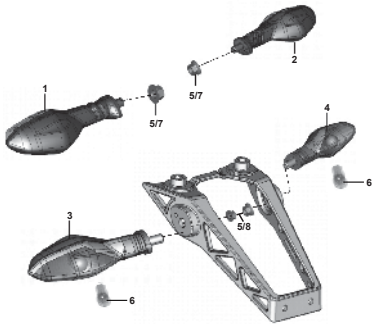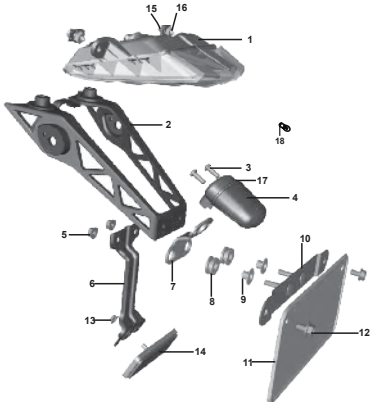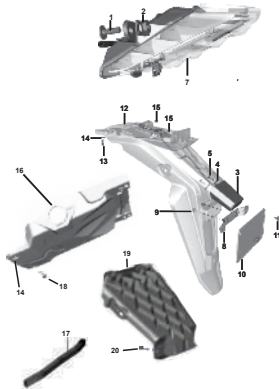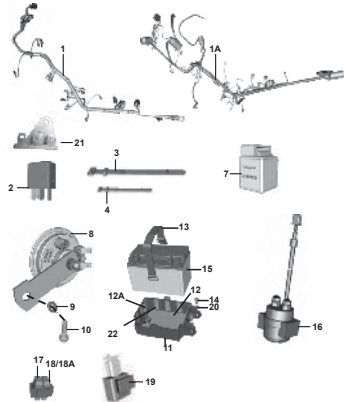		
FIGURA N° 48: FAROLA / CARENAJE (PULSAR NS200-NS200 BS-IV)	FIGURA N° 49: FAROLA / CARENAJE (PULSAR AS200)	FIGURA N° 50: DIRECCIONALES
		
FIGURA N° 51: STOP (PULSAR NS200-NS200 BS-IV)	FIGURA N° 52: STOP / GUARDABARRO TRASERO (PULSAR AS200)	FIGURA N° 53: EQUIPO ELÉCTRICO





ÍNDICE DE GRÁFICOS

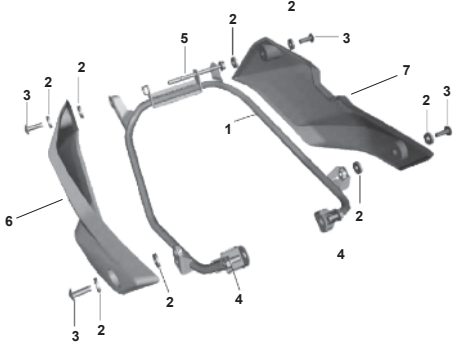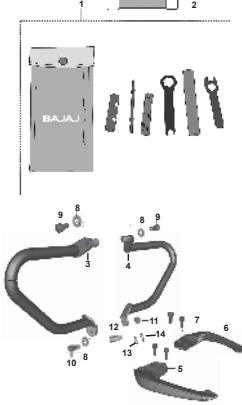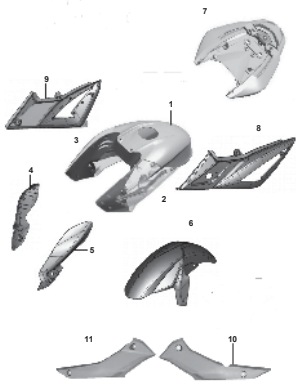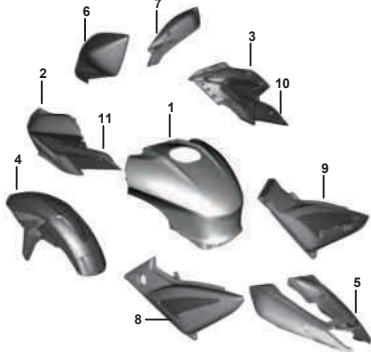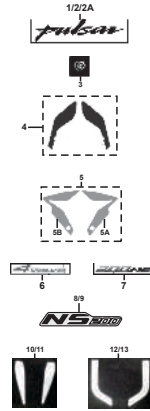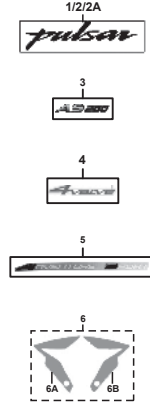	FIGURA N° 54: SOPORTE CUBIERTAS MOTOR (NS200 BS-IV) PÁG. N°. 70
	FIGURA N° 55: HERRAMIENTAS / ACCESORIOS PÁG. N°. 71
	FIGURA N° 56: CUBIERTAS (PULSAR NS200-NS200 BS-IV) PÁG. N°. 72
	FIGURA N° 57: CUBIERTAS (PULSAR AS200) PÁG. N°. 73
	FIGURA N° 58: CALCOMANÍAS (PULSAR NS200) PÁG. N°. 74
	FIGURA N° 59: CALCOMANÍAS (PULSAR AS200) PÁG. N°. 75

ÍNDICE DE GRÁFICOS

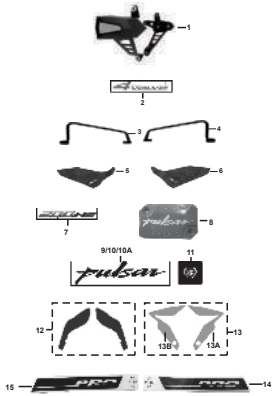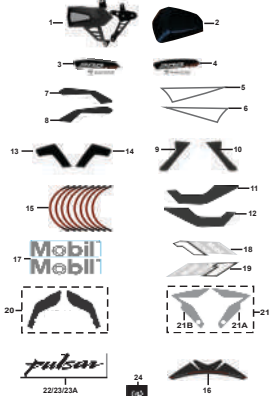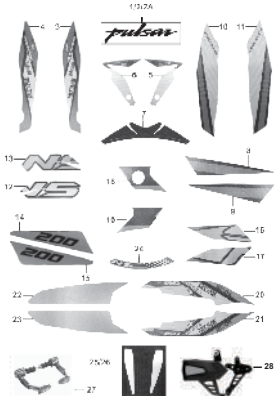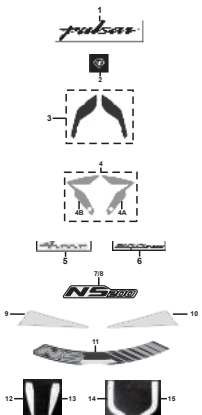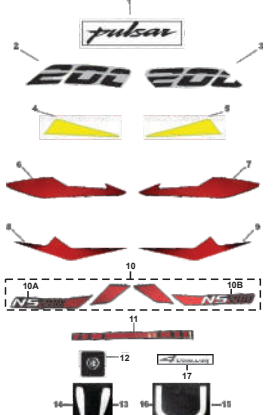		
FIGURA N° 60: CALCOMANÍAS Y ACCESORIOS (PULSAR 200NS PRO - 200NS BS-IV PRO 1ª EDICIÓN)	FIGURA N° 61: CALCOMANÍAS Y ACCESORIOS PULSARMANIA (PULSAR 200NS - NS200 BS-IV)	FIGURA N° 62: CALCOMANÍAS Y ACCESORIOS COPA PULSAR 200NS (PULSAR 200NS-NS200 BS-IV)
		
FIGURA N° 63: CALCOMANÍAS (NS200 BS-IV 1ª EDICIÓN)	FIGURA N° 64: CALCOMANÍAS (NS200 BS-IV 2ª EDICIÓN)	FIGURA N° 65: CALCOMANÍAS (NS200 BS-IV PRO 2ª EDICIÓN)

ÍNDICE DE GRÁFICOS

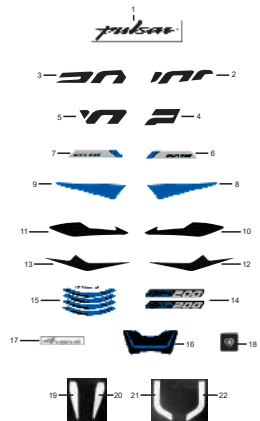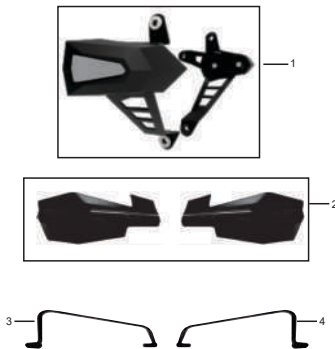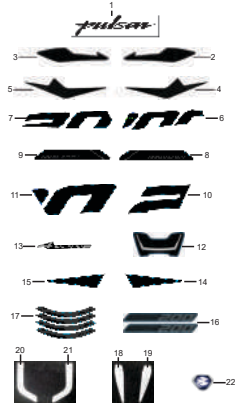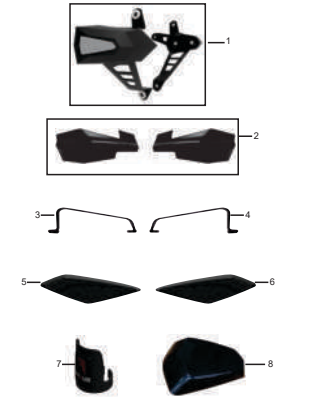	FIGURA N° 66: CALCOMANÍAS (PULSAR NS200 BS-IV PRO 10M)	PÁG. N°. 88 - 89		FIGURA N° 67: ACCESORIOS (PULSAR NS200 BS-IV PRO 10M)	PÁG. N°. 90		FIGURA N° 68: CALCOMANÍAS EDICIÓN NEGRO MATE	PÁG. N°. 91
	FIGURA N° 69: CALCOMANÍAS EDICIÓN PULSARMANIA 2019	PÁG. N°. 92 - 94		FIGURA N° 70: ACCESORIOS EDICIÓN PULSARMANIA 2019	PÁG. N°. 95			

This diagram illustrates the assembly of the engine head. The components are numbered as follows:

- 1**: Engine head casting with four valve ports.
- 2**: A metal frame or gasket that fits around the base of the head.
- 3**: Four circular gaskets or washers, one for each valve port.
- 4**: Four valve stems or guides, one for each port.
- 5**: A small pin or clip used to secure the valve stems.

The diagram shows the head (1) being positioned over the engine block. The frame (2) is placed below the head. The gaskets (3) are inserted into the ports of the head. The valve stems (4) are then inserted through the gaskets into the block. Finally, the pins (5) are used to hold the valve stems in place.

[illegible]

FIGURA N° 3: CULATA

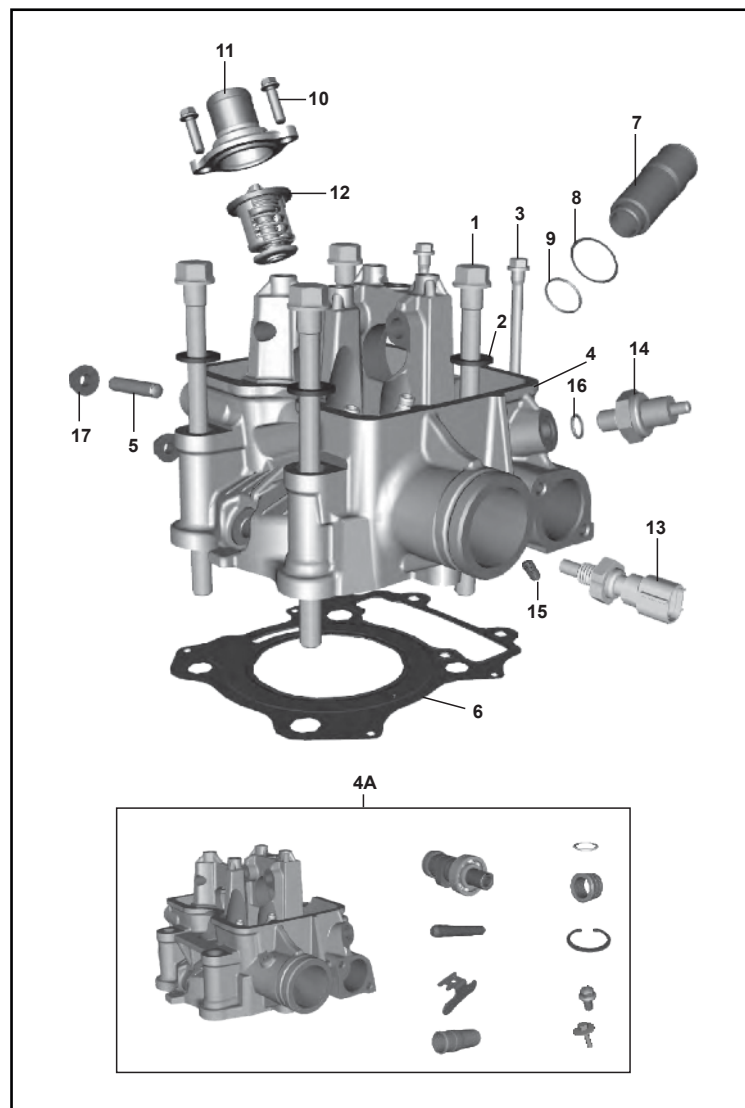


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JG541068	Tornillo Culata 10 mm.	4	4	4	
2	LDA00008	Arandela 11.2x20x2	4	4	4	
3	JL511009	Tornillo Culata 6 mm.	2	2	2	
4	36JL0010	Culata (Sola)	1	1	-	
	JL511080		-	-	1	
4A	36JL0145	Culata Completa	-	-	1	
5	JG511046	Esparrago 8 mm.	2	2	2	
6	JL511022	Empaque Culata	1	1	1	
	36JL0014	Kit Empaques	1	1	1	Ref. Pág. No. 96
7	JL511219	Torre Bujía	1	1	1	Diámetro Anillo Retenedor 21 mm.
	JL511112		-	-	1	Diámetro Anillo Retenedor 18.5 mm.
8	39262921	Anillo Retenedor	1	1	1	Diámetro 21 mm.
	KJAC1824		-	-	1	Diámetro 18.5 mm.
9	39128321	Anillo Retenedor	1	1	1	
10	39167304	Tornillo 6 mm.	2	-	2	
	KAEQ0620		-	2	-	
11	JL511029	Cubierta Termostato	1	1	1	
12	JL601237	Termostato	1	1	1	
12A	JL601225	Retenedor Termostato	1	1	1	No Ilustrado
13	JG351400	Sensor Temperatura	1	1	1	
14	DK101225	Swiche Presión Aceite	1	1	1	
15	39260801	Tornillo 5x0.8x7	1	1	1	
16	39269920	Anillo Retenedor	1	1	1	
17	LCG00006	Tuerca 8 mm.	2	2	2	
NOTA: Si la Culata que tien ela moto contiene el balancín de longitud 64mm. y se necesita realizar el recambio de la Culata, se debe solicitar la Culata completa de referencia 36JL0145						

Exploded view diagram of a rear suspension assembly. The components are numbered as follows:

- 1: Shock absorber
- 2: Coil spring
- 3: Shock absorber mounting plate
- 4: Ball joint
- 5: Control arm
- 6: Pin
- 7: Bracket
- 8: Nut
- 9: Washer
- 10: Shock absorber mounting plate
- 11: Bushing
- 12: Bushing

Dimensions for the bracket (7) are provided in the table below:

JF511207	JL511254
14,5mm	17,5mm



pulsar
NS200-4S200

This exploded view diagram illustrates the components of a chainsaw engine and bar assembly. The parts are numbered as follows:

- 1**: Main engine housing.
- 2**: Piston and connecting rod assembly.
- 3**: Spark plug.
- 4**: Piston pin.
- 5**: Piston pin clip.
- 6**: Crankshaft gear.
- 7**: Crankshaft pin.
- 8**: Chainsaw bar.
- 9**: Bar nut.
- 10**: Bar pin.
- 11**: Bar pin clip.
- 12**: Bar pin clip.
- 13**: Bar pin clip.
- 14**: Chain.
- 15**: Guide shoe.



Exploded view diagram of a pressure washer lance assembly. The diagram shows the lance (1) with a trigger gun (3) attached to the handle. A spray lance (4) is shown separately. A dashed box contains the internal components: a spring (2), a trigger gun (5), and a handle (6).



pulsar
NS200-4S200

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 16. The central assembly consists of a main housing (1) and a rotating shaft (2). The shaft is supported by bearings (6) and a gear (11). The gear is connected to a smaller gear (14) via a pin (16). The assembly is secured with a cap screw (3) and a lock washer (4). The diagram also shows the installation of O-rings (12, 13) and a seal (15) to ensure proper sealing and lubrication.



FIGURA N° 8: TRANSMISIÓN (1/2)

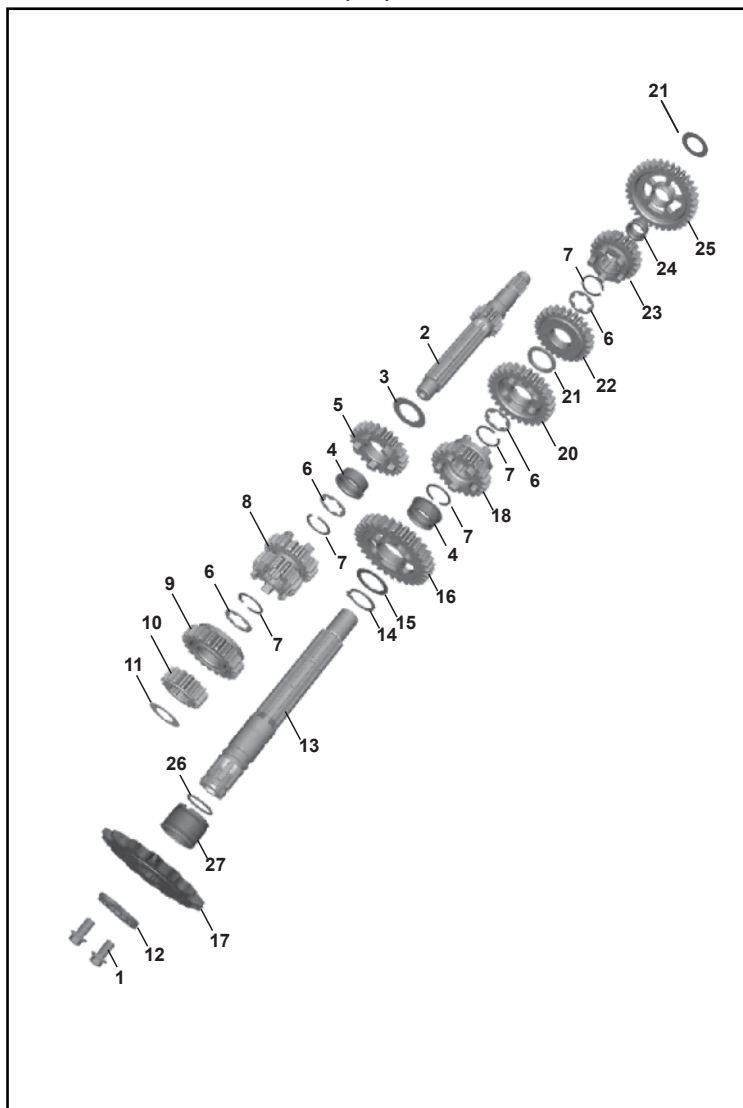


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	LAE00017	Tornillo 6x1x10	2	2	2	
2	JG551027	Eje Clutch	1	1	1	
3	39215811	Arandela Eje Caja	1	1	1	
4	JG551013	Buje Caja	2	2	2	
5	JG551213	Piñón de 6A. (24T)	1	1	1	
6	JG551020	Arandela	4	4	4	
7	BF551037	Pin de Seguridad	5	5	5	
8	JG551214	Piñón Múltiple 3A & 4A (18/21T)	1	1	1	
9	JG551220	Piñón de 5A. (22T)	1	1	1	
10	JG551227	Piñón de 2A. (15T)	1	1	1	
11	JG551022	Arandela	1	1	1	
12	JG551019	Arandela Sprocket	1	1	1	
13	JG551025	Eje Piñón Salida	1	1	1	
14	DH101235	Pin de Seguridad	1	1	1	
15	39216611	Arandela Caja	1	1	1	
16	JG551228	Piñón de 2A. (31T)	1	1	1	
17	DV101048	Piñón Salida 14T	1	1	1	
18	JG551222	Piñón de 5A. (23T)	1	1	1	
19	JG551028	Eje Clutch Completo	1	1	1	No Ilustrado
20	JG551223	Piñón de 3A. (28T)	1	1	1	
21	JG551021	Arandela	2	2	2	
22	JG551215	Piñón de 4A. (26T)	1	1	1	
23	JG551224	Piñón de 6A. (22T)	1	1	1	
24	JG551000	Buje Caja	1	1	1	
25	JG551225	Piñón de 1A. (34T)	1	1	1	

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or motor. The components are numbered 1 through 27. The assembly is shown in a disassembled state, with parts arranged in a linear fashion from left to right. Key components include a small screw (1), a pin (12), a large housing (17), a shaft (13), a gear (11), a bearing (10), a gear (9), a bearing (6), a gear (8), a bearing (7), a gear (5), a bearing (4), a gear (3), a shaft (2), a gear (16), a bearing (15), a gear (14), a bearing (18), a gear (20), a bearing (21), a gear (22), a bearing (23), a gear (24), a bearing (25), and a small ring (26). The diagram is presented in a perspective view, showing the relative positions and orientations of the parts.



pulsar
NS200-AS200

An exploded view diagram of a mechanical assembly, likely a pump or actuator. The components are numbered 1 through 12. The central component is a cylindrical body (1) with a flange and mounting tabs. It is surrounded by various parts including a long shaft (9), a smaller shaft (10), a nut (6), a washer (4), a ring (3), a bracket (7), a lever (8), a pin (2), a small pin (12), and a small pin (11). Dashed lines indicate the assembly path for each part.



Diagram illustrating the exploded view of a mechanical assembly, showing components numbered 1 through 15. The components include a long shaft (10), a bracket (11), a nut (12), a washer (13), a pin (14), a bush (15), and various other parts (1, 2, 3, 4, 5, 6, 7, 8, 9).



pulsar
NS200-4S200

FIGURA N° 11: CARCASA DERECHA (1/2)

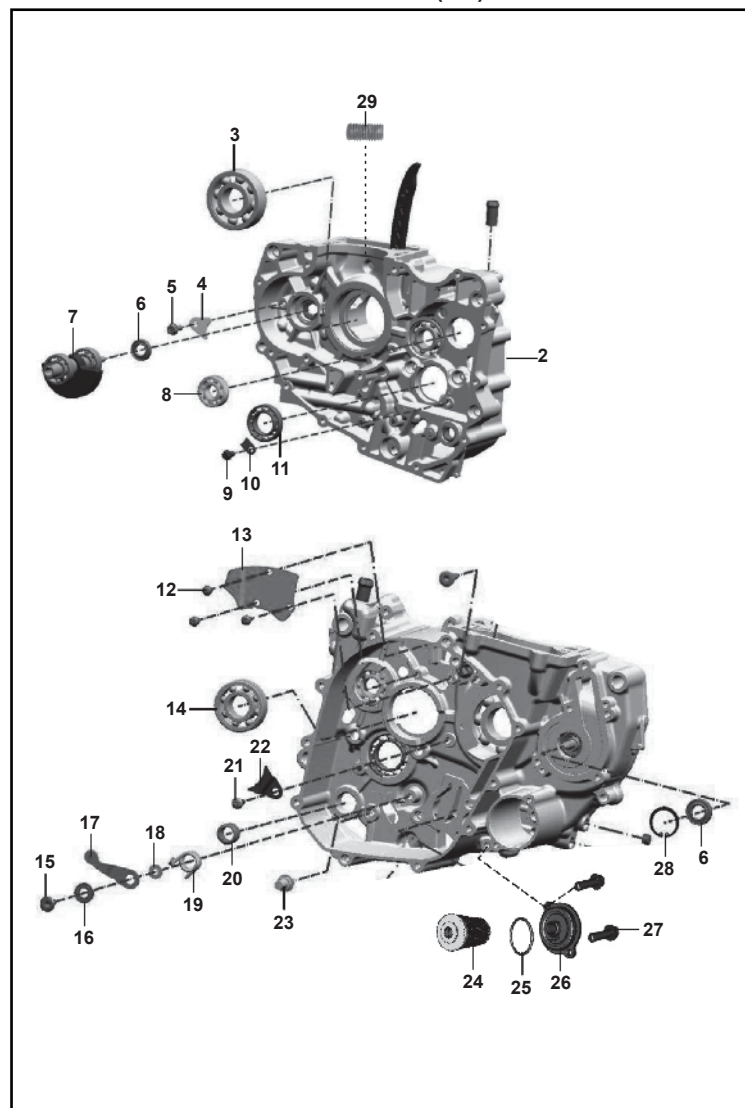


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL501003	Motor Completo	1	-	-	No Ilustrado
	JL501040		-	1	-	No Ilustrado
	JL501063		-	-	1	No Ilustrado
2	36JL0004	Carcasa Derecha	1	1	-	
	36DT0079		-	-	1	
3	39193120	Rodamiento Bolas 28x68x18	1	1	1	
4	JG541046	Platina Guia Tope	1	1	-	
	JY541047		-	-	1	
5	LAD00077	Tornillo 6x16	1	1	1	
6	36JL0039	Kit Reten y Turbina	2	2	2	
7	JU531213	Balanceador	1	-	-	Cuñero con Guía
	JU531215		1	1	-	Cuñero Redondo
	JL531205		1	1	1	Cuñero Largo 17.5 mm.
8	39260220	Rodamiento Bolas 6202/HN3	1	1	1	
9	DH101383	Tornillo 6x12	1	1	1	
10	JG541059	Platina Guia Tope	1	1	1	
11	39260120	Rodamiento Bolas 25x42x9	1	1	1	
12	LBB00006	Tornillo 5x0.8x10	3	3	3	
13	JU541005	Platina	1	1	1	
14	59200028	Rodamiento Bolas 20x47x14	1	1	1	
15	JG561204	Tornillo	1	1	1	
16	JG561205	Arandela	1	1	1	
17	JG561009	Leva Eje Cambios	1	1	1	
18	39200511	Arandela	1	1	1	
19	JG561226	Resorte	1	1	1	

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The main body is labeled 2. Various sub-assemblies and individual parts are shown with dashed lines indicating their assembly paths. The numbered parts are as follows:

- 1: A small circular component, possibly a cap or seal.
- 2: The main housing or pump body.
- 3: A circular flange or mounting plate.
- 4: A small pin or screw.
- 5: A small circular component.
- 6: A small circular component.
- 7: A large circular component, possibly a rotor or impeller.
- 8: A small circular component.
- 9: A small pin or screw.
- 10: A small circular component.
- 11: A small circular component.
- 12: A small pin or screw.
- 13: A small circular component.
- 14: A circular flange or mounting plate.
- 15: A small pin or screw.
- 16: A small circular component.
- 17: A small circular component.
- 18: A small pin or screw.
- 19: A small circular component.
- 20: A small circular component.
- 21: A small pin or screw.
- 22: A small circular component.
- 23: A small pin or screw.
- 24: A small circular component.
- 25: A small circular component.
- 26: A small circular component.
- 27: A small pin or screw.
- 28: A small circular component.
- 29: A small circular component.



This diagram shows an exploded view of a mechanical assembly, likely a pump or engine component. The main housing is shown in the center. Various parts are numbered and shown in their relative positions with dashed lines indicating assembly paths. The parts include:

- 1: Main housing/casing
- 2: Two small pins or screws
- 3: A curved bracket or arm
- 4: A cable or hose
- 5: A small connector or pin
- 6: A small pin or screw
- 7: A small pin or screw
- 8: A small pin or screw
- 9: A small pin or screw
- 10: A small pin or screw
- 11: A circular flange or cover
- 12: A small pin or screw
- 13: A small pin or screw
- 14: A long, cylindrical component, possibly a shaft or piston
- 15: A small pin or screw
- 16: A gasket or seal plate
- 17: A small pin or screw
- 18: A small pin or screw
- 19: A small pin or screw
- 20: A small pin or screw
- 21: A small pin or screw
- 22: A small pin or screw
- 23: A small pin or screw



This diagram illustrates the exploded view of a motorcycle engine crankcase assembly. The main components are the crankcase halves (1 and 16) and the crankshaft (14). The diagram shows the following parts and their assembly sequence:

- 1**: Crankcase upper half.
- 2**: Bolts for the crankcase cover.
- 3**: Crankcase cover.
- 4**: Crankcase cover gasket.
- 5**: Crankcase cover pin.
- 6**: Crankcase cover pin.
- 7**: Crankcase cover pin.
- 8**: Crankcase cover pin.
- 9**: Crankcase cover pin.
- 10**: Crankcase cover pin.
- 11**: Crankcase cover pin.
- 12**: Crankcase cover pin.
- 13**: Crankcase cover pin.
- 14**: Crankshaft.
- 15**: Crankshaft pin.
- 16**: Crankcase lower half.
- 17**: Crankcase cover pin.
- 18**: Crankcase cover pin.
- 19**: Crankcase cover pin.
- 20**: Crankcase cover pin.
- 21**: Crankcase cover pin.
- 22**: Crankcase cover pin.
- 23**: Crankcase cover pin.



pulsar
NS200-4S200

FIGURA N° 13: BOMBA DE AGUA / PIÑÓN BALANCEADOR

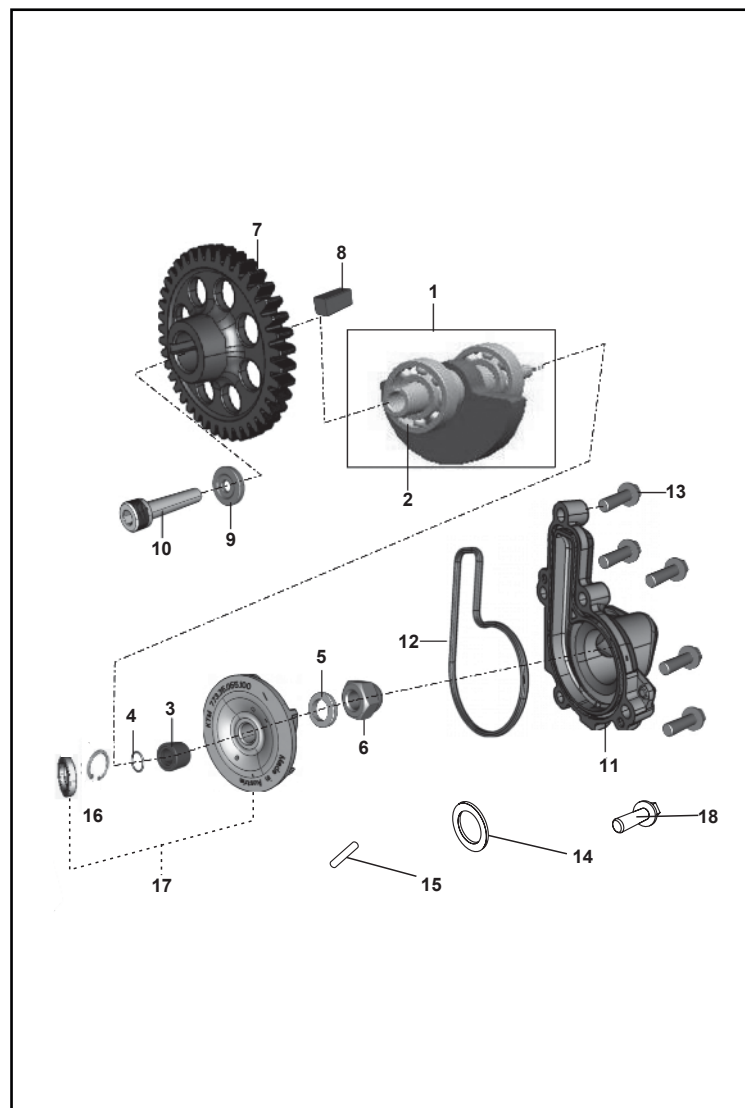


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS-IV	
1	JU531213	Balanceador	1	-	1	Cuñero con Guía
	JU531215		1	1	1	Cuñero Redondo
	JL531205		1	1	1	Cuñero Largo 17.5 mm.
2	59200036	Rodamiento Bolas 620HN3	2	2	2	
3	JG531211	Buje Balanceador	1	-	1	Para JU531213
	JG531228		1	1	1	Para JU531215
	JL531203		1	1	1	Para JL531205
4	JG531212	Anillo Retenedor	1	-	1	Para JU531213
	JG531229		1	1	1	Para JU531215-JL531205
5	JG531215	Arandela 2.5 mm.	1	1	1	
6	JG601005	Tuerca Balanceador	1	1	1	
7	JG531207	Piñón Balanceador	1	1	1	
8	DS101154	Cuña Piñón Balanceador	1	1	1	
9	DH101048	Arandela 8.2x26x3	1	1	-	
	LDB00051		-	-	1	
10	DK101386	Tornillo 8x40	1	1	-	
	LAC00086		-	-	1	
11	JL601005	Tapa Bomba Agua	1	1	1	
12	JG601012	Empaque Tapa Bomba Agua	1	1	1	
13	KADQ0620	Tornillo	5	5	5	
14	39166511	Arandela 6 mm.	1	1	1	
15	39260607	Pin	2	2	2	
16	LEB00001	Pin de Seguridad	1	1	1	
17	36JL0039	Kit Retenes y Turbina	1	1	1	
18	KADQ0606	Tornillo	10	10	10	

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 1**: A large, complex cast metal housing or bracket.
- 2**: A gear or pulley with multiple teeth, mounted on a shaft.
- 3**: A small circular ring or washer.
- 4**: A long, threaded bolt or screw.
- 5**: A small, cylindrical component, possibly a pin or a small bush.
- 6**: A long, cylindrical component, possibly a shaft or a long pin.

The assembly is shown in a perspective view, with dashed lines indicating the alignment and fit of the components. The housing (1) has a central opening where the gear (2) is mounted. The bolt (4) is used to secure the gear assembly to the housing. The small ring (3) is positioned near the gear's teeth. The cylindrical component (6) is shown in a separate position, likely representing a shaft or a long pin that fits into the housing.

[illegible]

FIGURA N° 15: RADIADOR (1/2)

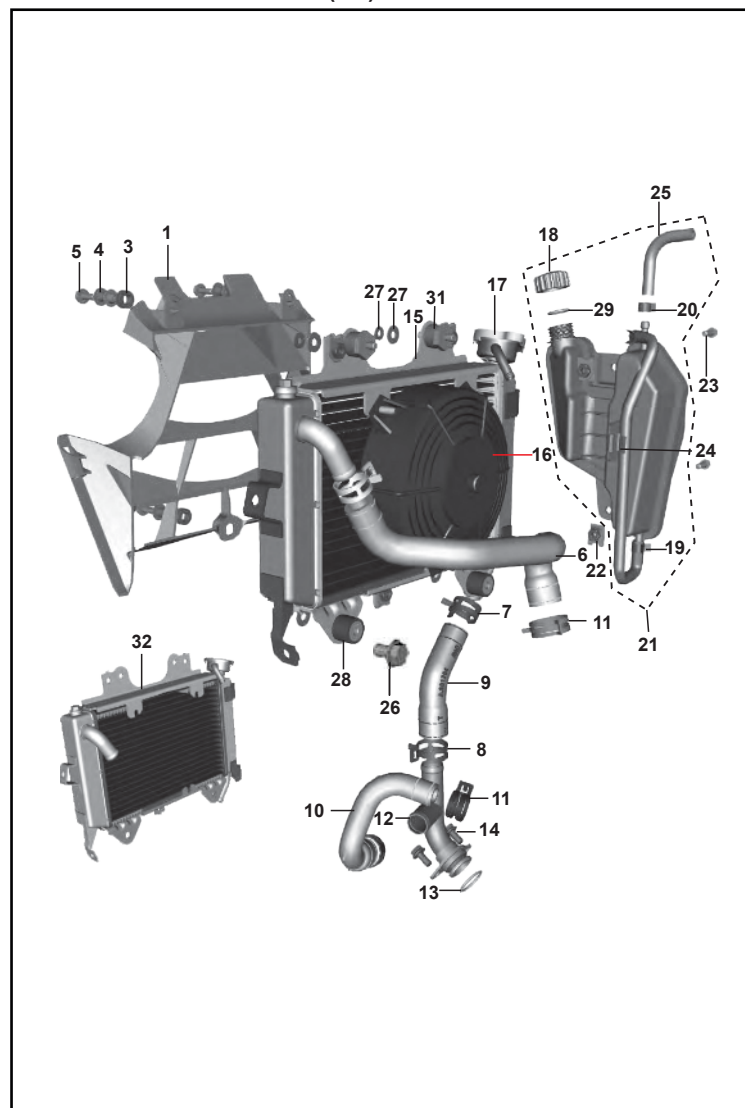


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL601210	Carenaje Radiador	1	1	1	
2	JG601210	Abrazadera	1	1	1	No Ilustrado
3	JL181256	Antivibrante	3	3	3	
4	JW171015	Buje 8.2 mm.	3	-	-	
	JL601231	Buje 9.2 mm.	3	3	3	
5	39194404	Tornillo 6x12	3	3	3	
6	JL601000	Manguera Radiador	1	1	1	
7	JG601234	Abrazadera Manguera Radiador	1	1	1	
8	JG601209	Abrazadera	2	2	2	
9	JL601220	Manguera Radiador	1	1	1	
10	JL601219	Manguera Radiador	1	1	1	
11	JL601212	Abrazadera	1	1	1	
12	JL601228	Tubo T	1	1	1	
13	JG601221	Anillo Retenedor	1	-	1	
	LJA00005		-	1	-	
14	39220404	Tornillo 6 mm.	2	2	-	
	LAE00041		-	-	2	
15	JL601238	Radiador Completo	1	1	1	
16	JY601235	Ventilador Radiador	1	1	1	
17	JG601229	Tapa Radiador	1	-	-	Plástica
17A	JG601235	Tapa Radiador	1	1	1	Metálica
18	JG601211	Tapa Tanque Líquido Refrigerante	1	1	1	
19	JL601215	Abrazadera	2	2	2	
20	JG171029	Abrazadera Tanque Líquido Refrigerante	3	3	3	
21	JL601209	Tanque Líquido Refrigerante	1	-	-	Tapa al Lado Derecho
	JL601235		1	1	1	Tapa al Lado Izquierdo

This exploded view diagram illustrates the assembly of a vehicle engine cooling system. The components are numbered as follows:

- 1:** Upper engine block/cylinder head area.
- 3, 4, 5:** Bolts/screws for the upper engine cover.
- 6:** Small connector or plug.
- 7:** Hose clamp.
- 8:** Hose clamp.
- 9:** Lower radiator hose.
- 10:** Lower radiator hose.
- 11:** Hose clamp.
- 12:** Hose clamp.
- 13:** Hose clamp.
- 14:** Hose clamp.
- 15:** Bolt/screw.
- 16:** Radiator core.
- 17:** Upper radiator hose.
- 18:** Cap for the coolant reservoir.
- 19:** Coolant reservoir.
- 20:** Hose clamp.
- 21:** Coolant reservoir.
- 22:** Hose clamp.
- 23:** Hose clamp.
- 24:** Coolant reservoir.
- 25:** Coolant reservoir.
- 26:** Hose clamp.
- 27:** Bolt/screw.
- 28:** Hose clamp.
- 29:** Hose clamp.
- 31:** Bolt/screw.
- 32:** Radiator.



pulsar
NS200-4S200

FIGURA N° 16: CUBIERTA CLUTCH (1/2)

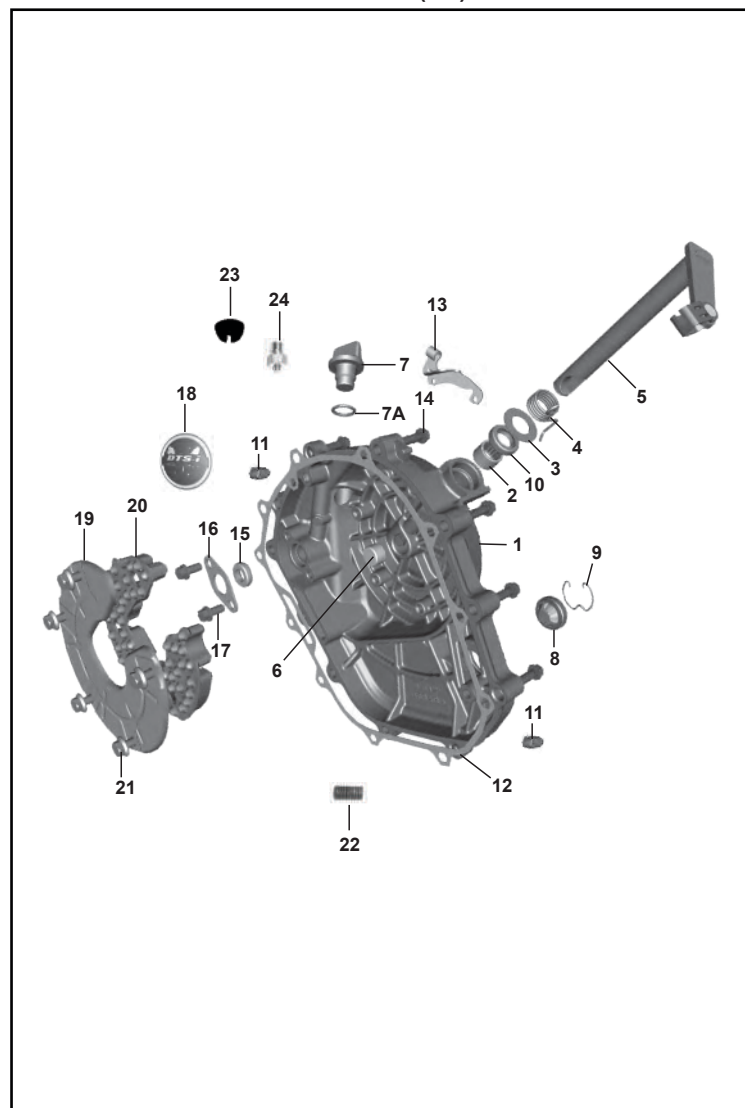


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS-IV	
1	52JL0073	Cubierta Clutch	1	-	-	Dorada
	52JL0143		1	-	-	Dorado Oscuro
	DT541212		-	1	-	
	52JL0892		-	-	1	
2	39199020	Rodamiento Agujas	1	1	1	
3	LDB00020	Arandela 12.5x24x0.8	1	1	1	
4	JG551017	Resorte Eje Interno Clutch	1	1	1	
5	JG551015	Eje Interno Clutch	1	-	1	
	DT541019		-	1	-	
6	JU551401	Empujador Clutch	1	1	1	
7	JG541230	Tapón Aceite	1	1	1	
7A	39153721	Anillo Retenedor	1	1	1	
8	DG101418	Visor Nivel Aceite	1	-	1	
	JL541227		-	1	-	
9	DS101215	Pin de Seguridad	1	1	1	
10	39104119	Reten Eje Interno Clutch	1	1	1	
11	39099906	Pin Guía	2	2	2	
12	JL541207	Empaque Carcasa Clutch	1	1	1	
	36JL0014	Kit Empaques	1	1	1	Ref. Pág. N° 96
13	JL541210	Soporte Cable Clutch	1	-	1	
	JL541246		-	1	-	
14	KADQ0630	Tornillo 6x30	11	-	11	
	KAEQ0630		-	11	-	
15	39104619	Reten	1	1	1	
16	JG541231	Arandela	1	1	1	
17	AA101437	Tornillo 6x12	2	2	2	

This diagram illustrates the exploded view of a motorcycle engine assembly, showing the main engine block and various associated components. The parts are numbered as follows:

- 1**: Main engine block/cylinder assembly.
- 2**: Small circular component, likely a gasket or seal.
- 3**: Small circular component, likely a gasket or seal.
- 4**: Small circular component, likely a gasket or seal.
- 5**: Long, angled metal bracket or support arm.
- 6**: Small circular component, likely a gasket or seal.
- 7**: Small cylindrical component, likely a pin or bolt.
- 7A**: Small circular component, likely a gasket or seal.
- 8**: Small circular component, likely a gasket or seal.
- 9**: Small circular component, likely a gasket or seal.
- 10**: Small circular component, likely a gasket or seal.
- 11**: Small circular component, likely a gasket or seal.
- 12**: Small circular component, likely a gasket or seal.
- 13**: Small cylindrical component, likely a pin or bolt.
- 14**: Small cylindrical component, likely a pin or bolt.
- 15**: Small circular component, likely a gasket or seal.
- 16**: Small circular component, likely a gasket or seal.
- 17**: Small circular component, likely a gasket or seal.
- 18**: Circular component with a central hole, likely a cover or plate.
- 19**: Large, curved metal component, likely a bracket or support arm.
- 20**: Small circular component, likely a gasket or seal.
- 21**: Small circular component, likely a gasket or seal.
- 22**: Small rectangular component, likely a gasket or seal.
- 23**: Small circular component, likely a gasket or seal.
- 24**: Small cylindrical component, likely a pin or bolt.



pulsar
NS200-4S200

This exploded view diagram illustrates the assembly of a Honda engine. The components are numbered as follows:

- 1**: Main engine block/cylinder assembly.
- 2**: Top cover/cap.
- 3**: O-ring or seal.
- 4**: Spark plug.
- 5**: Oil pan/guard.
- 6**: Various screws and bolts used for assembly.
- 7**: Side cover/plate.
- 8**: Screws for the side cover.
- 9**: Air filter.
- 10**: Air filter base.
- 10A**: Air filter element.



pulsar
NS200-4S200

FIGURA N° 18: CLUTCH (1/2)

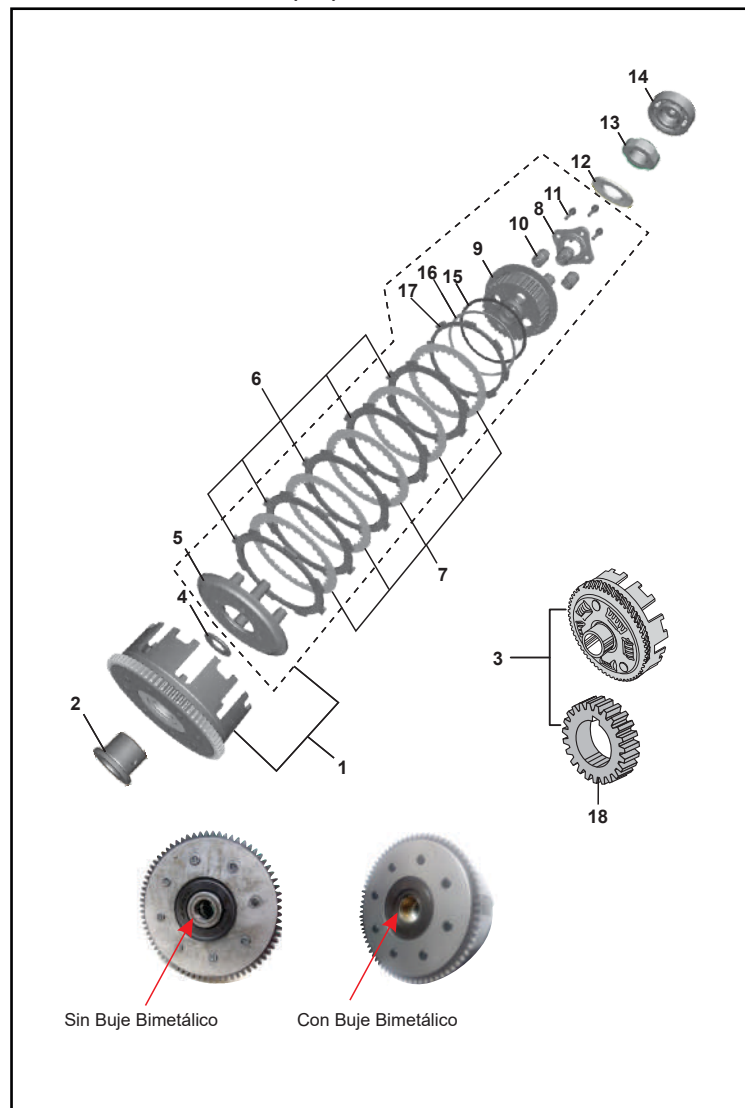


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JU551404	Clutch Completo	1	-	-	
	DT551400		-	1	1	Sin Buje Bimetalico
	DT551409		-	-	1	Con Buje Bimetalico
2	JG551427	Buje Corona Clutch	1	1	1	Para DT551400
	DT551412		-	-	1	Para DT551409
3	36JL0005	Kit Corona y Piñón Primario	1	1	1	Sin Buje Bimetalico
	36DT0055		-	-	1	Con Buje Bimetalico
4	JG551428	Arandela Corona Clutch	1	1	1	
5	JG551449	Porta Resortes Clutch	1	-	-	
	DT551402		-	1	1	
6	36JU0002	Kit Discos Clutch	1	1	1	
7	JG551447	Disco Separador Clutch	5	5	-	
	DT551408		-	-	5	
8	JG551443	Porta Resortes Clutch	1	1	1	
9	JU551406	Corona Interna Clutch	1	-	-	
	DT551401		-	1	1	
10	JU551402	Resorte Clutch	4	-	-	
	DT551403		-	4	4	
11	JG551451	Tornillo 6x22	4	4	4	
12	39220011	Arandela Piñón Primario	1	1	1	
13	DH101648	Tuerca Clutch	1	1	1	
NOTA: La Referencia 36JL0005 (Kit Corona y Piñón Primario) es intercambiable con la referencia 36DT0055 siempre y cuando también se reemplace en conjunto con el buje Corona Clutch DT551412						



pulsar
NS200-4S200

FIGURA N° 19: CARBURADOR (PULSAR 200NS - PULSAR AS200)

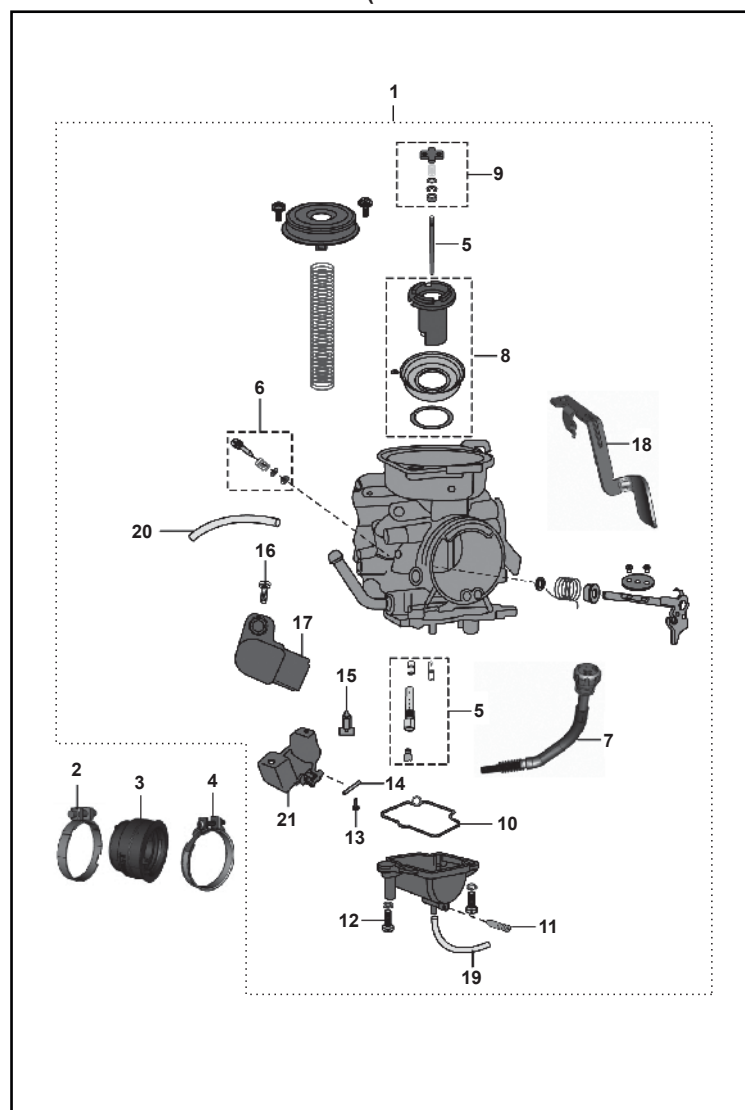


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL581201	Carburador	1	1	-	
2	JL581300	Abrazadera	1	1	-	
3	JL511016	Antivibrante	1	1	-	
4	JL581027	Abrazadera	1	1	-	
5	36JL0019	Kit Boquereles y Aguja Carburador	1	1	-	Ref. Pág. No. 96
6	36JL0020	Kit Tornillos Ajuste Carburador	1	1	-	Ref. Pág. No. 97
7	36JL0021	Cable Controlador Carburador	1	1	-	
8	36JL0022	Kit Válvula Carburador	1	1	-	
9	36JL0024	Kit Pines-Arandela Carburador	1	1	-	Ref. Pág. No. 97
10	36JL0023	Kit Retenedores y Empaques	1	1	-	Ref. Pág. No. 97
11	JA581314	Tornillo Drenaje	1	1	-	
12	CB121042	Tornillo Taza Carburador	2	2	-	
13	DH121064	Tornillo	3	3	-	
14	DH121063	Pin Pasador Flota Carburador	1	1	-	
15	DK121047	Aguja Flota Carburador	1	1	-	
16	39178001	Tornillo M5	2	2	-	
17	JD351800	Posicionador Acelerador (TPS)	1	1	-	
18	JL581204	Leva Choke	1	1	-	
19	JL581205	Manguera Desfogue	1	1	-	
20	JL581206	Manguera Gasolina	1	1	-	
21	DK121045	Flota Carburador	1	1	-	

[illegible]

This exploded view diagram illustrates the components of a car stereo unit. The main body of the unit is labeled 1. The diagram shows the following parts and their assembly sequence:

- 1**: Main stereo unit housing.
- 3**: Top faceplate.
- 6**: Screws for the top faceplate.
- 11**: Mounting bracket for the faceplate.
- 2**: Screws for the mounting bracket.
- 5**: Antenna sleeve.
- 14**: Antenna bracket.
- 13**: Screws for the antenna bracket.
- 15**: Mounting screw for the antenna bracket.
- 4**: Mounting screw for the main unit.
- 16**: Mounting screw for the antenna bracket.
- 12**: Ring for the antenna sleeve.
- 18**: Antenna sleeve.
- 7**: Antenna cable.
- 9**: Antenna cable connector.
- 10**: Antenna cable connector.
- 8**: Antenna cable connector.



pulsar
NS200-4S200

FIGURA N° 21: SILENCIADOR

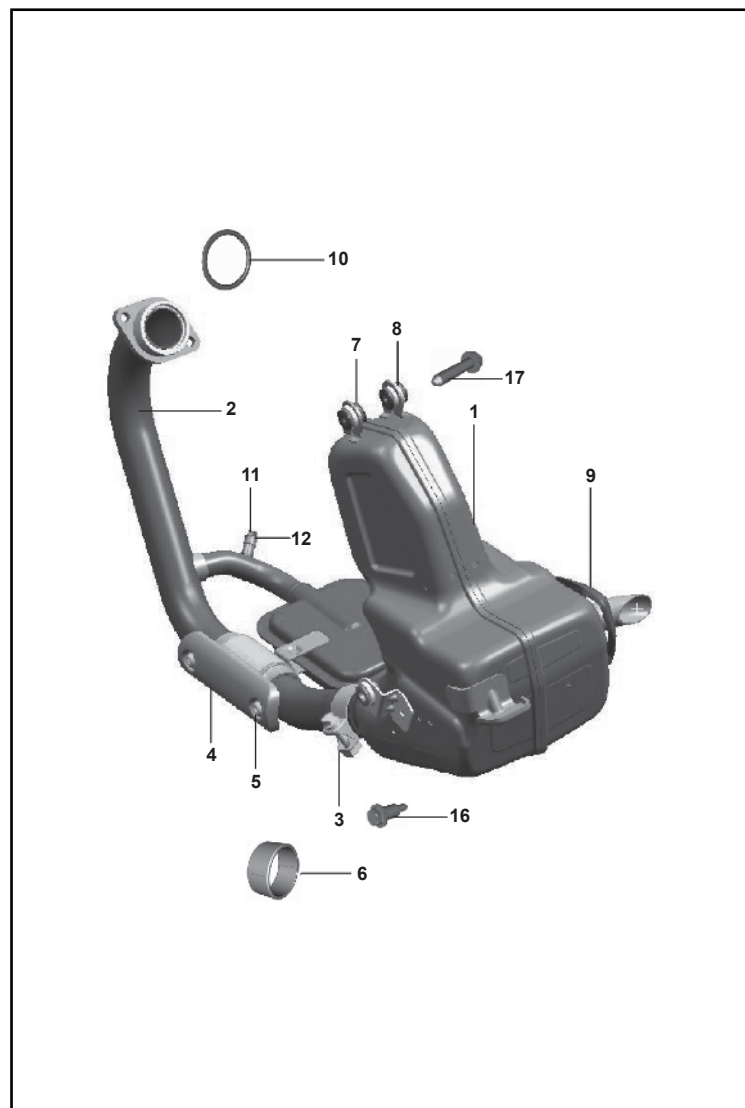


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL591052	Silenciador	1	1	-	
	JL591196		-	-	1	
2	JL591048	Tubo Escape	1	1	-	
	JL591226		-	-	1	
3	JG591038	Abrazadera	1	1	1	
4	JL591144	Protector Tubo Escape	1	1	1	
5	DH101607	Tornillo	4	4	4	
6	JG591039	Empaque Silenciador	1	1	1	
7	JG591096	Buje	4	4	4	
8	JG591097	Antivibrante	4	-	-	
	JL591165		4	4	4	Desde Marzo 2014
9	JL591075	Protector Silenciador	1	1	1	
10	JG591070	Empaque Tubo Escape	1	1	1	
11	39275404	Tornillo 5 mm.	1	1	-	
	KADA0510		-	-	1	
12	39249211	Arandela	1	1	1	
13	JG591053	Antivibrante	4	4	4	No Ilustrado
14	KADQ0625	Tornillo 6 mm.	2	2	2	No Ilustrado
15	JG591088	Tuerca 6 mm.	2	2	2	No Ilustrado
16	JL591086	Tornillo	2	2	2	
17	JL591148	Tornillo 6x30	2	-	2	
	KADA0630		-	2	-	
18	39230404	Tornillo 6 mm.	-	-	1	No Ilustrado
19	JL591157	Buje Inferior	-	-	1	No Ilustrado

FIGURA N° 22: MOTOR DE ARRANQUE / PLATO DE BOBINAS

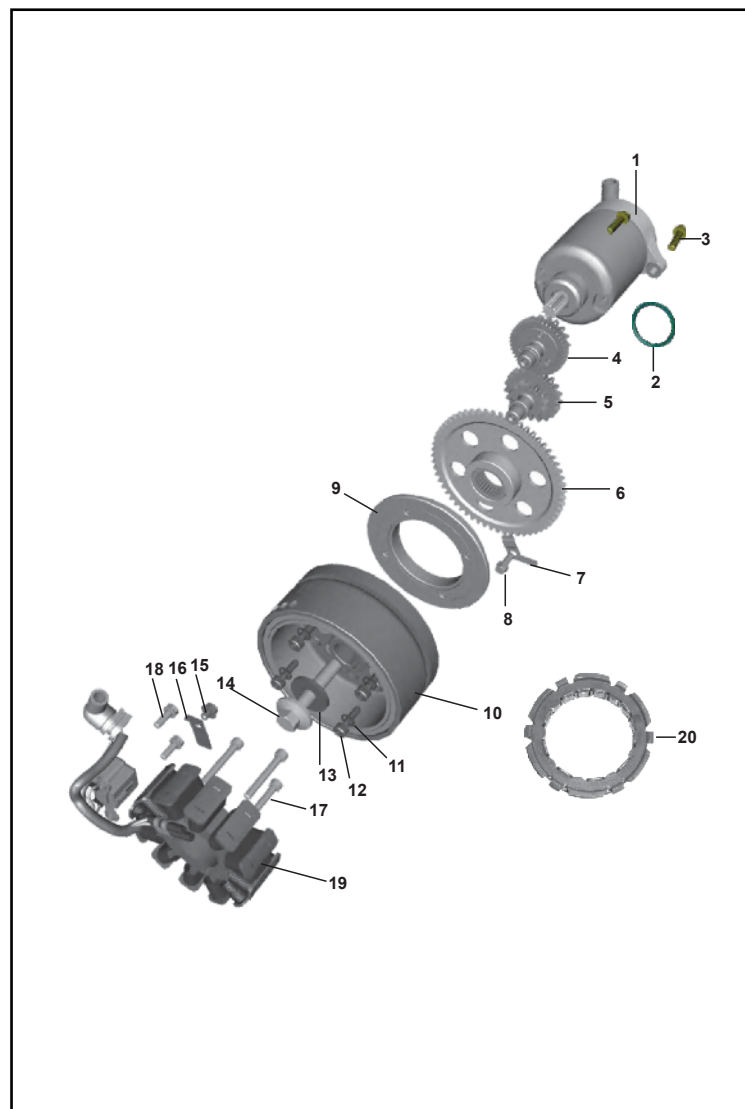


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL351600	Motor Arranque	1	1	1	
2	JA351627	Anillo Retenedor Arranque	1	1	1	
3	KADQ0625	Tornillo 6 mm.	1	1	1	
4	JG621413	Piñón Arranque	1	1	1	
5	JG621412	Piñón Arranque	1	1	1	
6	JG621417	Piñón Arranque	1	1	1	
7	JG541043	Platina Piñón Arranque	1	1	1	
8	39167204	Tornillo 6x16	1	1	1	
9	JG351019	Soporte Clutch de Una Vía	1	1	1	
10	JL351009	Volante	1	1	1	
11	39084914	Arandela	4	4	4	
12	DH101389	Tornillo 6x20	4	4	4	
13	39216511	Arandela	1	-	1	
	LDB00010	Arandela 10.3x29x3.2	-	1	-	
14	DH101396	Tornillo 10x30	1	-	-	
	LAD00055	Tornillo 10x1.25x50	1	1	1	
15	LAE00016	Tornillo 5x0.8x6	1	1	1	
16	DH101199	Platina Tope	1	1	1	
17	DK101284	Tornillo 5x0.8x35	3	3	3	
18	LAE00010	Tornillo 5x13	2	2	2	
19	JL351003	Plato de Bobinas	1	-	1	
	JL351038		-	1	-	
20	JY551402	Clutch de Una Vía	1	1	1	

FIGURA N° 23: C.D.I. / BOBINAS

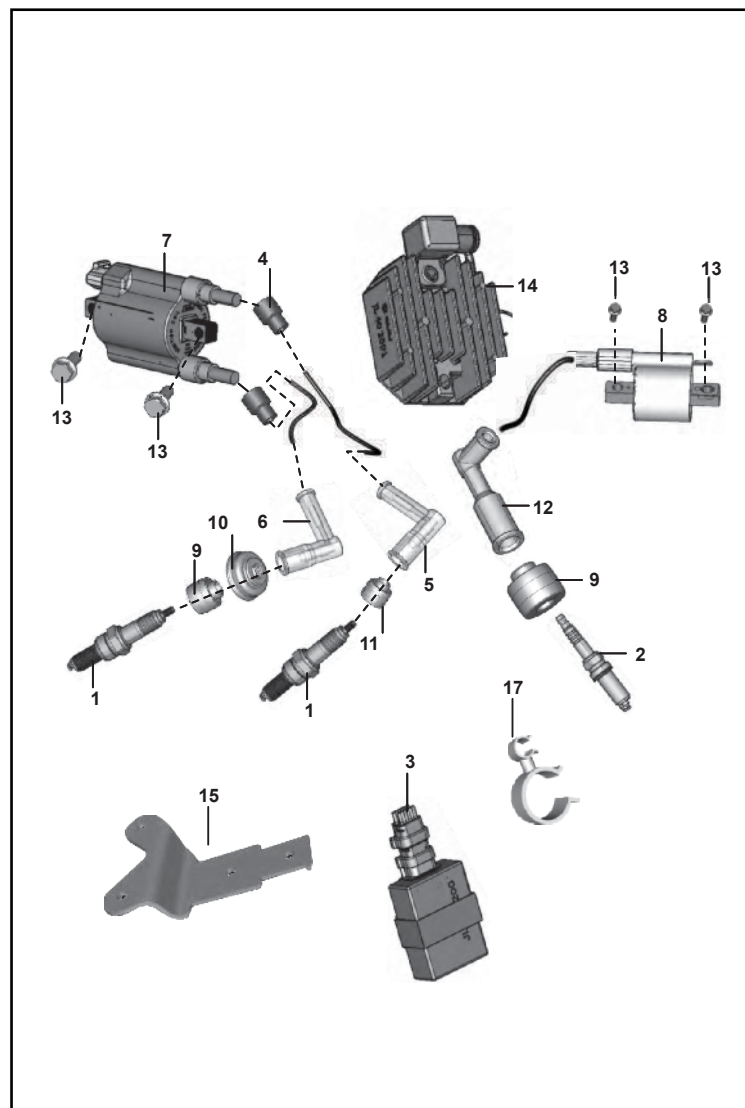


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	DK111028	Bujía RG6HCC	2	2	2	
2	JG351209	Bujía Champion RER6YC	1	1	-	
	JL351218	Bujía Bosch Central	-	-	1	
3	JL351200	C.D.I.	1	-	-	
	JL351241		-	1	-	
	JL351246		-	-	1	
4	DD111012	Antivibrante Capuchón Bujía	2	2	2	
5	JD351207	Capuchón Bujía	1	1	1	
6	AN111015	Capuchón Bujía	1	1	1	
7	JL351201	Bobina de Alta Izquierda	1	-	-	
	JL351232		-	1	-	
8	JL351202	Bobina de Alta Derecha	1	-	-	
	JL351230		-	1	-	
9	DH111013	Antivibrante Capuchón Bujía	2	2	2	
10	DH111016	Antivibrante Capuchón Bujía	1	1	1	
11	DD111011	Antivibrante Capuchón Bujía	1	1	1	
12	DK111011	Capuchón Bujía	1	1	1	
13	39194404	Tornillo	4	4	-	
	KADF0610		-	-	4	
14	JL402001	Regulador	1	1	1	Para Unidad Control Luces
	JL402007		1	1	-	Para Moto con Flasher
15	JL113836	Platina C.D.I.	-	-	1	
16	JL351219	Kit Bobinas	-	-	1	Items: 7 y 8

This diagram illustrates the assembly of a motorcycle seat. It features two main seat sections, labeled 1/12 and 7/13. Section 1/12 is the larger front portion, while 7/13 is the smaller rear portion. The assembly includes various mounting hardware:

- Part 3: A small rectangular plate.
- Part 2: Three small rectangular spacers.
- Part 4: A circular washer or spacer.
- Part 5: Two sets of spacers, each consisting of a small cylinder and a larger flange.
- Part 6: Two long screws.
- Part 8: Two small cylindrical spacers.
- Part 9: A mounting bracket with multiple holes.
- Part 10: A long, flexible braided cable.
- Part 11: A long screw.
- Part 14: A mounting bracket, similar to part 9 but with different internal features.

 The diagram shows how these components are used to secure the seat sections to a frame or other parts of the motorcycle.



pulsar
NS200-4S200

This exploded view diagram illustrates the components for installing a motorcycle seat. The main components are:

- 1/12**: The main seat shell, shown in two pieces (left and right).
- 2**: Three small rectangular mounting brackets.
- 3**: A small rectangular mounting bracket.
- 4**: A circular mounting plate.
- 5**: Two sets of spacers, each consisting of a washer and a nut.
- 6**: Two long screws.
- 7/13**: The rear section of the seat shell.
- 8**: A circular mounting plate.
- 9**: A metal mounting bracket with a cable attachment point.
- 10**: A long, flexible braided cable.
- 11**: A long screw.
- 14**: A metal mounting bracket.



This diagram illustrates the exploded view of a rear suspension assembly. The main components are labeled as follows:

- 1**: Lower control arm assembly.
- 1A**: Alternative lower control arm design.
- 2**: Upper control arm assembly.
- 2A**: Alternative upper control arm design.
- 3**: Ball joint pin.
- 4**: Shock absorber.
- 5**: Shock absorber mounting bolt.
- 6**: Wheel hub assembly.
- 7**: Brake master cylinder.
- 8**: Brake caliper.
- 9**: Brake pad.

The diagram shows the spatial relationship between these parts, with dashed lines indicating the assembly points for the ball joints (3) connecting the control arms (1, 2) to the frame.



This diagram illustrates the assembly of a motorcycle swingarm. The main assembly is shown in a perspective view, with various components labeled with numbers 1 through 10. The components include:

- 1**: A large, dark-colored swingarm body.
- 2**: A small, dark-colored bracket or plate.
- 3**: A small, dark-colored bracket or plate.
- 4**: A small, dark-colored bracket or plate.
- 5**: A small, dark-colored bracket or plate.
- 6**: A small, dark-colored bracket or plate.
- 7**: A small, dark-colored bracket or plate.
- 8**: A small, dark-colored bracket or plate.
- 9**: A small, dark-colored bracket or plate.
- 10**: A small, dark-colored bracket or plate.

The diagram shows the swingarm body (1) with various mounting points and brackets (2-10) attached. The components are shown in an exploded view, indicating their relative positions and how they fit together. The swingarm body (1) is the central component, and the other parts are shown around it, indicating their assembly points. The components are labeled with numbers 1 through 10, and the diagram shows the swingarm body (1) with various mounting points and brackets (2-10) attached.



This diagram illustrates the exploded view of a vehicle chassis assembly, showing the relationship between various components. The parts are numbered as follows:

- 1: Coil spring
- 2: Shock absorber
- 3: Lower control arm
- 4: Upper control arm
- 5: Upper control arm bush
- 6: Lower control arm bush
- 7: Lower control arm bush
- 8: Lower control arm bush
- 9: Lower control arm bush
- 10: Lower control arm bush
- 11: Lower control arm bush
- 12: Lower control arm bush
- 13: Lower control arm bush
- 14: Lower control arm bush
- 15: Lower control arm bush
- 16: Lower control arm bush
- 17: Lower control arm bush
- 18: Lower control arm bush
- 19: Lower control arm bush



FIGURA N° 28: REPOSAPIÉ CONDUCTOR (1/2)

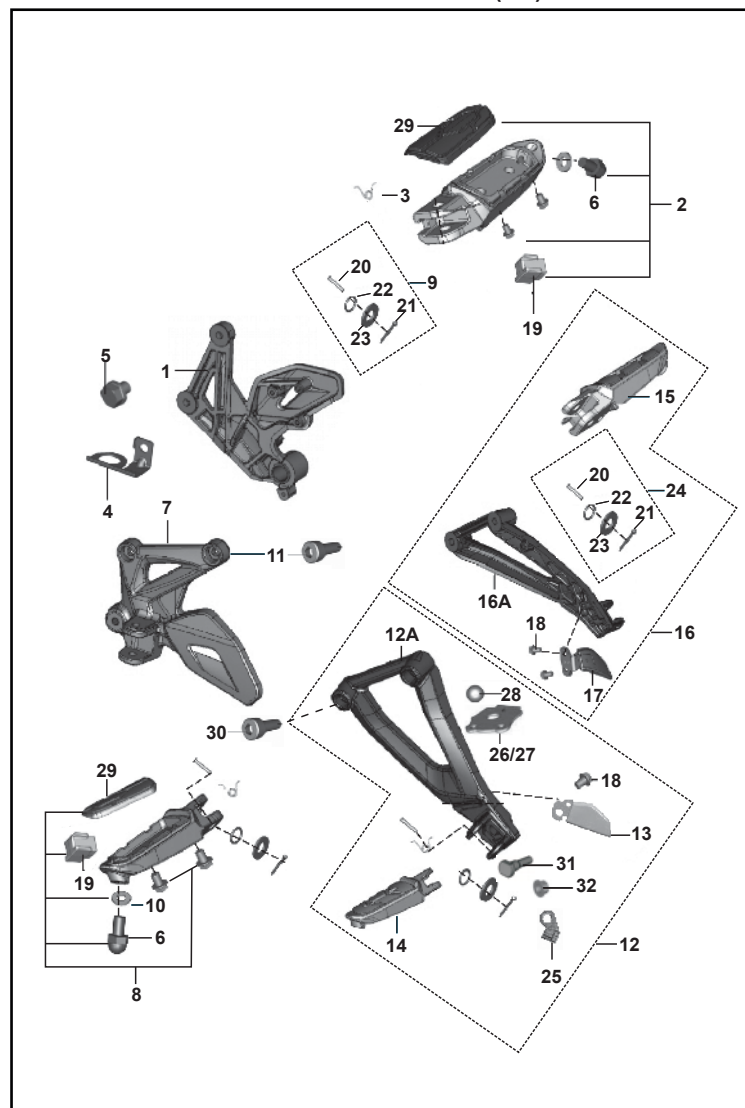


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JL113002	Soporte Reposapie Conductor Der.	1	1	-	Gris Tornado
	56JL3Y1Y		-	-	1	
2	JL113007	Reposapie Conductor Derecho	1	-	-	Gris
	52JL0159		1	1	-	Gris Tornado
	52JL1035		-	-	1	
3	JL113012	Resorte	1	1	1	
4	JL113033	Platina Soporte Swiche Stop	1	1	1	
5	39247504	Tornillo	1	1	1	
6	DG161144	Tornillo	2	2	2	
7	JL113034	Soporte Reposapie Conductor Izq.	1	1	-	
	56JL3X1Y		-	-	1	
8	JL113000	Reposapie Conductor Izq.	1	-	-	Gris
	52JL0158		1	1	-	Gris Tornado
	52JL1024		-	-	1	
9	36JL0041	Kit Pines Reposapie Conductor	2	2	2	Ref. Pág. N° 97
10	LDA00013	Arandela	1	1	1	
11	KACA0820	Tornillo 8x20	4	4	4	
12	52JL0152	Soporte Rep. Pasajero Izq. Comp.	1	1	-	Gris Tornado
12A	JL113013	Soporte Rep. Pasajero Izq. Solo	1	1	-	Gris
	56JL4J1Y		-	-	1	
13	JL113026	Protector Reposapie Pasajero Izq.	1	1	-	
	56JL4L1Y		-	-	1	
14	JL113014	Reposapie Pasajero Izquierdo	1	-	-	Gris
	56JL0101		1	1	-	Gris Tornado
	56JF181Y		-	-	1	
15	JL113016	Reposapie Pasajero Derecho	1	-	-	Gris
	56JL0201		1	1	-	Gris Tornado
	56JF191Y		-	-	1	

FIGURA N° 28: REPOSAPIÉ CONDUCTOR (2/2)

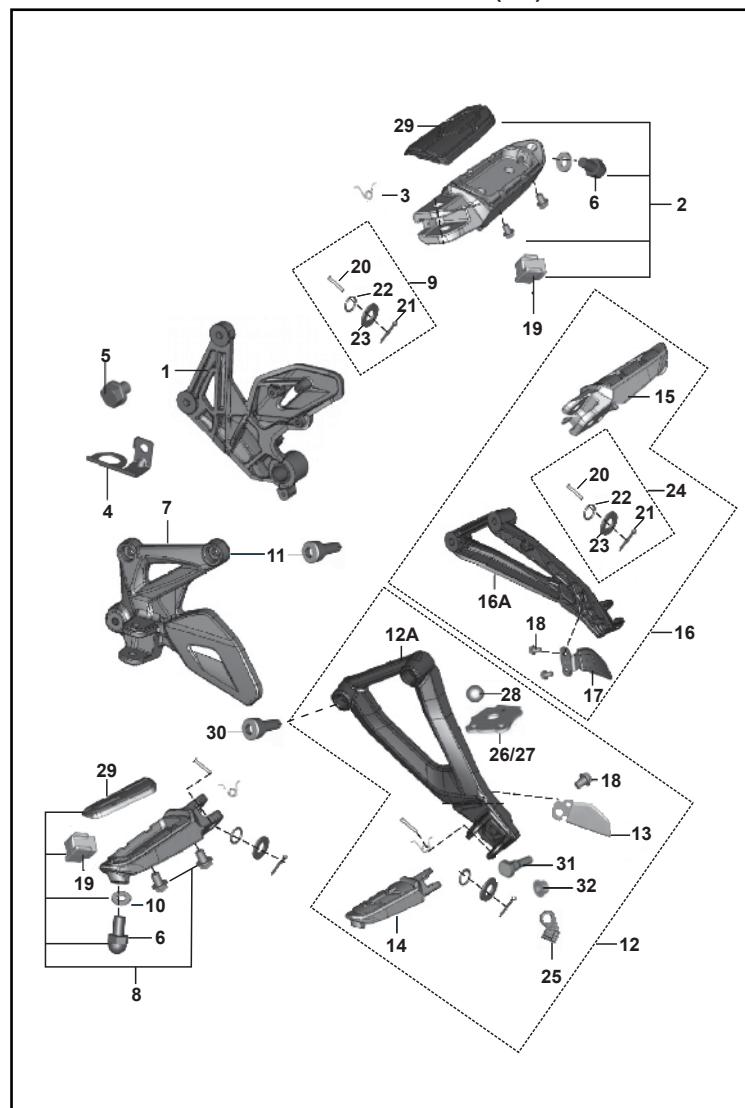


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
16	52JL0153	Soporte Rep. Pasajero Der. Comp.	1	1	-	Gris Tornado
16A	JL113015	Soporte Rep. Pasajero Der. Solo	1	1	-	Gris
	56JL4K1Y		-	-	1	
17	JL113027	Protector Reposapie Pasajero Der.	1	1	-	
	56JL4M1Y		-	-	1	
18	39195404	Tornillo 6x10	4	4	-	Brillante
	KADE0610		4	4	-	Verde (Cabeza con Sombrero)
	KAET0610		-	-	4	
19	JL113028	Antivibrante Reposapie Conductor	2	2	2	
20	JD113019	Pin Pasador	2	2	2	
21	39078408	Pin	4	4	4	
22	30141031	Anillo Retenedor	4	4	4	
23	39104011	Arandela	4	4	4	
24	36JL0015	Kit Pines Reposapie Pasajero	2	2	2	Ref. Pág. N° 96
25	JL113036	Antivibrante Reposapie Pasajero	2	2	2	
26	JL113020	Platina de Seguridad Izquierda	1	-	-	Metálica
	DT113014		1	1	1	Plástica
27	JL113032	Platina de Seguridad Derecha	1	-	-	Metálica
	DT113015		1	1	1	Plástica
28	30101236	Balín	2	2	2	
29	JL113006	Caucho Reposapie Conductor	2	2	2	
30	LAC00016	Tornillo 8x35	4	4	-	
	LAC00046		-	-	4	
31	JL113038	Tornillo Soporte Reposapie Izquierdo	1	1	1	
32	39105515	Tuerca 10 mm.	1	1	1	

FIGURA N° 29: GUARDABARRO DELANTERO (1/2)

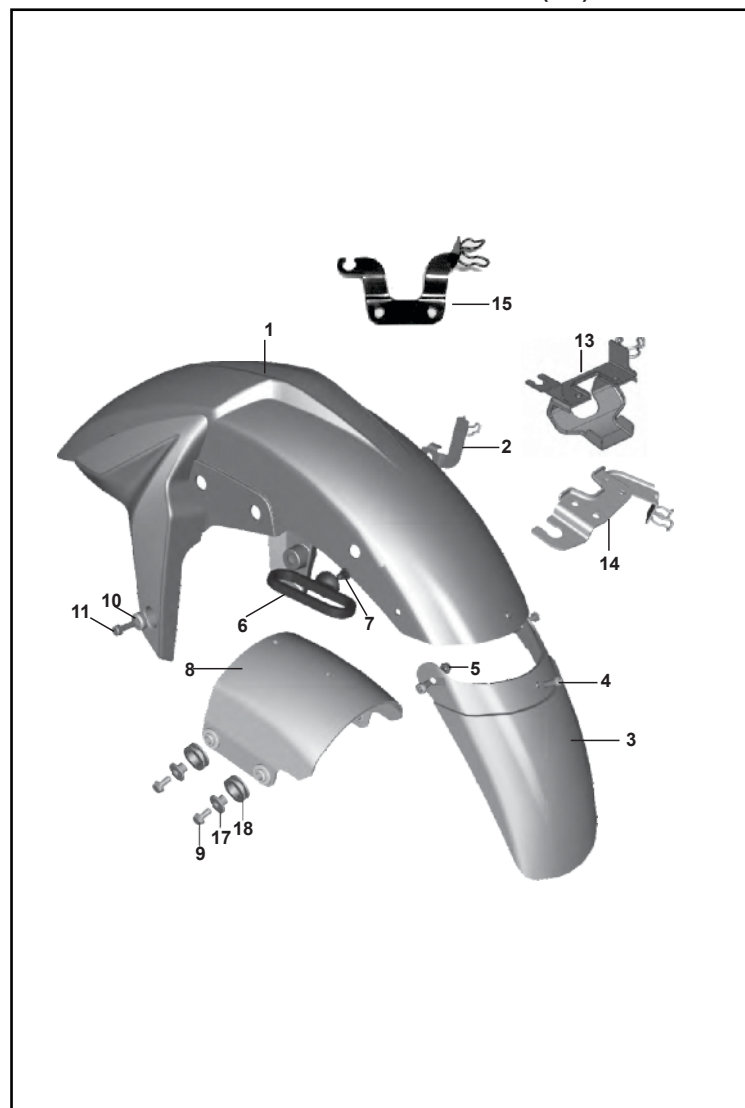


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JL181401	Guardabarro Delantero	1	1	-	Para JL151024
	JL181465		1	-	1	Para JL121005
2	JL131811	Guía Manguera Freno	1	-	1	
	JL113834		-	1	-	
3	JL181405	Cola Guardabarro Delantero	1	1	1	
4	39242001	Tornillo 5 mm.	3	-	3	
	KBBA0512		-	3	-	
5	39032615	Tuerca Nylon 5 mm.	3	3	3	
6	DS161125	Guía Cable	1	1	1	
7	DJ161069	Pin Guía Cable	1	1	1	
8	JL181402	Soporte Guardabarro Delantero	1	1	-	Para JL181401
	JL181464		1	-	1	Para JL181465
9	39194604	Tornillo 8 mm.	4	-	4	
	KADF0820		-	4	-	
10	JL181411	Arandela	2	2	-	Para JL181401
	DT181434		2	-	2	Para JL181465
11	KACA0616	Tornillo 6x16	2	2	-	Para JL181401
	KACA0520	Tornillo 5x20	2	-	2	Para JL181465
12	DT181435	Antivibrante	2	-	2	Para JL181465
13	JL131812	Soporte Manguera	1	-	1	
14	DT131832	Soporte Manguera	-	1	-	
15	020248/00	Platina Guía Cables Delanteros	1	-	1	

This exploded view diagram illustrates the components of a motorcycle fender assembly. The main fender body is labeled 1. A rear fender extension is labeled 8. A lower fender section is labeled 3. A bracket or support piece is labeled 2. A small circular component, possibly a light or reflector, is labeled 6. A mounting bracket or support is labeled 15. A small bracket or support is labeled 13. A small bracket or support is labeled 14. A small bracket or support is labeled 11. A small bracket or support is labeled 10. A small bracket or support is labeled 7. A small bracket or support is labeled 5. A small bracket or support is labeled 4. A small bracket or support is labeled 9. A small bracket or support is labeled 17. A small bracket or support is labeled 18.



pulsar
NS200-4S200

This exploded view diagram illustrates the components of a bicycle seatpost assembly. The parts are numbered as follows:

- 1**: The main seatpost, shown in two orientations (upright and inverted) to show its internal structure and mounting points.
- 2**: A small black plastic or rubber component, likely a clamp or spacer.
- 3**: A small black plastic or rubber component, similar to part 2.
- 4**: A long, thin metal rod or pin.
- 5**: A small black plastic or rubber component.
- 6**: A long, thin metal rod or pin, similar to part 4.
- 7**: A curved metal spring or clamp.
- 8**: A cylindrical metal component, possibly a sleeve or spacer.
- 9**: A long, thin metal rod or pin, similar to part 4.
- 10**: A curved metal spring or clamp, similar to part 7.
- 11**: A small black plastic or rubber component.
- 12**: A small black plastic or rubber component.
- 13**: A small black plastic or rubber component.
- 14**: A small black plastic or rubber component.
- 15**: A curved metal spring or clamp, similar to part 7.
- 16**: A cylindrical metal component, similar to part 8.
- 17**: A small black plastic or rubber component.
- 18**: A small black plastic or rubber component.



pulsar
NS200-AS200

This diagram illustrates the assembly of a motorcycle wheel. It shows five numbered components: 1. A tire, 2. A valve stem, 3. A wheel rim, 4. A wheel hub, and 5. Another tire. The components are arranged in an exploded view, showing their relative positions and how they fit together. The wheel rim (3) and wheel hub (4) are shown with multiple spokes. The tire (1) and tire (5) are shown as separate rings. The valve stem (2) is shown as a small, cylindrical component with a flange.



pulsar
NS200-4S200

This exploded view diagram illustrates the components of a motorcycle wheel assembly. The parts are numbered as follows:

- 1**: The main wheel rim and spokes.
- 2**: A central axle component, shown in a dashed box with a small ring.
- 3**: A small ring or spacer, shown in two locations.
- 4**: A small ring or spacer.
- 5**: A multi-spoke disc or hub component.
- 6**: Six small screws or bolts used for the disc.
- 7**: A small cylindrical component.
- 8**: A large hub or bearing assembly.
- 9**: A small bracket or clip.
- 10**: A small pin or clip.
- 11**: A small pin or clip.
- 12**: A small pin or clip.
- 13**: A long axle shaft.
- 14**: A small ring or spacer.
- 15**: A small nut or washer.



This exploded view diagram illustrates the components of a bicycle master brake lever assembly. The parts are numbered as follows:

- 1:** Master brake lever body.
- 2:** Lever pin.
- 3:** Lever bush.
- 4:** Lever cable housing end cap.
- 5:** Mounting screws.
- 6:** Mounting plate.
- 7:** Mounting bracket.
- 8:** Master brake cylinder body.
- 9:** Master brake cylinder mounting bracket.
- 10:** Cable housing ferrules.
- 11:** Cable housing end cap.
- 12:** Brake cable.
- 13:** Piston pins.
- 14:** Piston assembly.
- 15:** Piston seal.
- 16:** Cable housing end cap.

The diagram shows the lever (1) being mounted to the cylinder (8) using screws (5) and a plate (6). The lever cable (12) is inserted into the lever body (1) and the cylinder (8), secured with ferrules (10) and end caps (11, 16). The piston assembly (14) is shown being inserted into the cylinder (8) using pins (13) and a seal (15).



Diagram illustrating the assembly of a brake master cylinder. The main exploded view shows the following components:

- 1: Master Cylinder Body
- 2: Bleeding Screw
- 3: Bleeding Screw Cap
- 4: Dust Shield
- 5: Brake Paste Spring
- 6: Piston
- 7: Retainer
- 8: Piston Seal
- 9: Bleeding Screw Cap
- 10: Insulator

The assembly sequence is indicated by an arrow pointing from the exploded view to the assembled master cylinder.

Additional components shown in a separate dashed box:

- 7: Retenedor
- 8: Sello de Pistón
- 9: Capuchón Tornillo de Sangrado

Legend:

- 2: Tornillo de Sangrado
- 5: Resorte Pasta Freno



pulsar
NS200 - 4S200

FIGURA N° 35: RUEDA TRASERA

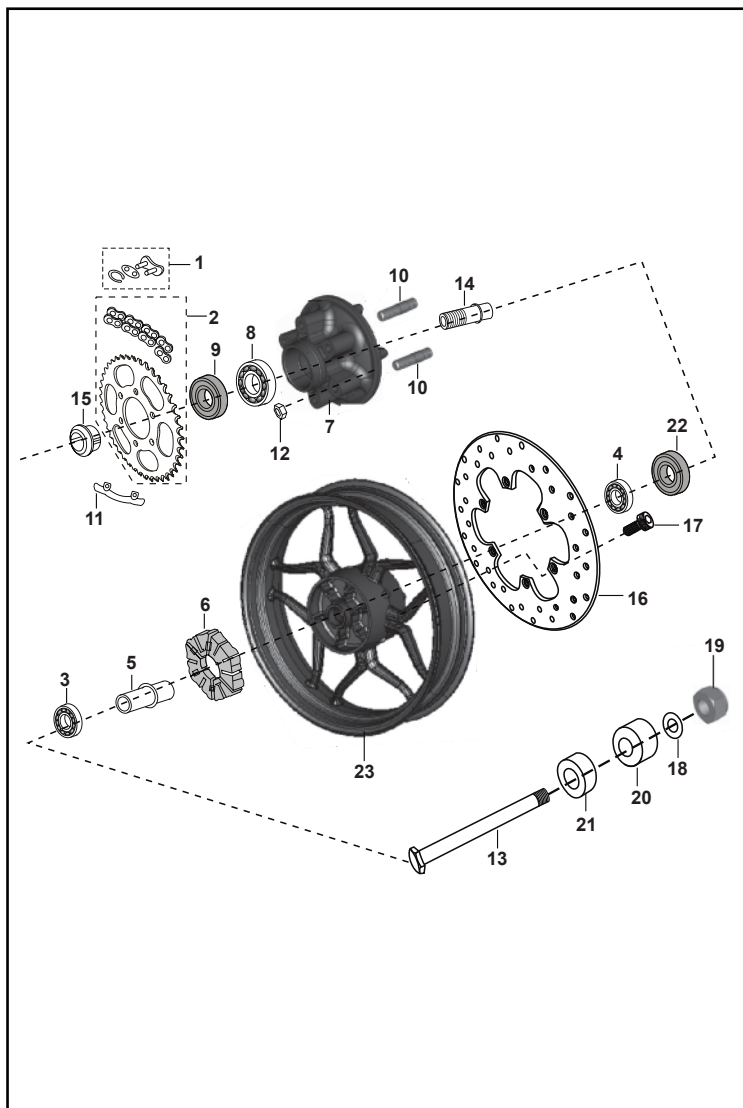


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	DK151036	Empate Cadena	1	1	1	
2	36JL0009	Kit Sprocket y Cadena	1	1	1	Ref. Pág. N° 96
3	39224120	Rodamiento Bolas	1	-	1	
	KPBC6202		-	1	-	
4	39224220	Rodamiento Bolas	1	-	1	
	KPBC6302		-	1	-	
5	JL131216	Buje	1	1	1	
6	JL131232	Caucho Porta Sprocket	1	1	1	
7	JL131225	Porta Sprocket	1	1	1	
8	DK151013	Rodamiento Bolas 47x25x12	1	1	1	
9	DK151012	Reten Porta Sprocket	2	2	2	
10	LAA00019	Tornillo 8x1.25x50	6	6	6	
11	JL131226	Arandela Sprocket	3	3	3	
12	LCA00009	Tuerca 8 mm.	6	6	6	
13	JL131203	Eje Rueda Trasera	1	1	1	
14	DK151015	Buje Porta Sprocket	1	1	1	
15	JL131211	Buje	1	1	1	
16	JL131218	Disco Freno Trasero	1	-	-	Dorado Negro
	52JL0142		1	1	1	
17	39203804	Tornillo 6 mm.	6	6	6	
18	LDB00029	Arandela	2	2	2	
19	LCJ00002	Tuerca 14x1.5x12.5	1	1	1	
20	DK151081	Buje Eje Rueda Trasera	1	1	1	
21	DK151082	Buje	1	1	1	
22	30151082	Retenedor (42-26-8)	1	1	1	
23	JL131209	Rin Trasero 3.50x17	1	1	1	

FIGURA N° 36: BOMBA FRENO TRASERO (1/2)

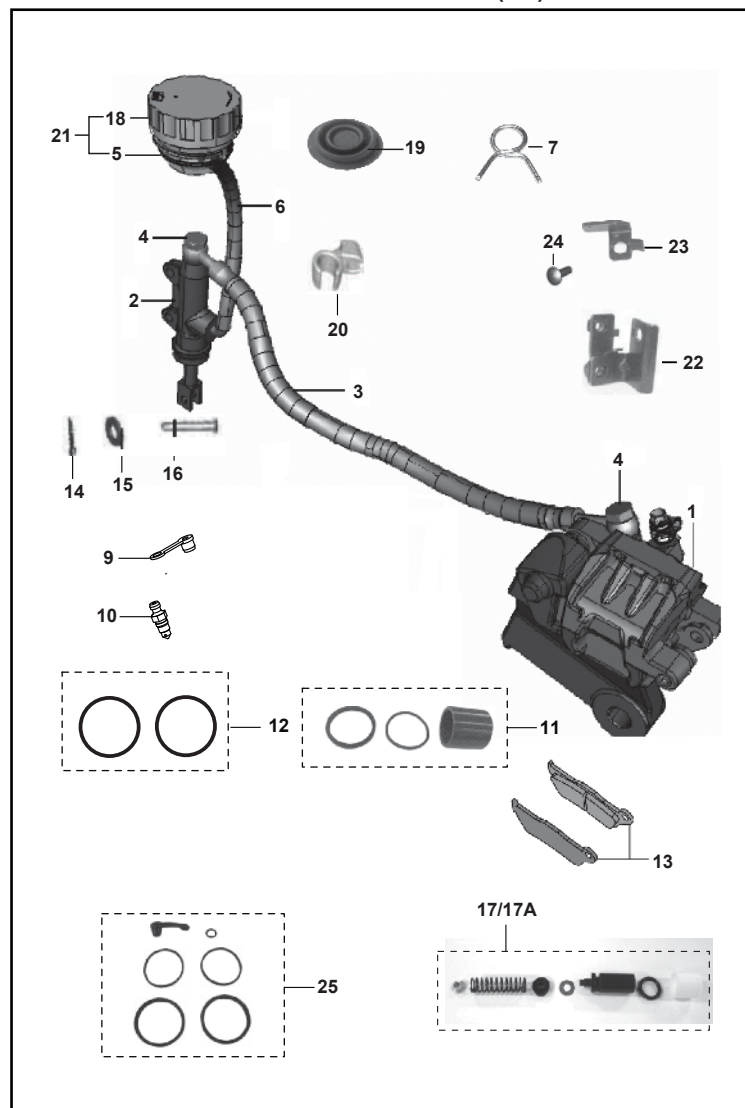


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	DK151083	Caliper Trasero	1	1	-	
	JL131834		-	-	1	
2	DK151031	Bomba Freno Trasero	1	1	-	
	JL131931		-	-	1	
3	JL131803	Manguera Freno Trasero	1	1	1	
4	DK151069	Tornillo Manguera Freno	2	2	2	
5	JG131821	Tanque Liquido Frenos	1	1	1	
6	JL131220	Manguera Tanque Liquido Frenos	1	1	1	
7	DK151063	Abrazadera	1	1	1	
8	DE191010	Arandela de Sellado	4	4	4	
9	DE151047	Guardapolvo	1	1	1	
10	DE151046	Tornillo de Sangrado	1	1	1	
11	DK151088	Kit Pistón Bomba Freno	1	1	1	
12	DK151089	Kit Retenes Caliper	1	1	1	
13	DK151085	Pastas Freno Trasero	1	1	1	
14	39080808	Pin de Seguridad	1	1	1	
15	39019811	Arandela	1	1	-	
	LDB00018		-	-	1	
16	30191038	Pin Pasador	1	1	1	
17	DK151073	Kit Empaquetadura Bomba Freno	1	1	1	Incluye Pistón
17A	DK151074	Kit Empaquetadura Bomba Freno	1	1	1	No Incluye Pistón
18	DK151045	Tapa Tanque Liquido Frenos	1	1	1	
19	DK151072	Diafragma	1	1	1	
20	JL131877	Abrazadera Manguera Freno	1	1	1	
21	36JG0018	Tanque Liquido Frenos Completo	1	1	1	
22	JL131841	Platina Soporte Tanque Liquido de Frenos	1	1	1	

This exploded view diagram illustrates the components of a power window motor assembly. The main assembly is shown on the right, with the motor (1) and gear train (4) connected to the window regulator (13). A long, flexible drive cable (3) runs from the motor to a cable drum (18) at the top. The cable drum is mounted on a bracket (5) and is secured by a cap (19). A pin (21) is used to secure the cable drum. A bracket (20) is also shown. A pin (14) and a washer (15) are used to secure the cable drum. A pin (16) is used to secure the cable drum. A pin (9) and a washer (10) are used to secure the cable drum. A pin (11) and a washer (12) are used to secure the cable drum. A pin (17/17A) is used to secure the cable drum. A pin (22) and a bracket (23) are used to secure the cable drum. A pin (24) is used to secure the cable drum. A pin (25) is used to secure the cable drum.



pulsar
NS200-4S200

An exploded view diagram of a mechanical assembly. The components are numbered 1 through 10. Component 1 is a long, angled bracket with a multi-pin connector at one end and a circular hole at the other. Component 2 is a small bolt. Component 3 is a small cylindrical pin. Component 4 is a large circular flange. Component 5 is a vertical rod with a threaded section. Component 6 is a small nut. Component 7 is a small L-shaped bracket. Component 8 is a coiled spring. Component 9 is a small circular washer. Component 10 is a small O-ring.



pulsar
NS200-4S200

FIGURA N° 38: MANUBRIO (1/2)

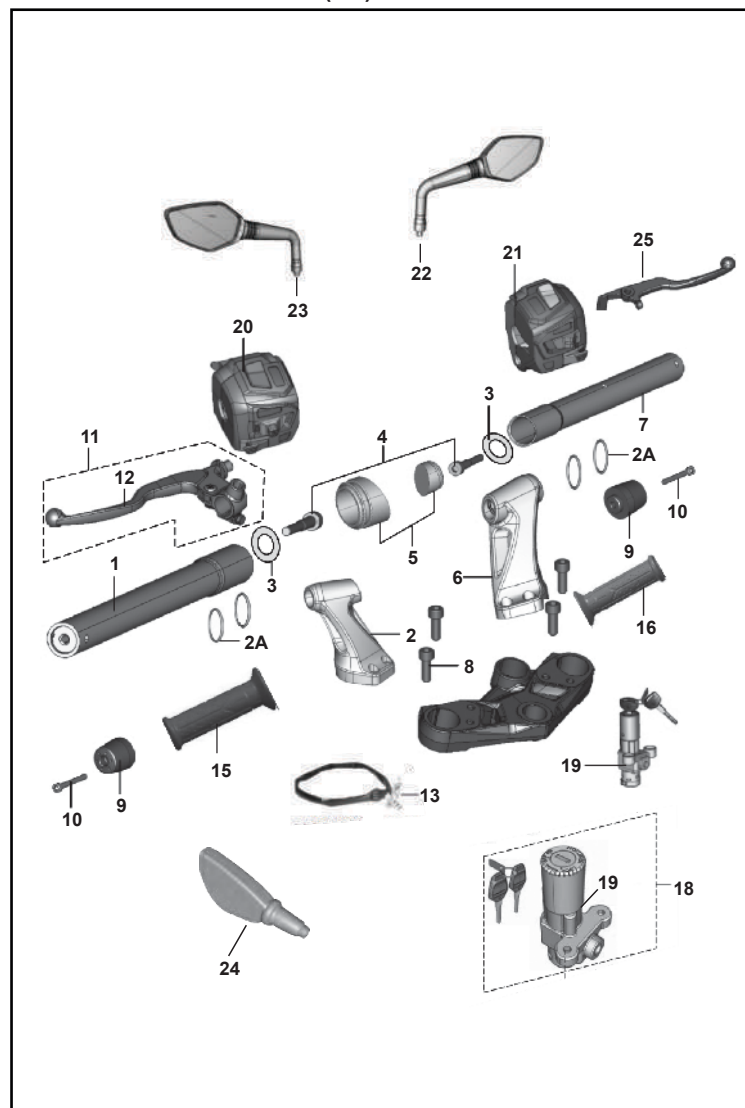


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL151021	Tubo Manubrio Izquierdo	1	1	1	
2	JL151026	Soporte Tubo Manubrio Izquierdo	1	-	1	Negro
	56JL315X		1	1	1	Negro Mate
2A	JL151038	Anillo Retenedor	4	4	4	
3	39118011	Arandela	2	-	2	
	KDBA0818		-	2	-	
4	LAC00020	Tornillo 8x1.25x55	2	2	2	
5	JL151028	Tapón Soporte Tubo Manubrio	2	2	2	
6	JL151030	Soporte Tubo Manubrio Derecho	1	-	1	Negro
	56JL325X		1	1	1	Negro Mate
7	JL151034	Tubo Manubrio Derecho	1	1	1	
8	DG181008	Tornillo	4	4	4	
9	JL151035	Buje Manubrio	2	2	2	
10	39242704	Tornillo 6 mm.	2	2	2	
11	DJ191082	Soporte y Leva Clutch	1	-	-	
	JL161015		-	1	-	
	JL161013		-	-	1	
12	DJ191083	Leva Clutch	1	-	1	
	JG161008		-	1	-	
13	DJ201246	Swiche Clutch	1	-	1	Tipo Diodo
	JL401411		-	1	-	
14	DD191015	Abrazadera	1	1	1	No Ilustrado
15	JL161003	Caucho Manillar Izquierdo	1	1	1	
16	JL161008	Caucho Manillar Derecho	1	-	1	
	DT161005		-	1	-	
17	DH191017	Tubo Int. Manillar Acelerador	1	1	1	No Ilustrado

This diagram illustrates the exploded view of a motorcycle engine assembly, with components numbered 1 through 25. The parts are distributed as follows:

- Top Section:** Includes a side mirror (22), a fuel tank (21), a handlebar (25), and a rearview mirror (23).
- Engine Block:** The central component (1) is surrounded by various parts including a cylinder head (4), piston (5), connecting rod (6), and crankshaft (7).
- Accessories:** Includes a headlight (24), a horn (11), a bellows (12), a fuel filter (13), a fuel pump (14), a fuel line (15), a fuel nozzle (16), a fuel tank cap (17), a fuel tank bracket (18), a fuel tank gasket (19), a fuel tank seal (20), a fuel tank plug (21), a fuel tank screw (22), a fuel tank nut (23), a fuel tank washer (24), a fuel tank bolt (25), a fuel tank nut (26), a fuel tank washer (27), a fuel tank bolt (28), a fuel tank nut (29), a fuel tank washer (30), a fuel tank bolt (31), a fuel tank nut (32), a fuel tank washer (33), a fuel tank bolt (34), a fuel tank nut (35), a fuel tank washer (36), a fuel tank bolt (37), a fuel tank nut (38), a fuel tank washer (39), a fuel tank bolt (40), a fuel tank nut (41), a fuel tank washer (42), a fuel tank bolt (43), a fuel tank nut (44), a fuel tank washer (45), a fuel tank bolt (46), a fuel tank nut (47), a fuel tank washer (48), a fuel tank bolt (49), a fuel tank nut (50), a fuel tank washer (51), a fuel tank bolt (52), a fuel tank nut (53), a fuel tank washer (54), a fuel tank bolt (55), a fuel tank nut (56), a fuel tank washer (57), a fuel tank bolt (58), a fuel tank nut (59), a fuel tank washer (60), a fuel tank bolt (61), a fuel tank nut (62), a fuel tank washer (63), a fuel tank bolt (64), a fuel tank nut (65), a fuel tank washer (66), a fuel tank bolt (67), a fuel tank nut (68), a fuel tank washer (69), a fuel tank bolt (70), a fuel tank nut (71), a fuel tank washer (72), a fuel tank bolt (73), a fuel tank nut (74), a fuel tank washer (75), a fuel tank bolt (76), a fuel tank nut (77), a fuel tank washer (78), a fuel tank bolt (79), a fuel tank nut (80), a fuel tank washer (81), a fuel tank bolt (82), a fuel tank nut (83), a fuel tank washer (84), a fuel tank bolt (85), a fuel tank nut (86), a fuel tank washer (87), a fuel tank bolt (88), a fuel tank nut (89), a fuel tank washer (90), a fuel tank bolt (91), a fuel tank nut (92), a fuel tank washer (93), a fuel tank bolt (94), a fuel tank nut (95), a fuel tank washer (96), a fuel tank bolt (97), a fuel tank nut (98), a fuel tank washer (99), a fuel tank bolt (100).



FIGURA N° 39: SUSPENSIÓN DELANTERA (1/2)

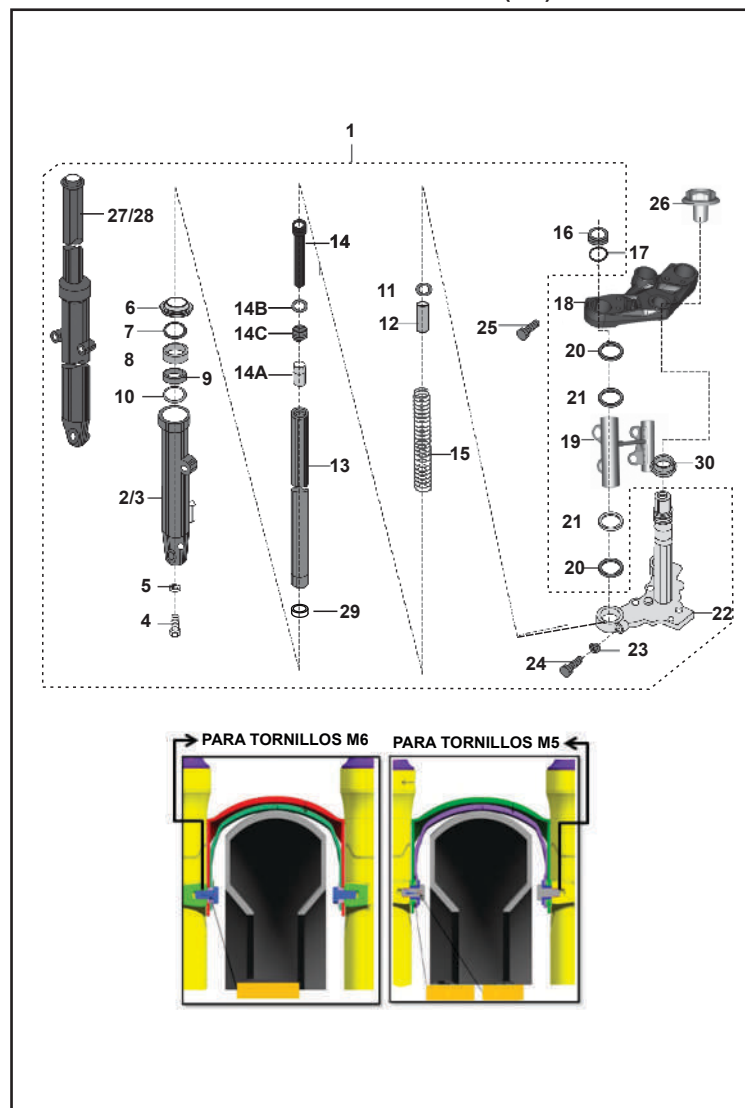


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JL151024	Suspensión Delantera	1	1	-	Para Tornillo M6
	JL121005		1	-	1	Para Tornillo M5
2	JL151002	Camisa Tubo Telescópico Izq.	1	1	-	
	DT121048		1	-	1	Para JL121005
3	JL151003	Camisa Tubo Telescópico Der.	1	1	-	
	DT121040		1	-	1	Para JL121005
4	DK181006	Tornillo 10x1.5x35	2	2	2	
5	DK181007	Arandela de Sellado	2	2	2	
6	DK181021	Guardapolvo	2	2	2	
7	DK181018	Arandela	2	2	2	
8	DK181019	Reten Tubo Telescópico	2	2	2	
9	DK181017	Buje Guía	2	2	2	
10	DK181020	Pin de Seguridad	2	2	2	
11	DK181015	Arandela	2	2	2	
12	JL151012	Buje	2	2	2	
13	JL151004	Tubo Telescópico	2	2	-	
	JL121008		2	-	2	Para JL121005
14	DK181010	Cilindro Tubo Telescópico	2	2	2	
14A	DK181009	Buje Cilindro Tubo Telescópico	2	2	2	
14B	DK181012	Pin Cilindro Tubo Telescópico	2	2	2	
14C	DK181013	Resorte	2	2	2	
15	JL121001	Resorte Suspensión	2	2	2	
16	DK181022	Tornillo Tubo Telescópico	2	2	2	
17	DK181023	Anillo Retenedor	2	2	2	
18	JL151032	Cabeza Espiga	1	-	-	Negra
	56JL335X		1	1	1	Negro Mate
19	JL181235	Soporte Farola	1	-	1	

The diagram illustrates the assembly of a mechanical component, likely a door handle or latch. The exploded view shows the following parts:

- 1**: Main cylindrical body.
- 2/3**: Internal pin or shaft.
- 4**: Small pin or washer.
- 5**: Small pin or washer.
- 6**: Washer or spacer.
- 7**: Washer or spacer.
- 8**: Washer or spacer.
- 9**: Washer or spacer.
- 10**: Washer or spacer.
- 11**: Small pin or washer.
- 12**: Small pin or washer.
- 13**: Internal pin or shaft.
- 14**: Small pin or washer.
- 14A**: Small pin or washer.
- 14B**: Small pin or washer.
- 14C**: Small pin or washer.
- 15**: Spring.
- 16**: Washer or spacer.
- 17**: Washer or spacer.
- 18**: Small pin or washer.
- 19**: Small pin or washer.
- 20**: Washer or spacer.
- 21**: Washer or spacer.
- 22**: Small pin or washer.
- 23**: Small pin or washer.
- 24**: Small pin or washer.
- 25**: Small pin or washer.
- 26**: Small pin or washer.
- 27/28**: Small pin or washer.
- 29**: Small pin or washer.
- 30**: Small pin or washer.

Below the exploded view, two cross-sectional diagrams illustrate the installation of the assembly into a door frame:

- PARA TORNILLOS M6**: Shows the assembly installed using M6 screws.
- PARA TORNILLOS M5**: Shows the assembly installed using M5 screws.



This exploded view diagram illustrates the components of a car engine cooling system. The central component is the radiator (8), which features a large circular fan. Various mounting brackets and bolts are shown around it, with dashed boxes indicating their assembly locations.

- 1:** A long, curved mounting bracket for the top of the radiator.
- 2:** Small circular bolts used for securing brackets.
- 3:** Small, irregularly shaped mounting brackets.
- 4:** Larger, angular mounting brackets.
- 5:** A short, thick cylindrical bolt.
- 6:** A long, curved mounting bracket, similar to part 1 but with different mounting points.
- 7:** Small circular bolts, similar to part 2.
- 8:** The main radiator unit with a large fan.
- 9:** Small, hook-shaped mounting brackets.

The diagram shows how these parts are assembled onto the radiator and other engine components. For example, bracket 1 is shown being attached to the top of the radiator using bolts 2 and 3. Bracket 6 is shown being attached to the side of the radiator using bolts 2 and 3. The fan is shown being attached to the front of the radiator using bracket 4 and bolts 2 and 3. The radiator is shown being attached to the engine block using bracket 8 and bolts 2 and 3. The fan is shown being attached to the engine block using bracket 9 and bolts 2 and 3.



pulsar
NS200-4S200

FIGURA N° 41: COMPLEMENTOS CUBIERTAS TANQUE GASOLINA (PULSAR 200NS - NS200 BS-IV)

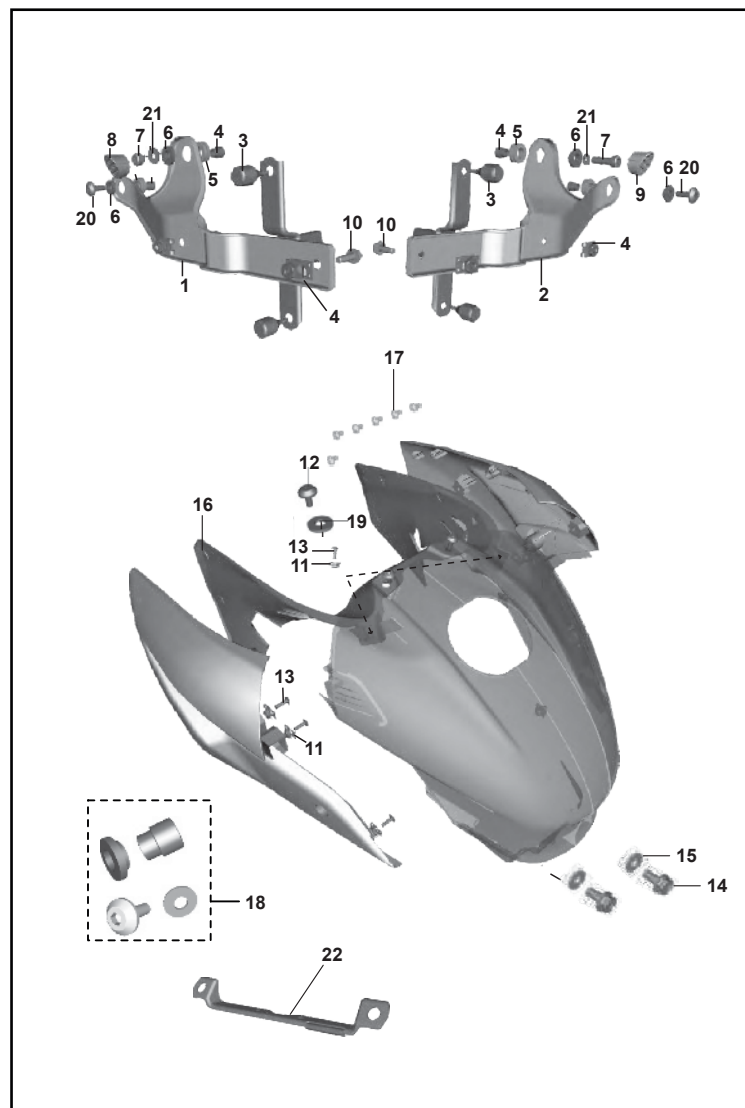


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL171023	Soporte Tapa Lateral Derecha	1	-	-	Tanque Tapa al Lado Derecho
	JL171099		1	-	1	Tanque Tapa al Lado Izquierdo
2	JL171022	Soporte Tapa Lateral Izquierda	1	-	1	
3	JL171057	Antivibrante	4	-	4	
4	JL171071	Buje Cubierta Tanque	8	-	8	
5	JL171024	Antivibrante	2	-	2	
6	JL171070	Antivibrante	8	-	8	
7	LAC00063	Tornillo 6x1x22	2	-	2	
8	JL171062	Rejilla Derecha	1	-	1	
9	JL171061	Rejilla Izquierda	1	-	1	
10	KADB0516	Tornillo 5x16	2	-	2	Negro
	39206004		2	-	-	Gris
11	DJ161229	Tuerca 5 mm.	16	-	16	
12	LAC00022	Tornillo 6x15	4	-	4	
13	KBUB0516	Tornillo 5x16	8	-	8	Negro
	39190701		8	-	-	Gris
14	KADA0512	Tornillo 5x12	2	-	2	
15	31161078	Arandela	2	-	2	
16	JL171048	Cubierta Central Tanque Gasolina	1	-	1	
17	39177802	Tornillo 4x4	12	-	12	
18	36JL0031	Kit Tornillos Tanque	1	-	1	Ref. Pag. N° 97
19	39178924	Arandela Nylon	2	-	2	
20	LAC00034	Tornillo 6x20	2	-	2	
21	39023911	Arandela	2	-	2	
22	JL111102	Soporte Cubierta Tanque	1	-	1	

NOTA: La Referencia JL171023 (Soporte Tapa Lateral Derecha) es intercambiable con la referencia JL171099 siempre y cuando se reemplace en conjunto con el Tanque Liquido Refrigerante de referencia JL601235

FIGURA N° 42: COMPLEMENTOS CUBIERTAS TANQUE GASOLINA (PULSAR AS200)

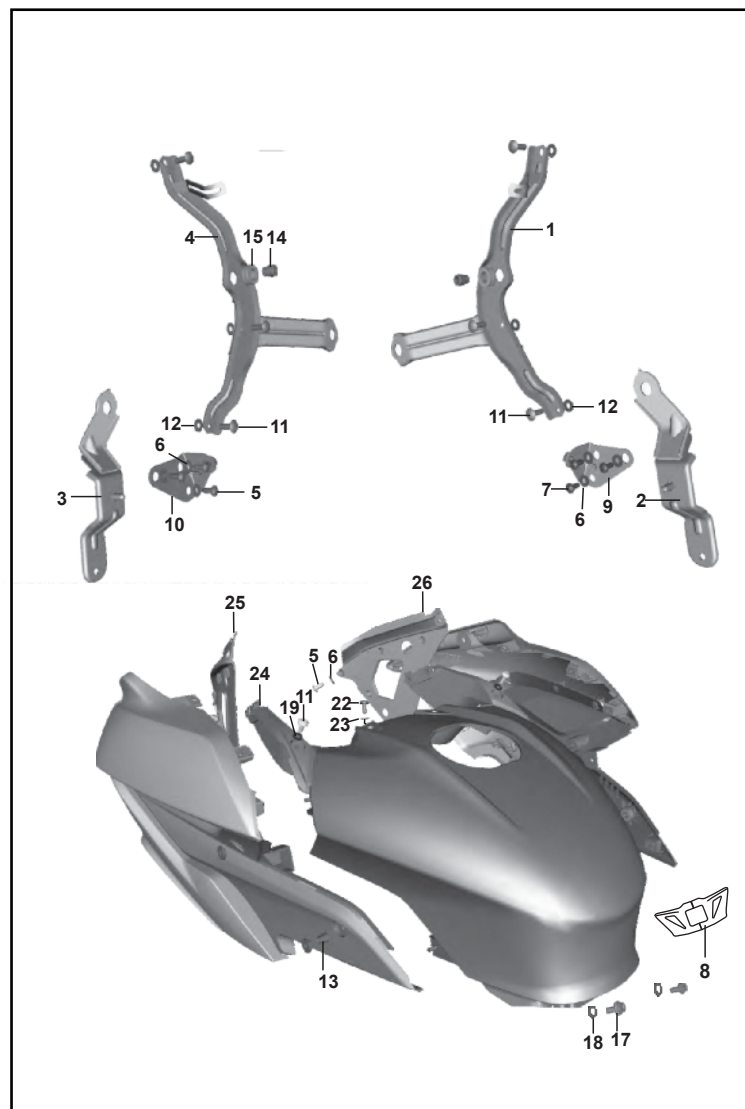


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL181449	Soporte Carenaje Izquierdo	-	1	-	
2	JL181447	Soporte Direccional Izquierdo	-	1	-	
3	JL181448	Soporte Direccional Derecho	-	1	-	
4	JL181450	Soporte Carenaje Derecho	-	1	-	
5	39177802	Tornillo 4x4	-	12	-	
6	KDAA0408	Arandela	-	12	-	
7	LBR00002	Tornillo 5 mm.	-	6	-	
8	JL171078	Protector Tanque	-	1	-	Opcional
9	JL181456	Soporte Carenaje Izquierdo	-	1	-	No Ilustrado
10	JL181457	Soporte Carenaje Derecho	-	1	-	No Ilustrado
11	LBU00023	Tornillo 5x0.8x16	-	9	-	
12	KDBA0512	Arandela	-	9	-	
13	JL171070	Antivibrante	-	2	-	
14	JL171071	Buje Cubierta Tanque	-	2	-	
15	JL171024	Antivibrante	-	4	-	
16	KADA0630	Tornillo 6x30	-	2	-	No Ilustrado
17	KADA0512	Tornillo 5x12	-	4	-	
18	KDBB0512	Arandela	-	2	-	
19	LAC00063	Tornillo 6x1x22	-	2	-	
20	LAC00034	Tornillo 6x20	-	2	-	No Ilustrado
21	LDB00023	Arandela	-	4	-	No Ilustrado
22	LAC00022	Tornillo	-	2	-	
23	31161078	Arandela Nylon	-	2	-	
24	JL181439	Cubierta Central Tanque Gasolina	-	1	-	
25	JL181424	Cubierta Interna Carenaje Izq.	-	1	-	
26	JL181425	Cubierta Interna Carenaje Der.	-	1	-	

FIGURA N° 43: TANQUE DE GASOLINA / GRIFO GASOLINA (1/2)

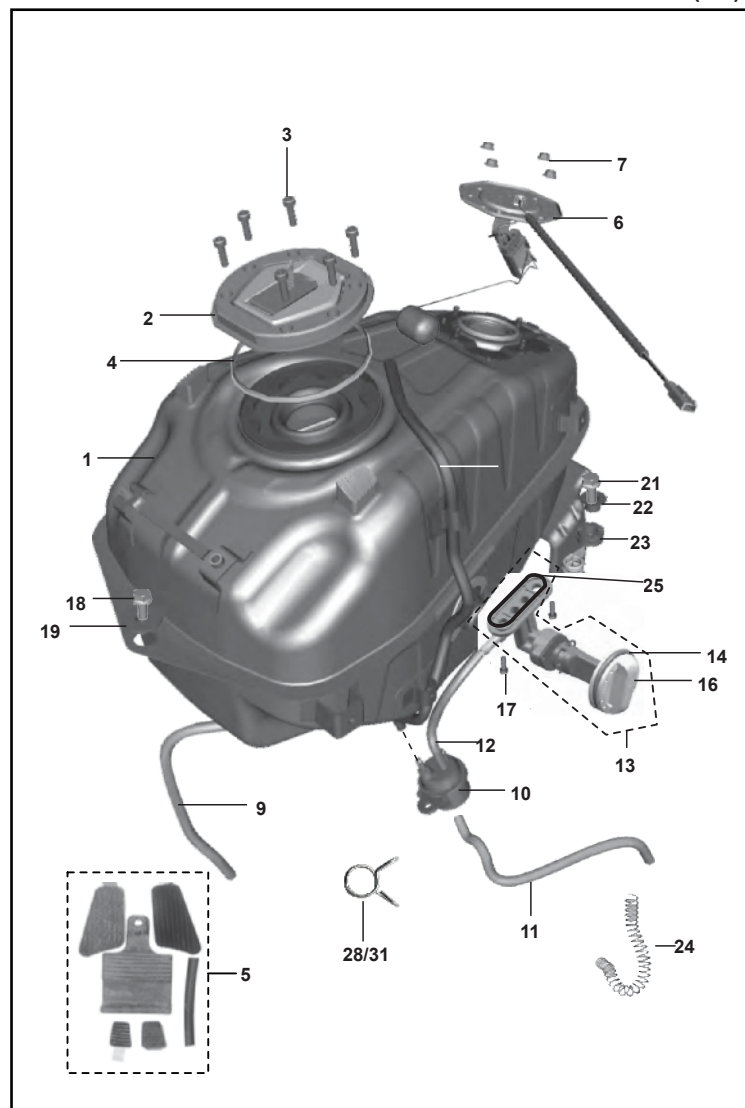


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL171044	Tanque de Gasolina	1	-	-	
		(Con Medidor en la Parte Inferior)				
	JL171081	Tanque de Gasolina	1	1	1	
		(Con Medidor en la Parte Superior)				
2	JL171600	Tapa Tanque Gasolina	1	-	-	Gris
	56JL0401		1	1	1	Gris Tornado
3	39238104	Tornillo Tapa Tanque Gasolina	6	-	6	
	KACB0516		-	6	-	
4	JL171049	Empaque Tapa Tanque Gasolina	1	1	1	
5	36JL0012	Kit Antivibrantes Tanque Gasolina	1	1	1	
6	JL402600	Sensor Nivel de Gasolina	1	-	-	
		(Tanque de Gas. Con Medidor en la Parte Inf.)				
	JL402602	Sensor Nivel de Gasolina	1	1	1	
		(Tanque de Gas. Con Medidor en la Parte Sup.)				
6A	DK141028	Anillo Retenedor Sensor Nivel Gasolina	1	1	1	No Ilustrado
7	39248415	Tuerca 5 mm.	4	-	4	
	KCGA0505		-	4	-	
8	JL171037	Conducto Respiración	1	1	1	No Ilustrado
9	JL171063	Conducto Drenaje	1	1	1	
10	JL171802	Filtro de Gasolina	1	1	1	
11	JL171036	Conducto Gasolina (Carburador)	1	1	1	
12	JL171035	Conducto Gasolina (Tanque)	1	1	1	
13	JL171800	Grifo de Gasolina	1	1	1	
14	JL171060	Anillo Retenedor Perilla Grifo Gasolina	1	1	1	
15	JL171803	Pin Perilla Grifo Gasolina	1	1	1	No Ilustrado

NOTA: La Referencia JL171044 (Tanque de Gasolina) es intercambiable con la referencia JL171081 siempre y cuando se reemplace en conjunto con el Sensor Nivel de Gasolina de referencia JL402602

[illegible]

Exploded view diagram of a motorcycle seat assembly. The components are labeled with numbers 1 through 17. The main assembly includes the seat base (9), backrest (1), and various mounting hardware (2, 3, 4, 5, 6, 7, 8, 10, 12, 13, 17). A separate inset box labeled 11 shows two types of seat foam padding (11).



pulsar
NS200-4S200

This exploded view diagram illustrates the components of a motorcycle helmet assembly. The parts are numbered as follows:

- 1**: Main helmet shell (upper and lower).
- 2**: Chin strap attachment points.
- 3**: Chin strap buckles.
- 4**: Upper shell liner/interior padding.
- 5**: Lower shell attachment points.
- 6**: Upper shell adjustment mechanism.
- 6A**: Lower shell adjustment mechanism.
- 7**: Chin strap adjustment mechanism.
- 8**: Chin strap cable/harness.
- 9**: Chin strap attachment points.
- 10**: Chin strap adjustment mechanism.
- 11**: Chin strap attachment points.
- 12**: Chin strap attachment points.
- 13**: Chin strap attachment points.
- 14**: Chin strap attachment points.
- 15**: Chin strap attachment points.



[illegible]

FIGURA N° 47: GUARDACADENA / GUARDABARRO TRASERO (PULSAR 200NS - NS200 BS-IV)

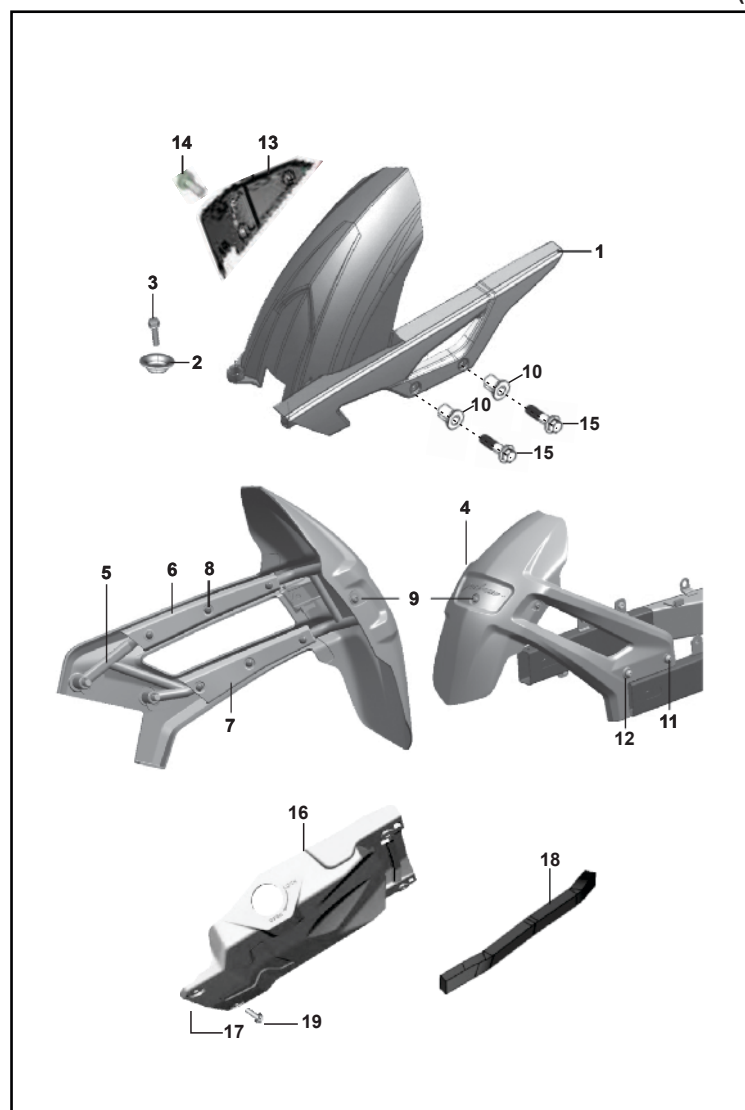


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL181205	Guardacadena	1	1	1	
2	JG122028	Arandela	2	2	2	
3	39179104	Tornillo 6x8	2	2	2	
4	JL181409	Guardabarro Trasero	1	-	-	Con Logo "PULSAR"
	DT181414		1	-	1	Sin Logo "PULSAR"
5	JL181006	Soporte Guardabarro	1	-	-	Guardabarro con Logo
	DT181000		1	-	1	Guardabarro sin Logo
6	JL181407	Cubierta Soporte Guardabarro	1	-	-	Guardabarro con Logo
	DT181415		1	-	1	Guardabarro sin Logo
7	JL181408	Cubierta Soporte Guardabarro	1	-	1	
8	KBUB0410	Tornillo	6	-	6	
9	LAC00037	Tornillo 6x1x8	3	-	3	
10	JL171040	Buje 6x10	2	2	2	
11	LAC00036	Tornillo 8x1.25x40	2	-	2	
12	JL181410	Buje	2	-	2	
13	JL181253	Cubierta Cadena Lado Derecho	1	1	1	
14	LAC00008	Tornillo 6x1x20	2	-	2	
15	LAC00054	Tornillo 6x1x16	2	2	2	
16	JL181209	Cubierta Trasera Interna	1	-	1	
17	39023911	Arandela	4	-	4	
18	JL181221	Antivibrante	1	-	1	
19	39194304	Tornillo 6x14	2	-	2	

FIGURA N° 48: FAROLA / CARENAJE (PULSAR 200NS - NS200 BS-IV) (1/2)

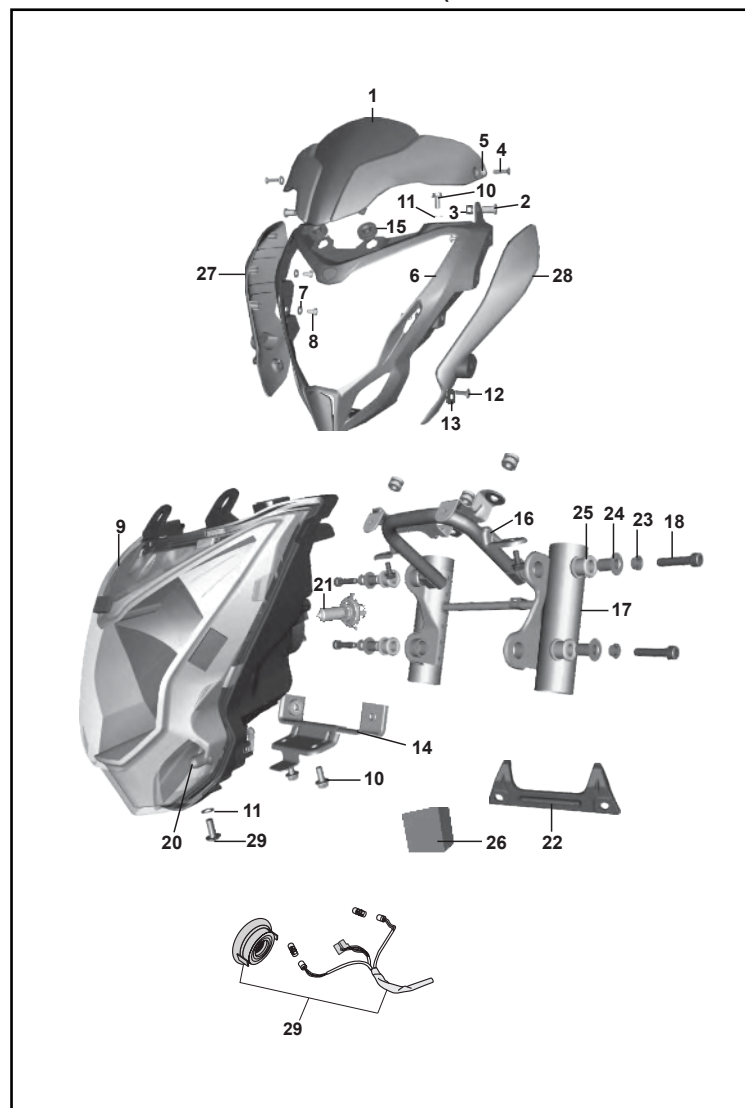


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL181008	Visor Carenade	1	-	1	
2	JG181236	Tuerca M5	2	-	2	No Ilustrado
3	JG181235	Arandela	2	-	2	No Ilustrado
4	LBS00001	Tornillo 5x20	2	-	2	
5	JL181247	Antivibrante	2	-	2	
6	JL181203	Carenaje Farola	1	-	1	
7	LDA00007	Arandela	6	-	6	
8	LBR00002	Tornillo	6	-	6	
9	JL401012	Farola	1	-	1	
10	KADD0614	Tornillo	2	-	2	
11	39019811	Arandela	3	-	3	
12	KBUC0516	Tornillo 5x16	2	-	2	
13	39214124	Arandela	2	-	2	
14	JL181236	Soporte Inferior	1	-	1	
15	JL181249	Antivibrante	1	-	1	
16	JL181237	Soporte Superior	1	-	1	
17	JL181235	Soporte Farola	1	-	1	
18	KACB0835	Tornillo	4	-	4	
19	36JL0017	Kit Tornillos Visor Carenade	1	-	1	No Ilustrado
20	DH191037	Bombillo Piloto 12V 3W	2	-	2	
21	EC401030	Bombillo Farola 12V 60/55W	1	-	1	
22	JL181283	Platina Plástica Farola	1	-	1	
23	JL181257	Buje Carenade	1	-	1	
24	PA181293	Buje	4	-	4	
25	PA181292	Antivibrante	4	-	4	

This exploded view diagram illustrates the components of a motorcycle headlight assembly. The parts are numbered as follows:

- 1**: Main headlight housing (top)
- 2**: Mounting bracket (top right)
- 3**: Small pin/bush (top right)
- 4**: Small pin/bush (top right)
- 5**: Small pin/bush (top right)
- 6**: Mounting bracket (middle)
- 7**: Small pin/bush (middle left)
- 8**: Small pin/bush (middle left)
- 9**: Headlight lens/cover
- 10**: Small pin/bush (bottom center)
- 11**: Small pin/bush (bottom left)
- 12**: Small pin/bush (bottom right)
- 13**: Small pin/bush (bottom right)
- 14**: Mounting bracket (bottom center)
- 15**: Small pin/bush (middle left)
- 16**: Mounting bracket (top right)
- 17**: Mounting bracket (top right)
- 18**: Small pin/bush (top right)
- 19**: Small pin/bush (top right)
- 20**: Headlight lens/cover (bottom left)
- 21**: Small pin/bush (middle left)
- 22**: Mounting bracket (bottom right)
- 23**: Small pin/bush (top right)
- 24**: Small pin/bush (top right)
- 25**: Small pin/bush (top right)
- 26**: Mounting bracket (bottom right)
- 27**: Mounting bracket (middle left)
- 28**: Mounting bracket (middle right)
- 29**: Headlight wiring harness



pulsar
NS200-AS200

FIGURA N° 49: FAROLA / CARENAJE (PULSAR AS200)

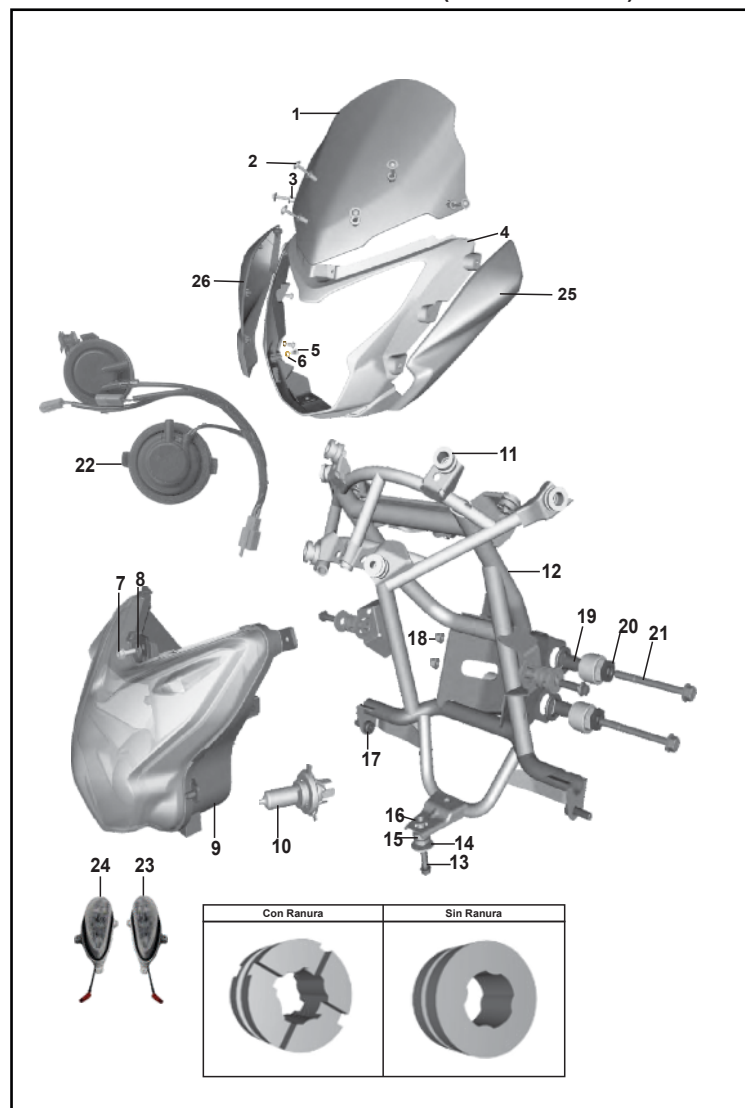


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL181426	Visor Carenade	-	1	-	
2	LBU00030	Tornillo 5x16	-	7	-	
3	JL181453	Antivibrante	-	7	-	
4	JL181417	Carenaje Farola	-	1	-	
5	LBR00002	Tornillo	-	10	-	
6	KDBA0512	Arandela	-	10	-	
7	KADC0616	Tornillo 6x14	-	1	-	
8	KDBA0613	Arandela	-	1	-	
9	JL401017	Farola	-	1	-	
10	DK201043	Bombillo Farola 12V 60/55W	-	2	-	
11	JL181245	Antivibrante	-	6	-	
12	JL181416	Soporte Farola	-	1	-	
13	KAEG0620	Tornillo	-	3	-	
14	39021111	Arandela 6 mm.	-	3	-	
15	DJ181064	Antivibrante	-	3	-	Con Ranura
	JL181029		-	3	-	Sin Ranura
16	DJ181029	Buje Soporte Carenade	-	3	-	
17	JD171801	Tornillo	-	2	-	
18	39253515	Tuerca	-	2	-	
19	DT181311	Espaciador	-	4	-	
20	DT181310	Arandela	-	4	-	
21	LAD00120	Tornillo 8x35	-	2	-	
22	YJL06003	Instalación Farola	-	1	-	
23	YJL06002	Luz Farola Izquierda	-	1	-	
24	YJL06001	Luz Farola Derecha	-	1	-	
25	JL181418	Enfocador Izquierdo	-	1	-	
26	JL181419	Enfocador Derecho	-	1	-	

This diagram illustrates the assembly of a mechanical component, likely a handle or lever, onto a main frame. The parts are numbered as follows:

- 1**: A large, curved, aerodynamic handle component.
- 2**: A smaller, curved handle component.
- 3**: A handle component with a threaded end.
- 4**: A small, curved handle component.
- 5/7**: A small, cylindrical pin or bushing.
- 5/8**: A small, cylindrical pin or bushing.
- 6**: A small, cylindrical pin or bushing.
- 8**: A small, cylindrical pin or bushing.

The main frame is a complex, angular metal structure. The assembly process involves inserting the pins (5/7, 5/8, 6, 8) into the frame and then attaching the handle components (1, 2, 3, 4) to the pins. Dashed lines indicate the alignment and insertion points for the pins and handles.



pulsar
NS200-AS200

This exploded view diagram illustrates the assembly of a mechanical component, likely a motorized bracket or support. The parts are numbered 1 through 18:

- 1**: A large, flat, rectangular base plate with a textured surface.
- 2**: A large, black, L-shaped bracket with a triangular cutout.
- 3**: A small screw or bolt.
- 4**: A black, cylindrical component, possibly a motor or actuator.
- 5**: A small screw or bolt.
- 6**: A small, black, L-shaped bracket.
- 7**: A small, black, L-shaped bracket.
- 8**: A small, black, L-shaped bracket.
- 9**: A small, black, L-shaped bracket.
- 10**: A small, black, L-shaped bracket.
- 11**: A small, black, L-shaped bracket.
- 12**: A small, black, L-shaped bracket.
- 13**: A small, black, L-shaped bracket.
- 14**: A small, black, L-shaped bracket.
- 15**: A small, black, L-shaped bracket.
- 16**: A small, black, L-shaped bracket.
- 17**: A small, black, L-shaped bracket.
- 18**: A small, black, L-shaped bracket.



This exploded view diagram illustrates the assembly of a mechanical component, likely a gun trigger guard. The parts are numbered 1 through 20. The main assembly sequence is as follows:

- Part 1** (Pin) is inserted into **Part 2** (Bushing).
- Part 2** is inserted into **Part 7** (Receiver).
- Part 12** (Trigger Housing) is attached to **Part 7** using **Part 13** (Pin) and **Part 14** (Washer).
- Part 15** (Spring) is inserted into **Part 12**.
- Part 3** (Trigger) is inserted into **Part 12** using **Part 4** (Pin) and **Part 5** (Washer).
- Part 9** (Trigger Pin) is inserted into **Part 3** using **Part 8** (Washer) and **Part 10** (Plate).
- Part 11** (Pin) is inserted into **Part 10**.
- Part 16** (Trigger Guard) is attached to **Part 12** using **Part 14** (Washer) and **Part 18** (Pin).
- Part 17** (Trigger Guard Pin) is inserted into **Part 16**.
- Part 19** (Trigger Guard Plate) is attached to **Part 16** using **Part 20** (Pin).



pulsar
NS200-4S200

This diagram illustrates the exploded view of a vehicle's electrical system components. The parts are labeled as follows:

- 1**: Main wiring harness with multiple connectors.
- 1A**: Secondary wiring harness or extension.
- 2**: A small rectangular electronic control module.
- 3**: A long, thin metal bracket or support rail.
- 4**: A small metal pin or fastener.
- 7**: A rectangular battery unit with a label.
- 8**: A circular component, likely an alternator or generator, with mounting tabs.
- 9**: A small circular sensor or plug.
- 10**: A small cylindrical component, possibly a fuse or relay.
- 11**: A black plastic fuse block or terminal block.
- 12**: A component mounted on top of the fuse block.
- 12A**: A specific terminal or connector on the fuse block.
- 13**: A black plastic housing or cover for the fuse block.
- 14**: A small screw or fastener.
- 15**: A rectangular battery unit with a carrying handle.
- 16**: A mechanical component, possibly a solenoid or actuator, with a long rod.
- 17**: A small black plastic connector or plug.
- 18/18A**: A small black plastic connector or plug.
- 19**: A small black plastic component, possibly a fuse holder or terminal.
- 21**: A metal bracket or mounting plate.
- 22**: A specific terminal or connector on the fuse block.
- 20**: A small screw or fastener.



This diagram illustrates the components of a vehicle's electrical system, including:

- 1**: Main wiring harness.
- 1A**: Secondary wiring harness.
- 2**: Rectifier/relay unit.
- 3**: Long metal bracket or support arm.
- 4**: Short metal pin or fastener.
- 7**: Battery unit.
- 8**: Alternator/stator assembly.
- 9**: Small electrical connector or plug.
- 10**: Bolt or screw.
- 11**: Main fuse block or junction box.
- 12**: Internal fuse or component within the fuse block.
- 12A**: Alternative internal component for the fuse block.
- 13**: Battery-to-alternator cable with a strap.
- 14**: Small terminal or connector.
- 15**: Battery unit (alternative view or model).
- 16**: Alternator/stator assembly with mounting bracket.
- 17**: Small electrical component or relay.
- 18/18A**: Alternative small electrical component or relay.
- 19**: Small electrical component or relay.
- 21**: Mounting bracket or support plate.
- 22**: Internal component or fuse within the fuse block.
- 20**: Small terminal or connector.



pulsar
NS200-4S200

This diagram illustrates the exploded view of a motorcycle rear subframe assembly. The components are identified by the following numbers:

- 1**: Main rear subframe body.
- 2**: Various mounting pins and bolts used throughout the assembly.
- 3**: Small cylindrical spacers or washers.
- 4**: A rear shock absorber mounting bracket.
- 5**: A horizontal support bar or link.
- 6**: A rear fender or mudguard.
- 7**: A rear seat or backrest panel.



pulsar
NS200-4S200



An exploded view diagram of a motorcycle helmet, showing its various components numbered 1 through 11. The central part is the main helmet shell (1). Above it is the rear section (7). To the left is the forehead/eye area (9). Below the main shell are the cheek pads (3) and chin bar (2). To the right is the side/ear area (8). Below the cheek pads are the side cheek pads (4) and chin bar cheek pads (5). Below the chin bar is the chin bar cover (6). At the bottom are the two chin bar cheek pads (10 and 11).



An exploded view diagram of a motorcycle helmet, showing its various components numbered 1 through 11. The central part is the main shell (1). Surrounding it are the chin bar (2), cheek pads (3, 4), and side pads (5, 6). The top of the helmet features a crown pad (7) and a rear pad (8). The front of the helmet has a nose pad (9) and a forehead pad (10). The bottom of the helmet has a chin pad (11).



pulsar
NS200-AS200

FIGURA N° 58: CALCOMANÍAS (PULSAR 200NS)

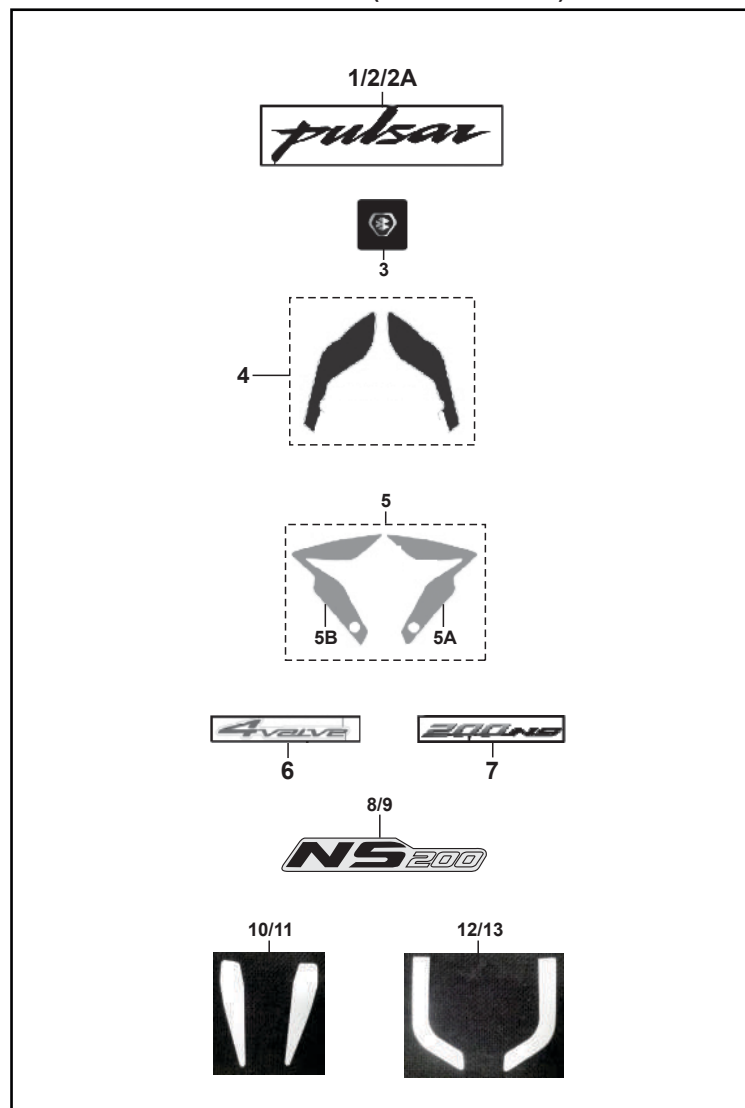


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-V	
1	JL233004	Emblema "PULSAR" Derecho	1	-	-	Sin Borde
2	JL233003	Emblema "PULSAR" Izquierdo	1	-	-	Sin Borde
2A	JL233239	Emblema "PULSAR" Izq. y Der.	2	-	-	Con Borde Negro
3	JL233002	Calcomanía Logo Bajaj	1	-	-	
4	36JL0026	Kit Calcomanías Carenaje	1	-	-	
	KIT-472930/00		1	-	-	Integración Nal.
5	36JL0027	Kit Calcomanías Guardabarro Del.	1	-	-	Rojo Eclipse
	36JL0028		1	-	-	Azul
	36JL0029		1	-	-	Negro Nebulosa
	36JL0030		1	-	-	Amarilla
5A	4646/00	Calc. Guardabarro Del. Derecha	1	-	-	Amarilla
	4677/00		1	-	-	Rojo Eclipse
	4775/00		1	-	-	Blanco Celestial
	4929/00		1	-	-	Verde Lima
5B	4647/00	Calc. Guardabarro Del. Izquierda	1	-	-	Amarilla
	4678/00		1	-	-	Rojo Eclipse
	4776/00		1	-	-	Blanco Celestial
	4930/00		1	-	-	Verde Lima
6	JL233005	Calcomanía "4 Valve"	2	-	-	
7	JL233006	Calcomanía "200NS"	2	-	-	
	4725/00		2	-	-	Integración Nal.
8	6636/00	Calc. Cubierta Tanque "NS200" Izq.	1	-	-	
9	6637/00	Calc. Cubierta Tanque "NS200" Der.	1	-	-	
10	JL191008	Calc. Protector Cubierta Tanque Izq.	1	-	-	
11	JL191009	Calc. Protector Cubierta Tanque Der.	1	-	-	
12	20000671	Calc. Protector Sillín Izq.	1	-	-	
13	20000673	Calc. Protector Sillín Der.	1	-	-	

1/2/2A

pulsar

3

AS 200

4

4V2LVE

5

ADVENTURE SPORT

6

6A 6B



pulsar
NS200 - 4S200

FIGURA N° 60: CALCOMANÍAS Y ACCESORIOS (PULSAR 200NS PRO - NS200 BS-IV PRO 1ª EDICIÓN)

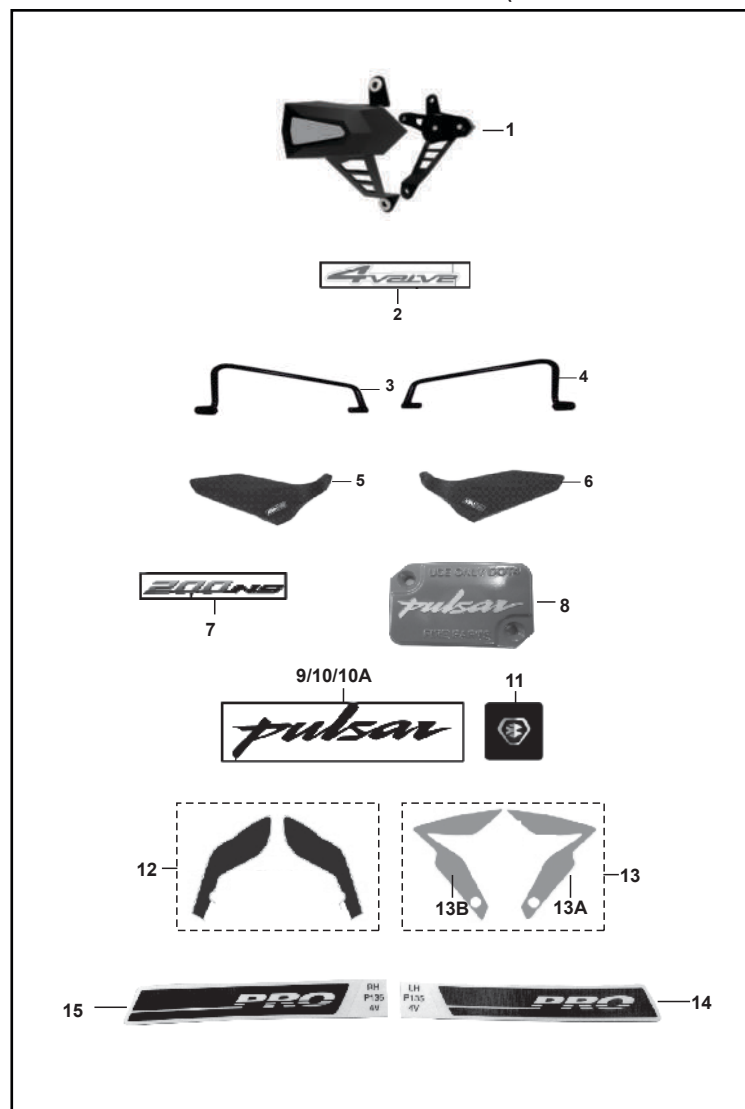


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	PN0007-NT	Kit Sliders Nitrus	1	-	1	
2	JL233005	Calcomanía "4 Valve"	2	-	2	
3	20000183	Protector Manos Izquierdo	1	-	1	Marca Nitrus
4	20000185	Protector Manos Derecho	1	-	1	Marca Nitrus
5	20005600	Cortaviento Izquierdo	1	-	1	Marca Nitrus
6	20005601	Cortaviento Derecho	1	-	1	Marca Nitrus
7	JL233006	Calcomanía "200NS"	2	-	2	
	4725/00		2	-	2	Integración Nal
8	PN100.096-OR	Tapa Bomba Freno Naranja	1	-	-	
	PN100.096-RD	Tapa Bomba Freno Roja	1	-	-	
	PN100.096-BL	Tapa Bomba Freno Azul	1	-	-	
9	JL233004	Emblema "PULSAR" Derecho	1	-	-	Sin Borde
10	JL233003	Emblema "PULSAR" Izquierdo	1	-	-	Sin Borde
10A	JL233239	Emblema "PULSAR" Izq. y Der.	2	-	-	Con Borde Negro
	JL233316		-	-	2	Con Borde Negro
11	JL233002	Calcomanía Logo Bajaj	1	-	1	
12	36JL0026	Kit Calcomanías Carenaje	1	-	1	
	KIT-472930/00		1	-	1	Integración Nal.
13	36JL0027	Kit Calcomanías Guardabarro Del.	1	-	1	Rojo Eclipse
	36JL0029		1	-	-	Negro Nebulosa
13A	4775/00	Calc. Guardabarro Del. Derecha	1	-	-	Blanco Celestial
	4677/00		1	-	1	Rojo Eclipse
	5072/00		1	-	-	Naranja Volcano
13B	4776/00	Calc. Guardabarro Del. Izquierda	1	-	-	Blanco Celestial
	4678/00		1	-	1	Rojo Eclipse
	5073/00		1	-	-	Naranja Volcano
14	5070/00	Calcomanía "PRO" Derecha	1	-	-	
15	5071/00	Calcomanía "PRO" Izquierda	1	-	-	

FIGURA N° 61: CALCOMANÍAS Y ACCESORIOS PULSARMANIA (PULSAR 200NS - NS200 BS-IV) (1/3)

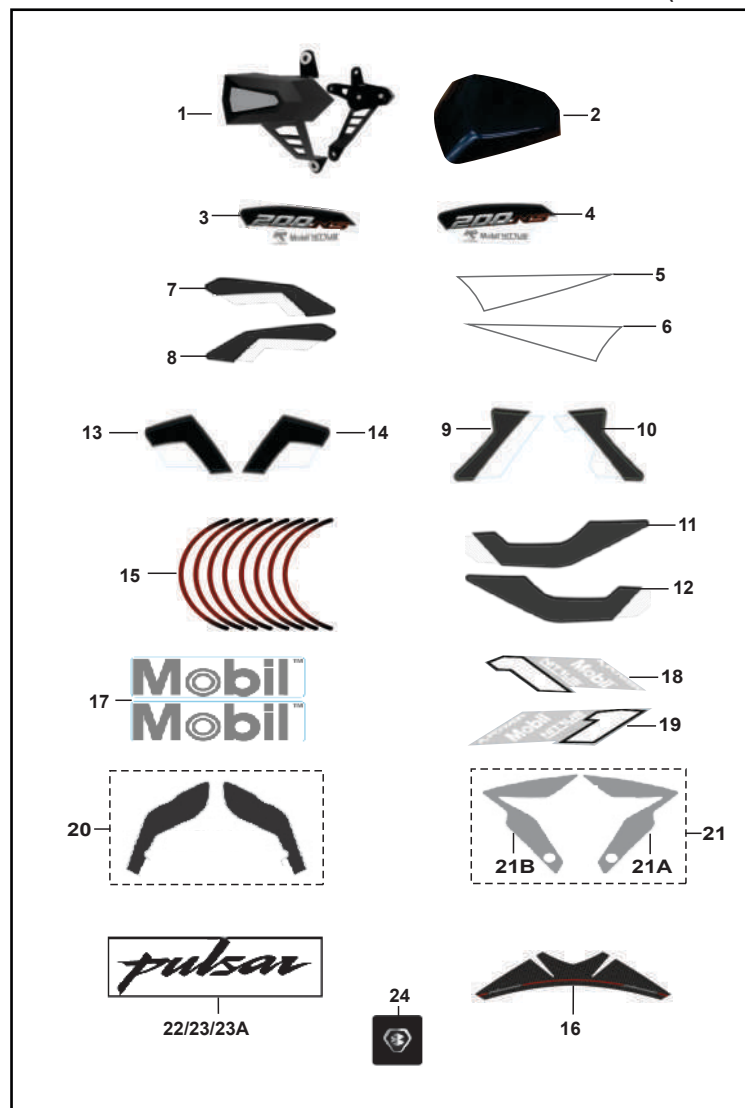


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	PN101.046-BL	Kit Sliders Nitrus	1	-	-	Azul
	PN0007-NT		1	-	-	Negro
	PN101.046-RD		1	-	-	Rojo
	PN101.046-OR		1	-	-	Naranja
	PN101.046-GR		1	-	1	Verde
2	743842/00	Solo Seat	1	-	1	
3	6463/00	Cal. Enfocador Lat. Sup. Derecha	1	-	1	Verde Neon
	6525/00		1	-	-	Naranja
	6514/00		1	-	-	Negro Nebulosa
4	6462/00	Cal. Enfocador Lat. Sup. Izquierda	1	-	1	Verde Neon
	6524/00		1	-	-	Naranja
	6513/00		1	-	-	Negro Nebulosa
5	6476/00	Cal. Enfocador Lateral Inferior Derecha	1	-	1	
6	6475/00	Cal. Enfocador Lateral Inferior Izquierda	1	-	1	
7	6465/00	Cal. Tanque Lateral Derecha	1	-	1	Verde Neon
	6527/00		1	-	-	Naranja
	6516/00		1	-	-	Negro Nebulosa
8	6464/00	Cal. Tanque Lateral Izquierda	1	-	1	Verde Neon
	6526/00		1	-	-	Naranja
	6515/00		1	-	-	Negro Nebulosa
9	6481/00	Cal. Lateral Inferior Derecha	1	-	1	Verde Neon
	6536/00		1	-	-	Naranja
	6535/00		1	-	-	Negro Nebulosa
10	6466/00	Cal. Lateral Inferior Izquierda	1	-	1	Verde Neon
	6528/00		1	-	-	Naranja
	6517/00		1	-	-	Negro Nebulosa

24

22/23/23A

16

21B 21A

21

20

17

15

14

13

12

11

10

9

8

7

6

5

4

3

2

1





pulsar
NS200-4S200

FIGURA N° 62: CALCOMANÍAS Y ACCESORIOS COPA PULSAR (PULSAR 200NS - NS200 BS-IV (1/2))

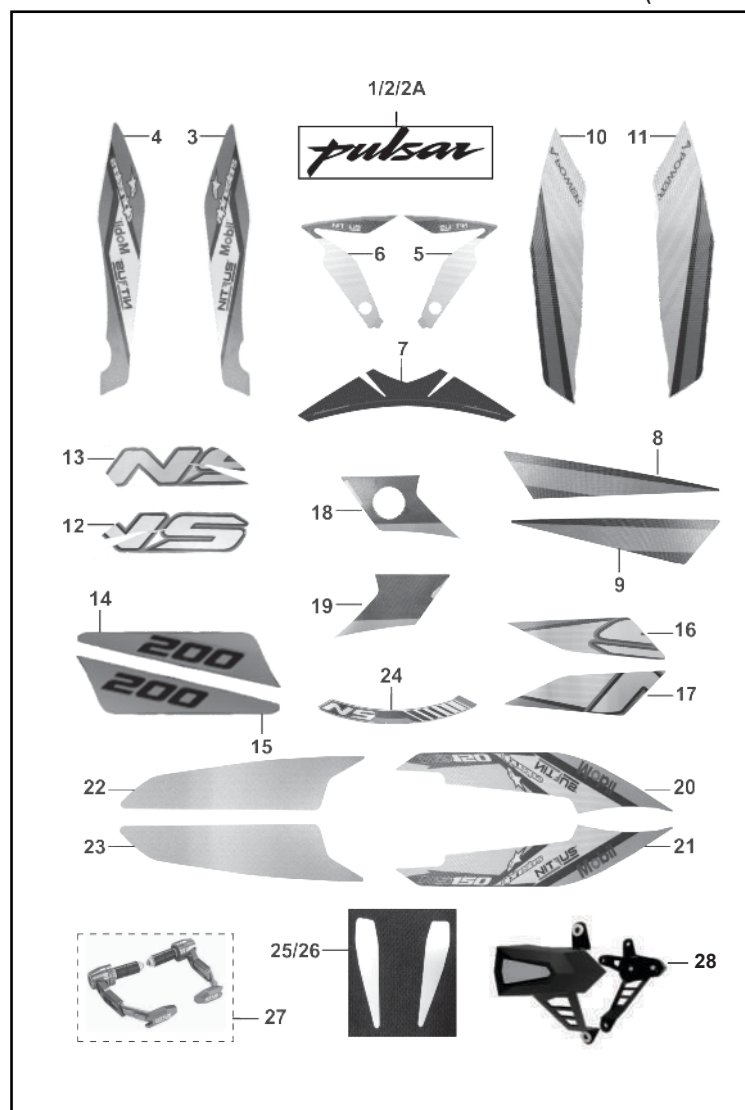


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL233004	Emblema "PULSAR" Derecho	1	-	1	Sin Borde
2	JL233003	Emblema "PULSAR" Izquierdo	1	-	1	Sin Borde
2A	JL233239	Emblema "PULSAR" Izq. y Der.	2	-	-	Con Borde Negro
	JL233316		-	-	2	Con Borde Negro
3	20005513	Calcomanía Carenaje Izq.	1	-	1	Moto Negro-Naranja
	20006252		1	-	1	Moto Negro-Azul
4	20005514	Calcomanía Carenaje Der.	1	-	1	Moto Negro-Naranja
	20006253		1	-	1	Moto Negro-Azul
5	20005629	Calcomanía Guardabarro Del. Izq.	1	-	1	Moto Negro-Naranja
	20006250		1	-	1	Moto Negro-Azul
6	20005630	Calcomanía Guardabarro Del. Der.	1	-	1	Moto Negro-Naranja
	20006251		1	-	1	Moto Negro-Azul
7	20005644	Protector Tanque	1	-	1	Moto Negro-Naranja
	20006271		1	-	1	Moto Negro-Azul
8	20005523	Cal. Cubierta Tanque Superior Izq.	1	-	1	Moto Negro-Naranja
	20006262		1	-	1	Moto Negro-Azul
9	20005524	Cal. Cubierta Tanque Superior Der.	1	-	1	Moto Negro-Naranja
	20006263		1	-	1	Moto Negro-Azul
10	20005515	Calcomanía Enfocador Sup. Izq.	1	-	1	Moto Negro-Naranja
	20006254		1	-	1	Moto Negro-Azul
11	20005516	Calcomanía Enfocador Sup. Der.	1	-	1	Moto Negro-Naranja
	20006255		1	-	1	Moto Negro-Azul
12	20005517	Calcomanía Enfocador Central Izq.	1	-	1	Moto Negro-Naranja
	20006256		1	-	1	Moto Negro-Azul
13	20005518	Calcomanía Enfocador Central Der.	1	-	1	Moto Negro-Naranja
	20006257		1	-	1	Moto Negro-Azul
14	20005586	Calcomanía Enfocador Inf. Izq.	1	-	1	Moto Negro-Naranja
	20006258		1	-	1	Moto Negro-Azul

1/2/2A

4 3

10 11

6 5

7

13

12

8

9

14

15

16

17

18

19

20

21

22

23

24

25/26

27

28



pulsar
NS200-45200

FIGURA N° 63: CALCOMANÍAS (NS200 BS-IV 1ª EDICIÓN) (1/2)

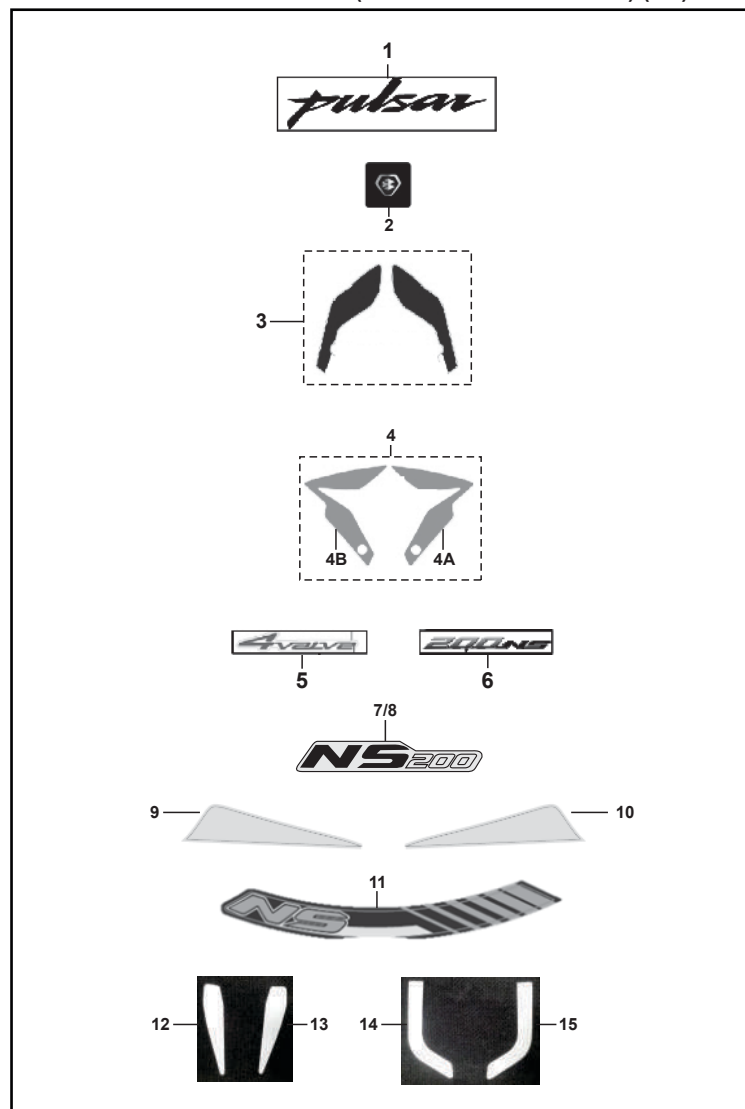


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL233316	Emblema "PULSAR" Izq. y Der.	-	-	2	Con Borde Negro
2	JL233002	Calcomanía Logo Bajaj	-	-	1	
3	36JL0026	Kit Calcomanías Carenaje	-	-	1	
	KIT-472930/00		-	-	1	Integración Nal.
4	36JL0027	Kit Calcomanías Guardabarro Del.	-	-	1	Rojo Eclipse
	36JL0028		-	-	1	Azul
	36JL0029		-	-	1	Negro Nebulosa
	36JL0030		-	-	1	Amarilla
4A	4646/00	Calc. Guardabarro Del. Derecha	-	-	1	Amarilla
	4677/00		-	-	1	Rojo Eclipse
	4775/00		-	-	1	Blanco Celestial
	4929/00		-	-	1	Verde Lima
4B	4647/00	Calc. Guardabarro Del. Izquierda	-	-	1	Amarilla
	4678/00		-	-	1	Rojo Eclipse
	4776/00		-	-	1	Blanco Celestial
	4930/00		-	-	1	Verde Lima
5	JL233005	Calcomanía "4 Valve"	-	-	2	
6	JL233006	Calcomanía "200NS"	-	-	2	
	4725/00		-	-	2	Integración Nal.
7	6636/00	Calc. Cubierta Tanque "NS200" Izq.	-	-	1	
8	6637/00	Calc. Cubierta Tanque "NS200" Der.	-	-	1	
9	20006875	Calc. Cubierta Tanque Inf. Izq.	-	-	1	Amarilla
10	20006876	Calc. Cubierta Tanque Inf. Der.	-	-	1	Amarilla
11	20005531	Calcomanía Rin	-	-	8	Amarilla
12	JL191008	Calcomanía Protector Cubierta Tanque Izq.	-	-	1	
13	JL191009	Calcomanía Protector Cubierta Tanque Der.	-	-	1	

1

2

3

4

4B

4A

5

6

7/8

9

10

11

12

13

14

15



FIGURA N° 64: CALCOMANÍAS (NS200 BS-IV 2ª EDICIÓN) (1/3)

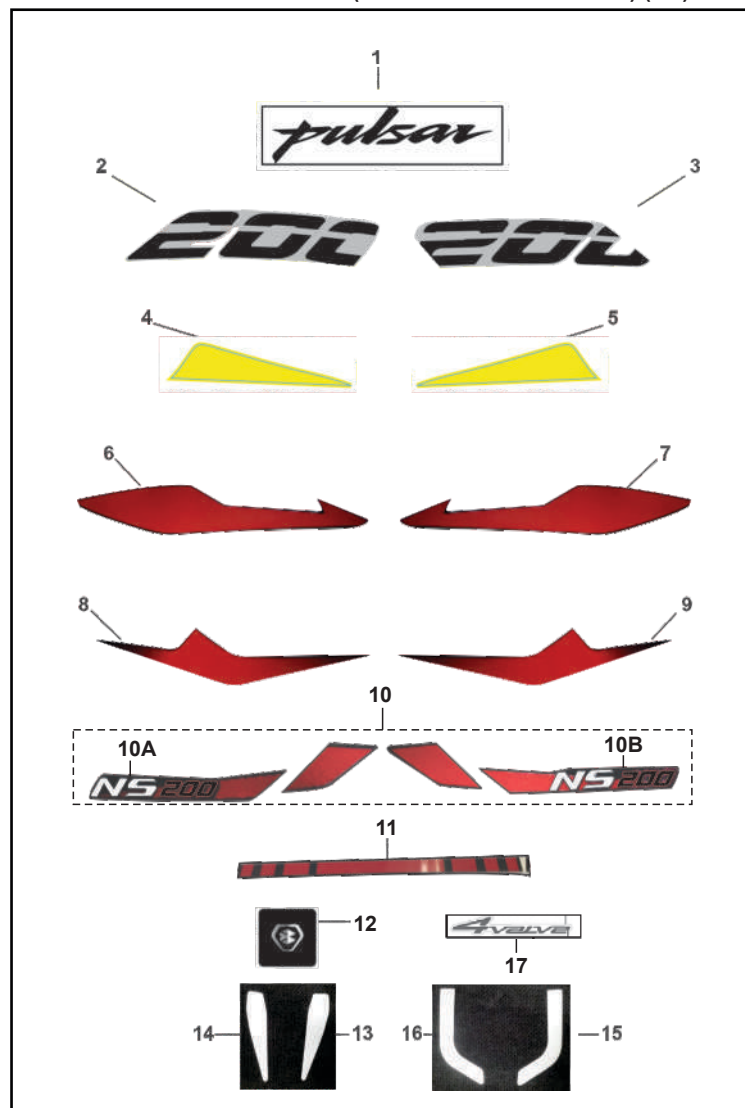


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL233316	Emblema "PULSAR" Izq. y Der.	-	-	2	
2	20006824	Calcomanía Enfocador "200" Izquierda	-	-	1	
3	20006825	Calcomanía Enfocador "200" Derecha	-	-	1	
4	20006875	Calc. Cubierta Tanque Inf. Izq.	-	-	1	Moto Gris Piedra
5	20006876	Calc. Cubierta Tanque Inf. Der.	-	-	1	Moto Gris Piedra
6	20006742	Calcomanía Carenaje Izquierda	-	-	1	Moto Roja
	20006767	" " "	-	-	1	Moto Gris Piedra
	20006778	" " "	-	-	1	Moto Negra
	20006756	" " "	-	-	1	Moto Blanca
	20006842	" " "	-	-	1	Moto Azul
	20006890	" " "	-	-	1	Moto Gris Plata
	20007460	" " "	-	-	1	Moto Naranja
	20007871	" " "	-	-	1	Moto Amarilla
7	20006743	Calcomanía Carenaje Derecha	-	-	1	Moto Roja
	20006768	" " "	-	-	1	Moto Gris Piedra
	20006779	" " "	-	-	1	Moto Negra
	20006757	" " "	-	-	1	Moto Blanca
	20006843	" " "	-	-	1	Moto Azul
	20006891	" " "	-	-	1	Moto Gris Plata
	20007461	" " "	-	-	1	Moto Naranja
	20007872	" " "	-	-	1	Moto Amarilla
8	20006822	Calc. Guardabarro Delantero Izq.	-	-	1	Moto Roja
	20006832	" " "	-	-	1	Moto Gris Piedra
	20006836	" " "	-	-	1	Moto Negra - Moto Gris Plata
	20006828	" " "	-	-	1	Moto Blanca
	20006840	" " "	-	-	1	Moto Azul
	20007458	" " "	-	-	1	Moto Naranja
	20007869	" " "	-	-	1	Moto Amarilla

FIGURA N° 64: CALCOMANÍAS (NS200 BS-IV 2ª EDICIÓN) (2/3)

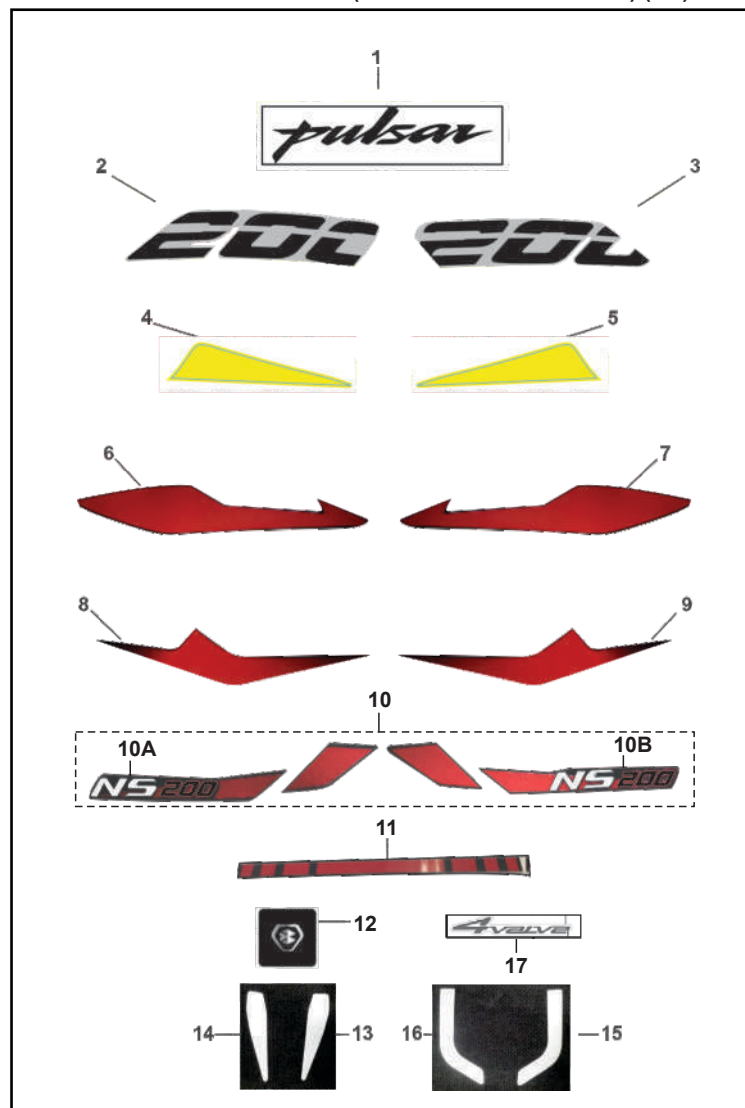


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
9	20006823	Calc. Guardabarro Delantero Der.	-	-	1	Moto Roja
	20006833	" " "	-	-	1	Moto Gris Piedra
	20006837	" " "	-	-	1	Moto Negra - Moto Gris Plata
	20006829	" " "	-	-	1	Moto Blanca
	20006841	" " "	-	-	1	Moto Azul
	20007459	" " "	-	-	1	Moto Naranja
	20007870	" " "	-	-	1	Moto Amarilla
10	36JL0124	Kit Calcomanía Cubierta Sillín	-	-	1	Moto Gris Plata
10A	20006826	Calc. Cubierta Sillín Izquierda	-	-	1	Moto Roja
	20006834	" " "	-	-	1	Moto Gris Piedra
	20006838	" " "	-	-	1	Moto Negra
	20006830	" " "	-	-	1	Moto Blanca
	20006846	" " "	-	-	1	Moto Azul
	20007455	" " "	-	-	1	Moto Naranja
	20007873	" " "	-	-	1	Moto Amarilla
10B	20006827	Calc. Cubierta Sillín Derecha	-	-	1	Moto Roja
	20006835	" " "	-	-	1	Moto Gris Piedra
	20006839	" " "	-	-	1	Moto Negra
	20006831	" " "	-	-	1	Moto Blanca
	20006847	" " "	-	-	1	Moto Azul
	20007456	" " "	-	-	1	Moto Naranja
	20007874	" " "	-	-	1	Moto Amarilla
11	20006753	Calcomanía Rin Del. - Tras.	-	-	8	Moto Roja
	20006887	" " "	-	-	8	Moto Gris Piedra
	20006775	" " "	-	-	8	Moto Negra - Moto Gris Plata
	20006764	" " "	-	-	8	Moto Blanca
	20006848	" " "	-	-	8	Moto Azul
	20007457	" " "	-	-	8	Moto Naranja
	20007875	" " "	-	-	8	Moto Amarilla



FIGURA N° 65: CALCOMANÍAS (PULSAR NS200 BS-IV PRO 2ª EDICIÓN)

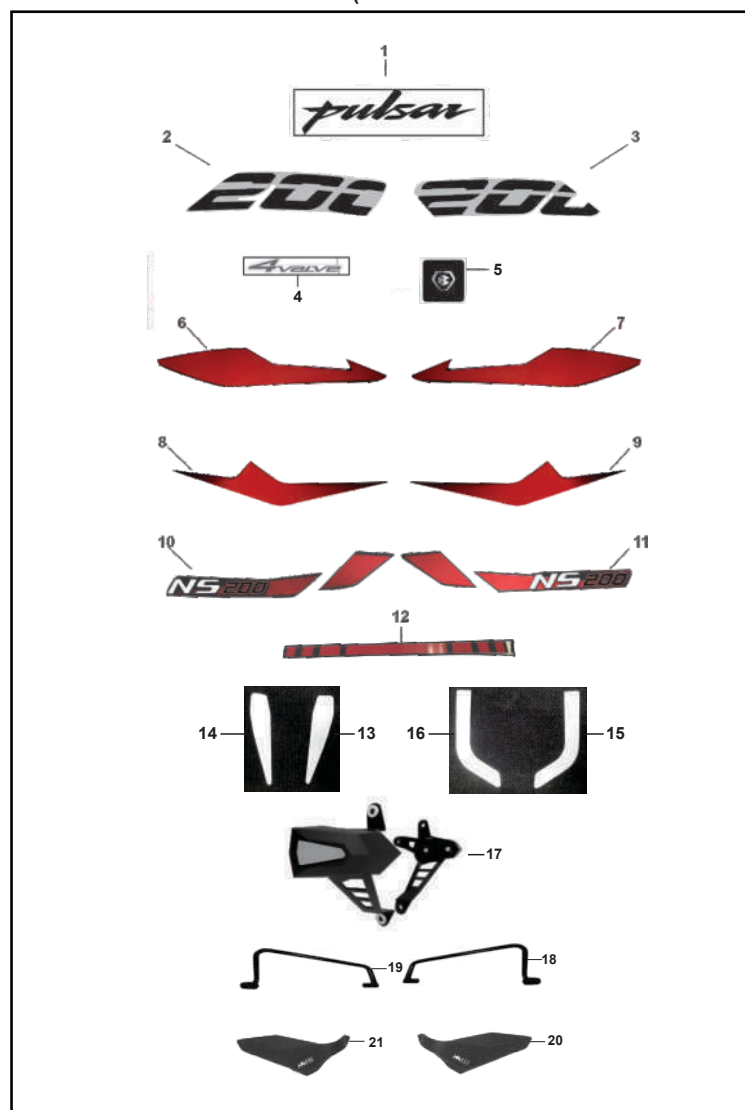


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL233316	Emblema "PULSAR" Izq. y Der.	-	-	2	
2	20006824	Calcomanía Enfocador "200" Izquierda	-	-	1	
3	20006825	Calcomanía Enfocador "200" Derecha	-	-	1	
4	JL233005	Calcomanía "4 Valve"	-	-	2	
5	JL233002	Calcomanía Logo "BAJAJ"	-	-	1	
6	20006742	Calcomanía Carenaje Izquierda	-	-	1	
7	20006743	Calcomanía Carenaje Derecha	-	-	1	
8	20006822	Calc. Guardabarro Delantero Izq.	-	-	1	
9	20006823	Calc. Guardabarro Delantero Der.	-	-	1	
10	20006826	Calc. Cubierta Sillín Izquierda	-	-	1	
11	20006827	Calc. Cubierta Sillín Derecha	-	-	1	
12	20006753	Calcomanía Rin Del. - Tras.	-	-	8	
13	20000667	Calc. Protector Cubierta Tanque Izq.	-	-	1	
14	20000664	Calc. Protector Cubierta Tanque Der.	-	-	1	
15	20000671	Calc. Protector Sillín Izquierda	-	-	1	
16	20000673	Calc. Protector Sillín Derecha	-	-	1	
17	PN0007-NT	Kit Sliders Nitrus	-	-	1	
18	20000185	Soporte Cortaviento Derecho	-	-	1	Marca Nitrus
19	20000183	Soporte Cortaviento Izquierdo	-	-	1	Marca Nitrus
20	20005601	Cortaviento Derecho	-	-	1	Marca Nitrus
21	20005600	Cortaviento Izquierdo	-	-	1	Marca Nitrus

FIGURA N° 66: CALCOMANÍAS (PULSAR NS200 BS-IV PRO 10M) (1/2)

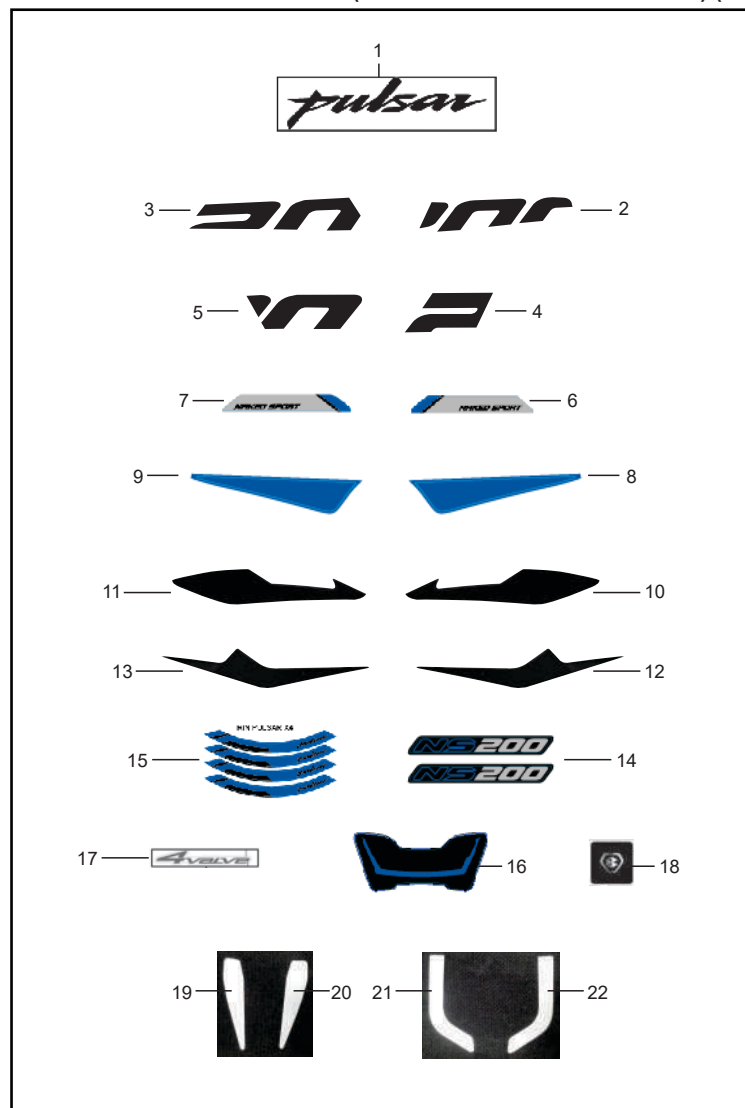


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	JL233316	Emblema "PULSAR" Izq. y Der.	-	-	2	
2	20007848	Calcomanía Enfocador Superior Der.	-	-	1	Moto Blanca
	20007837		-	-	1	Moto Negra-Rojo / Negra-Azul
3	20007849	Calcomanía Enfocador Superior Izq.	-	-	1	Moto Blanca
	20007838		-	-	1	Moto Negra-Rojo / Negra-Azul
4	20007846	Calcomanía Cubierta Tanque Derecha	-	-	1	Moto Blanca
	20007835		-	-	1	Moto Negra-Rojo / Negra-Azul
5	20007847	Calcomanía Cubierta Tanque Izquierda	-	-	1	Moto Blanca
	20007836		-	-	1	Moto Negra-Rojo / Negra-Azul
6	20007841	Calcomanía Enfocador Central Derecha	-	-	1	Moto Blanca
	20007830		-	-	1	Moto Negra-Rojo
	20008055		-	-	1	Moto Negra-Azul
7	20007842	Calcomanía Enfocador Central Izquierda	-	-	1	Moto Blanca
	20007831		-	-	1	Moto Negra-Rojo
	20008056		-	-	1	Moto Negra-Azul
8	20007839	Calcomanía Enfocador Inferior Derecha	-	-	1	Moto Blanca
	20007828		-	-	1	Moto Negra-Rojo
	20008053		-	-	1	Moto Negra-Azul
9	20007840	Calcomanía Enfocador Inferior Izquierda	-	-	1	Moto Blanca
	20007829		-	-	1	Moto Negra-Rojo
	20008054		-	-	1	Moto Negra-Azul
10	20006757	Calcomanía Carenaje Derecha	-	-	1	Moto Blanca
	20006779		-	-	1	Moto Negra-Rojo / Negra-Azul
11	20006756	Calcomanía Carenaje Izquierda	-	-	1	Moto Blanca
	20006778		-	-	1	Moto Negra-Rojo / Negra-Azul
12	20006829	Calcomanía Guardabarro Derecha	-	-	1	Moto Blanca
	20006837		-	-	1	Moto Negra-Rojo / Negra-Azul

1 — **pulsar**

3 — **3N** **inr** — 2

5 — **VN** **2** — 4

7 — **APPROXIMATE REPORT** — 6

9 — **APPROXIMATE REPORT** — 8

11 — **APPROXIMATE REPORT** — 10

13 — **APPROXIMATE REPORT** — 12

15 — **WITH PULSAR 200** — 14

17 — **4 valves** — 18

19 — **20** — 21 — **22**



pulsar
NS200-AS200

The image shows a technical drawing of a mechanical assembly, likely a bicycle rear suspension. It consists of four numbered components:

- 1**: A complex, dark-colored mechanical part, possibly a shock absorber or a link, with a central pivot point and a mounting bracket.
- 2**: Two dark-colored, angular components, likely the main body of the shock absorbers, shown from different perspectives.
- 3**: A thin, curved metal link or spring component.
- 4**: A thin, curved metal link or spring component, similar to 3 but with a different curvature.



pulsar
NS200-4S200

FIGURA N° 68: CALCOMANÍAS EDICIÓN NEGRO MATE

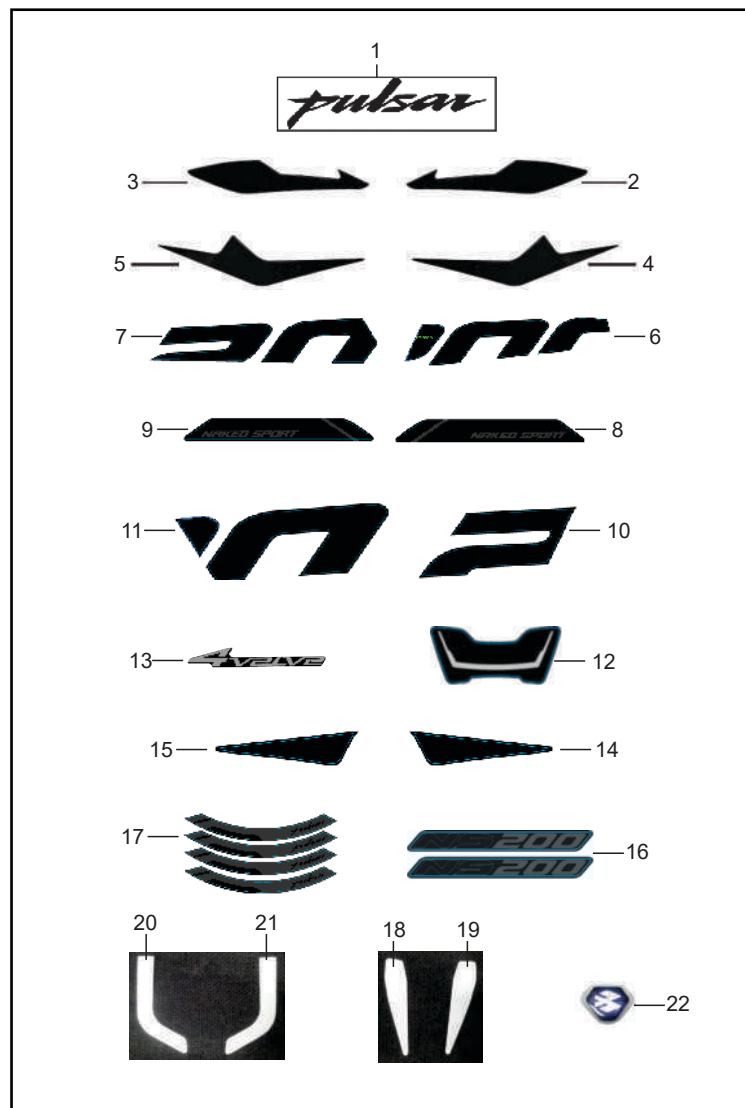


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	20005821	Emblema "PULSAR" Izq. y Der.	-	-	2	
2	20006779	Calcomanía Carenaje Farola Derecha	-	-	1	
3	20006778	Calcomanía Carenaje Farola Izquierda	-	-	1	
4	20006837	Calcomanía Guardabarro Delantero Der.	-	-	1	
5	20006836	Calcomanía Guardabarro Delantero Izq.	-	-	1	
6	20008464	Calcomanía Cubierta Tanque Lateral Sup. Der.	-	-	1	
7	20008465	Calcomanía Cubierta Tanque Lateral Sup. Izq.	-	-	1	
8	20008457	Calcomanía Cubierta Tanque Lateral Inf. Der.	-	-	1	
9	20008458	Calcomanía Cubierta Tanque Lateral Inf. Izq.	-	-	1	
10	20008462	Calcomanía Tanque Gasolina Derecha	-	-	1	
11	20008463	Calcomanía Tanque Gasolina Izquierda	-	-	1	
12	20008460	Protector Tanque Gasolina	-	-	1	
13	20008466	Calcomanía Superior Tapa Lateral "4 Valve"	-	-	2	
14	20008455	Calcomanía Inferior Tapa Lateral Der.	-	-	1	
15	20008456	Calcomanía Inferior Tapa Lateral Izq.	-	-	1	
16	20008461	Calcomanía Cubierta Sillín Der. - Izq.	-	-	2	
17	20008459	Calcomanía Rin Del. - Tras.	-	-	4	
18	JL191009	Calcomanía Protector Cubierta Tanque Der.	-	-	1	
19	JL191008	Calcomanía Protector Cubierta Tanque Izq.	-	-	1	
20	20000673	Calc. Protectora Tapa Lateral Der.	-	-	1	
21	20000671	Calc. Protectora Tapa Lateral Izq.	-	-	1	
22	JL233002	Calcomanía Logo "BAJAJ"	-	-	1	

FIGURA N° 69: CALCOMANÍAS EDICIÓN PULSARMANIA (1/3)

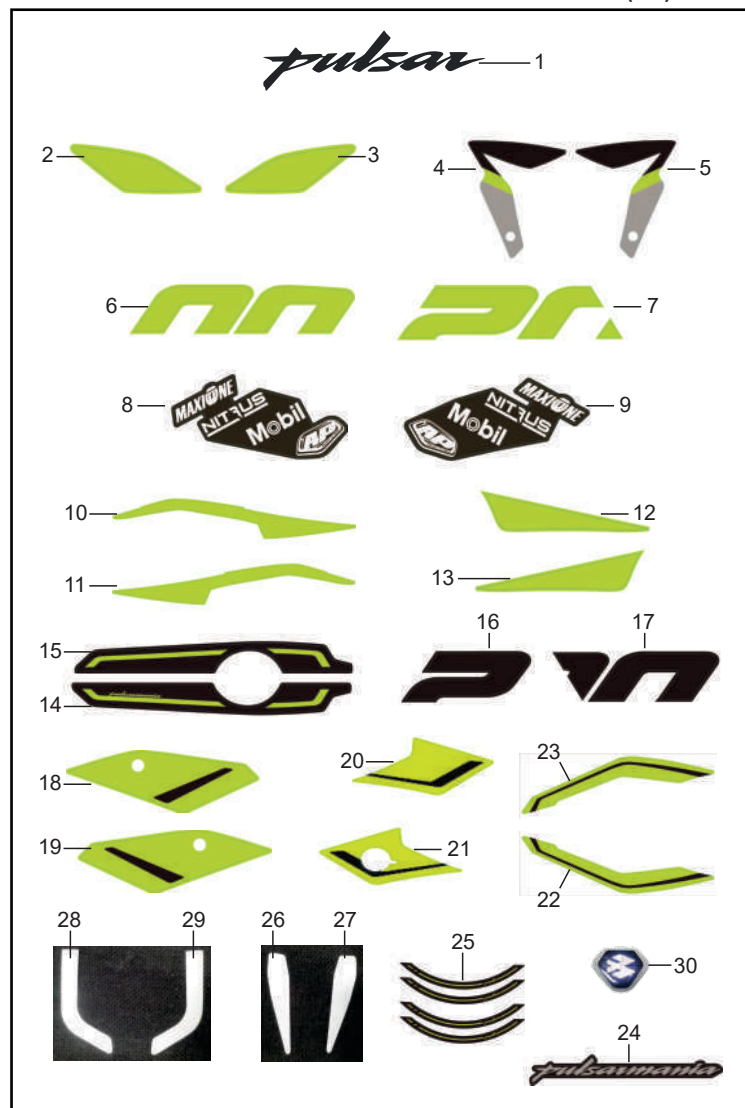


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.			OBSERVACIÓN
			NS	AS	NS BS-IV	
1	20005821	Emblema "PULSAR" Tanque Gasolina	-	-	2	
2	20008728	Calcomanía Carenaje Farola Derecha	-	-	1	Moto Gris - Verde
	20012484		-	-	1	Moto Gris - Azul
	20012501		-	-	1	Moto Gris - Rojo
3	20008729	Calcomanía Carenaje Farola Izquierda	-	-	1	Moto Gris - Verde
	20012485		-	-	1	Moto Gris - Azul
	20012502		-	-	1	Moto Gris - Rojo
4	20008741	Calcomanía Guardabarro Delantero Der.	-	-	1	Moto Gris - Verde
	20012495		-	-	1	Moto Gris - Azul
	20012514		-	-	1	Moto Gris - Rojo
5	20008742	Calcomanía Guardabarro Delantero Izq.	-	-	1	Moto Gris - Verde
	20012496		-	-	1	Moto Gris - Azul
	20012515		-	-	1	Moto Gris - Rojo
6	20008746	Calcomanía Cubierta Tanque Lateral Sup. Der.	-	-	1	Moto Gris - Verde
	20012521		-	-	1	Moto Gris - Azul
	20012519		-	-	1	Moto Gris - Rojo
7	20008747	Calcomanía Cubierta Tanque Lateral Sup. Izq.	-	-	1	Moto Gris - Verde
	20012522		-	-	1	Moto Gris - Azul
	20012520		-	-	1	Moto Gris - Rojo
8	20008732	Calcomanía Cubierta Tanque Lateral Mobil. Der.	-	-	1	
9	20008733	Calcomanía Cubierta Tanque Lateral Mobil. Izq.	-	-	1	
10	20008730	Calcomanía Cubierta Tanque Lateral Med. Der.	-	-	1	Moto Gris - Verde
	20012486		-	-	1	Moto Gris - Azul
	20012503		-	-	1	Moto Gris - Rojo
11	20008731	Calcomanía Cubierta Tanque Lateral Med. Izq.	-	-	1	Moto Gris - Verde
	20012487		-	-	1	Moto Gris - Azul
	20012504		-	-	1	Moto Gris - Rojo

The image displays 30 individual decals for a Pulsar motorcycle, arranged in a grid-like fashion. The decals are numbered 1 through 30. The items include:

- 1: Pulsar brand logo in a stylized script.
- 2, 3: Two green wing-shaped graphics.
- 4, 5: Two black and green graphics with silver circular accents.
- 6, 7: Two green stylized 'N' or 'M' shaped graphics.
- 8, 9: Two black and white 'MAXI ONE NITRUS Mobil' logos with a red 'R' emblem.
- 10, 11: Two green wing-shaped graphics, similar to 2 and 3 but with different contours.
- 12, 13: Two green wing-shaped graphics, similar to 10 and 11 but with different contours.
- 14, 15: A large black and white graphic with a central circular element.
- 16, 17: Two black stylized 'N' or 'M' shaped graphics.
- 18, 19: Two green wing-shaped graphics with a black stripe and a silver circular accent.
- 20, 21: Two green wing-shaped graphics with a black stripe and a silver circular accent.
- 22, 23: Two green wing-shaped graphics with a black stripe.
- 24: Pulsar brand logo in a stylized script.
- 25: Three black curved graphics.
- 26, 27: Two black stylized 'N' or 'M' shaped graphics.
- 28, 29: Two black stylized 'N' or 'M' shaped graphics.
- 30: A small blue and white logo.



pulsar
NS200-4S200

The image displays 30 numbered parts for a Pulsar motorcycle, arranged in a grid-like fashion. The parts include:

- 2: Green fairing piece.
- 3: Green fairing piece.
- 4: Black mirror housing.
- 5: Black mirror housing.
- 6: Green fairing piece.
- 7: Green fairing piece.
- 8: Mobil logo with 'MAXI ONE' and 'NITRUS' text.
- 9: Mobil logo with 'MAXI ONE' and 'NITRUS' text.
- 10: Green fairing piece.
- 11: Green fairing piece.
- 12: Green fairing piece.
- 13: Green fairing piece.
- 14: Black fairing piece with a white circular cutout.
- 15: Black fairing piece with a white circular cutout.
- 16: Black fairing piece.
- 17: Black fairing piece.
- 18: Green fairing piece.
- 19: Green fairing piece.
- 20: Green fairing piece.
- 21: Green fairing piece.
- 22: Green fairing piece.
- 23: Green fairing piece.
- 24: Pulsar brand logo.
- 25: Black fairing piece.
- 26: Black fairing piece.
- 27: Black fairing piece.
- 28: Black fairing piece.
- 29: Black fairing piece.
- 30: Pulsar brand logo.



pulsar
NS200-4S200

Diagram illustrating the components of a motorcycle helmet assembly, numbered 1 through 8:

- 1: Main helmet shell (outer casing).
- 2: Chin bar (lower front protective bar).
- 3: Left cheek pad (padding for the left side of the face).
- 4: Right cheek pad (padding for the right side of the face).
- 5: Left cheek pad (padding for the left side of the face).
- 6: Right cheek pad (padding for the right side of the face).
- 7: Chin strap (strap used to secure the helmet).
- 8: Chin strap buckle (the fastening mechanism for the chin strap).



pulsar
NS200-4S200

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
1	36JL0009	Kit Sprocket y Cadena	DV101048	Piñón Delantero 14T	1
			JL141000	Cadena 520x108L (Con O´ring)	1
			JL131228	Sprocket 38T	1
2	36JL0011	Kit válvulas	39201719	Reten Válvula	1
			JF511215	Asiento Válvula	1
			JF511217	Resorte Válvula	1
			JF511214	Reten Válvula	1
			DG101029	Cuña Válvula	2
3	36JL0013	Kit Antivibrantes Sillín	NA	Antivibrantes Sillín	6
			DK211007	Antivibrante Delantero Sillín	1
4	36JL0014	Kit Empaques	JL541207	Empaque Carcasa Clutch	1
			JL541208	Empaque Cubierta Volante	1
			JL521002	Empaque Cilindro	1
			JL511022	Empaque Culata	1
			JG541041	Empaque Carcasa Izquierda	1
			CS101128	Empaque Tensor Cadenilla	1
			JL511001	Empaque Tapa Culata	1
			JG591070	Empaque Silenciador	1
5	36JL0015	Kit Pines Reposapie Pasajero	JD113019	Pin Pasador	1
			30141031	Anillo Retenedor	1
			39104011	Arandela	1
			39078408	Pin	1
6	36JL0019	Kit Boquereles y Aguja Carbuardor	NA	Difusor	1
			NA	Aguja de La Cortina	1
			NA	Pulverizador	1
			NA	Boquerel de Alta	1
			NA	Boquerel de Baja	1

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
7	36JL0020	Kit Tornillo Aire Carburador	NA	Tornillo Ajuste	1
			NA	Anillo Retén Tornillo Drenaje	1
			DH121086	Resorte	1
			DH121087	Arandela	1
			NA	Anillo Retén Tornillo Ajuste	1
8	36JL0023	Kit Retenedores	NA	Anillo Retén Taza Carburador	1
			DH121118	Anillo Retén Tornillo Drenaje	1
			DH121088	Anillo Retén Auto Choke	1
			NA	Anillo Retén Tornillo Ralentí	1
9	36JL0024	Kit Pines-Arandela Carburador	DD121056	Soporte Aguja Carburador	1
			NA	Resorte Aguja Carburador	1
			NA	Arandela Aguja Carburador	1
			NA	Pin Aguja Carburador	1
10	36JL0031	Kit Tornillos y Antivibrantes Tanque	JL171070	Antivibrante Cubierta tanque	4
			JL171071	Buje Cubierta Tanque	4
			39023911	Arandela	4
			LAC00034	Tornillo 6x20	2
11	36JL0041	Kit Pines Reposapie Conductor	NA	Pin Pasador	1
			30141031	Anillo Reténedor	1
			39104011	Arandela	1
			39078408	Pin	1

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
01100905	16	11
020243/00	1	40
020246/00	4	71
020247/00	3	71
020248/00	15	38
020982/00	11	66
020982/00	10	67
100/80-17M138TLMAX	1	41
100/80-17-RX01-TL	1	41
130/70-17MR139-TLM	5	41
1342800	1	41
1343100	5	41
20000183	3	76
20000183	19	87
20000183	3	90
20000183	3	95
20000185	4	76
20000185	18	87
20000185	4	90
20000185	4	95
20000664	14	86
20000664	14	87
20000664	19	89
20000667	20	89
20000667	13	86
20000667	13	87
20000671	12	74
20000671	14	83
20000671	15	86
20000671	15	87
20000671	22	89
20000671	21	91
20000671	29	94
20000673	13	74
20000673	15	83

PARTE No.	FIG. No.	PAG. No.
20000673	16	86
20000673	16	87
20000673	21	89
20000673	20	91
20000673	28	94
20001257	8	95
20004740	5	75
20005513	3	80
20005514	4	80
20005515	10	80
20005516	11	80
20005517	12	80
20005518	13	80
20005521	16	81
20005522	17	81
20005523	8	80
20005524	9	80
20005525	18	81
20005526	19	81
20005529	22	81
20005530	23	81
20005531	24	81
20005531	11	82
20005586	14	80
20005587	15	81
20005588	20	81
20005589	21	81
20005600	5	76
20005600	21	87
20005601	6	76
20005601	20	87
20005629	5	80
20005630	6	80
20005644	7	80
20005821	1	91

PARTE No.	FIG. No.	PAG. No.
20005821	1	92
20006250	5	80
20006251	6	80
20006252	3	80
20006253	4	80
20006254	10	80
20006255	11	80
20006256	12	80
20006257	13	80
20006258	14	80
20006259	15	81
20006260	16	81
20006261	17	81
20006262	8	80
20006263	9	80
20006264	18	81
20006265	19	81
20006266	20	81
20006267	21	81
20006268	22	81
20006269	23	81
20006270	24	81
20006271	7	80
20006742	6	84
20006742	6	87
20006743	7	84
20006743	7	87
20006753	11	85
20006753	12	87
20006756	6	84
20006756	11	88
20006757	7	84
20006757	10	88
20006764	11	85
20006767	6	84

PARTE No.	FIG. No.	PAG. No.
20006768	7	84
20006775	11	85
20006778	6	84
20006778	11	88
20006778	3	91
20006779	7	84
20006779	10	88
20006779	2	91
20006822	8	84
20006822	8	87
20006823	9	85
20006823	9	87
20006824	2	84
20006824	2	87
20006825	3	84
20006825	3	87
20006826	10A	85
20006826	10	87
20006827	10B	85
20006827	11	87
20006828	8	84
20006828	13	89
20006829	9	85
20006829	12	88
20006830	10A	85
20006831	10B	85
20006832	8	84
20006833	9	85
20006834	10A	85
20006835	10B	85
20006836	8	84
20006836	13	89
20006836	5	91
20006837	9	85
20006837	12	88

PARTE No.	FIG. No.	PAG. No.
20006837	4	91
20006838	10A	85
20006839	10B	85
20006840	8	84
20006841	9	85
20006842	6	84
20006843	7	84
20006846	10A	85
20006847	10B	85
20006848	11	85
20006875	9	82
20006875	4	84
20006876	10	82
20006876	5	84
20006887	11	85
20006890	6	84
20006891	7	84
20007455	10A	85
20007456	10B	85
20007457	11	85
20007458	8	84
20007459	9	85
20007460	6	84
20007461	7	84
20007815	1	31
20007828	8	88
20007829	9	88
20007830	6	88
20007831	7	88
20007832	15	89
20007833	16	89
20007834	14	89
20007835	4	88
20007836	5	88
20007837	2	88

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
20007838	3	88
20007839	8	88
20007840	9	88
20007841	6	88
20007842	7	88
20007843	15	89
20007844	16	89
20007845	14	89
20007846	4	88
20007847	5	88
20007848	2	88
20007849	3	88
20007856	7	31
20007869	8	84
20007870	9	85
20007871	6	84
20007872	7	84
20007873	10A	85
20007874	10B	85
20007875	11	85
20007887	1	31
20008041	1	31
20008053	8	88
20008054	9	88
20008055	6	88
20008056	7	88
20008057	15	89
20008058	16	89
20008059	14	89
20008455	14	91
20008456	15	91
20008457	8	91
20008458	9	91
20008459	17	91
20008460	12	91

PARTE No.	FIG. No.	PAG. No.
20008461	16	91
20008462	10	91
20008463	11	91
20008464	6	91
20008465	7	91
20008466	13	91
20008723	1	31
20008724	7	31
20008726	12	93
20008727	13	93
20008728	2	92
20008729	3	92
20008730	10	92
20008731	11	92
20008732	8	92
20008733	9	92
20008734	20	93
20008735	21	94
20008736	18	93
20008737	19	93
20008738	25	94
20008739	14	93
20008740	24	94
20008741	4	92
20008742	5	92
20008743	22	94
20008744	23	94
20008745	16	93
20008746	6	92
20008747	7	92
20008748	17	93
20008807	6	95
20008808	5	95
20008849	7	95
20008940	15	93

PARTE No.	FIG. No.	PAG. No.
20012420	1	31
20012421	7	31
20012422	1	31
20012423	7	31
20012482	12	93
20012483	13	93
20012484	2	92
20012485	3	92
20012486	10	92
20012487	11	92
20012488	20	93
20012489	21	94
20012490	18	93
20012491	19	93
20012492	25	94
20012493	15	93
20012494	14	93
20012495	4	92
20012496	5	92
20012497	22	94
20012498	23	94
20012499	12	93
20012500	13	93
20012501	2	92
20012502	3	92
20012503	10	92
20012504	11	92
20012505	20	93
20012506	21	94
20012507	18	93
20012508	19	93
20012509	25	94
20012510	15	93
20012511	14	93
20012514	4	92

PARTE No.	FIG. No.	PAG. No.
20012515	5	92
20012516	22	94
20012517	23	94
20012519	6	92
20012520	7	92
20012521	6	92
20012522	7	92
30101195	3	22
30101236	28	37
30141031	22	37
30141031	5	96
30141031	11	97
30151082	22	45
30191038	16	46
30191048	3	68
30201064	4	68
31101173	7	7
31161078	15	54
31161078	23	55
31201079	5	48
33141008	7	2
36DH1902	4	43
36DT0055	3	23
36DT0079	2	12
36DT0080	1	14
36JG0004	6	17
36JG0011	7	34
36JG0011	30	52
36JG0018	21	46
36JL0001	15	5
36JL0003	1	14
36JL0004	2	12
36JL0005	3	23
36JL0007	1	6
36JL0009	2	45

PARTE No.	FIG. No.	PAG. No.
36JL0009	1	96
36JL0010	4	3
36JL0011	10	4
36JL0011	2	96
36JL0012	5	56
36JL0013	2	31
36JL0013	3	96
36JL0014	2	1
36JL0014	6	3
36JL0014	12	5
36JL0014	4	6
36JL0014	16	14
36JL0014	12	20
36JL0014	5	22
36JL0014	4	96
36JL0015	24	37
36JL0015	5	96
36JL0016	11	58
36JL0017	19	62
36JL0019	5	25
36JL0019	5	26
36JL0019	6	96
36JL0020	6	25
36JL0020	6	26
36JL0020	7	97
36JL0021	7	25
36JL0021	7	26
36JL0022	8	25
36JL0022	8	26
36JL0023	10	25
36JL0023	10	26
36JL0023	8	97
36JL0024	9	25
36JL0024	9	26
36JL0024	9	97

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
36JL0025	1	40
36JL0026	4	74
36JL0026	12	76
36JL0026	20	78
36JL0026	3	82
36JL0027	5	74
36JL0027	13	76
36JL0027	21	79
36JL0027	4	82
36JL0028	5	74
36JL0028	4	82
36JL0029	5	74
36JL0029	6	75
36JL0029	13	76
36JL0029	21	79
36JL0029	4	82
36JL0030	5	74
36JL0030	4	82
36JL0031	18	54
36JL0031	10	97
36JL0039	6	12
36JL0039	17	16
36JL0041	9	36
36JL0041	11	97
36JL0061	6	75
36JL0091	19	24
36JL0124	10	85
36JL0145	4A	3
36JU0001	2	6
36JU0002	6	23
36JU0036	1	7
39019811	15	46
39019811	11	62
39021111	14	64
39021111	4	67

PARTE No.	FIG. No.	PAG. No.
39023911	20	27
39023911	21	54
39023911	3	58
39023911	17	61
39023911	10	97
39024211	16	39
39029115	3	59
39032615	5	38
39042215	11	40
39045411	11	35
39055302	12	35
39059417	4	5
39072211	4	58
39074011	27	57
39074601	21	13
39078408	21	37
39078408	5	96
39078408	11	97
39080808	6	11
39080808	14	46
39084001	12	42
39084914	11	29
39090012	11	42
39099906	5	17
39099906	11	20
39099906	4	22
39101321	18	40
39104011	23	37
39104011	5	96
39104011	11	97
39104119	10	20
39104319	8	14
39104619	15	20
39105315	19	35
39105411	22	57

PARTE No.	FIG. No.	PAG. No.
39105515	32	37
39106204	9	33
39118011	3	49
39122515	5	65
39128321	9	3
39150711	9	68
39153721	7A	20
39153721	10	48
39166511	14	16
39167204	8	29
39167204	5	53
39167304	10	3
39177304	6	14
39177602	12	58
39177802	17	54
39177802	5	55
39178001	16	25
39178101	6	58
39178924	19	54
39179104	3	61
39190204	9	11
39190701	13	54
39190701	15	66
39190701	1	67
39191304	11	31
39193120	6	7
39193120	3	12
39194104	4	40
39194304	21	57
39194304	2	58
39194304	19	61
39194404	5	18
39194404	13	30
39194404	5	34
39194404	14	68

PARTE No.	FIG. No.	PAG. No.
39194604	9	38
39194604	5	40
39194604	18	57
39195404	18	37
39195604	3	33
39195604	10	68
39199020	2	20
39200511	18	12
39201719	1	4
39201719	2	96
39203804	17	45
39206004	13	40
39206004	10	54
39213217	5	6
39214124	7	53
39214124	13	62
39215811	3	8
39216511	15	7
39216511	13	29
39216611	15	8
39218106	3	6
39218106	22	15
39220011	16	7
39220011	12	23
39220307	5	7
39220404	14	18
39220504	10	68
39224120	3	42
39224120	3	45
39224220	4	45
39230404	18	28
39238104	3	56
39242001	4	38
39242001	24	47
39242704	10	49

PARTE No.	FIG. No.	PAG. No.
39244011	12	4
39246904	6	40
39247504	5	36
39247504	6	48
39248415	7	56
39249211	12	28
39253515	18	64
39256220	20	13
39256220	13	14
39260120	11	12
39260220	8	12
39260607	3	10
39260607	15	16
39260801	15	3
39262921	8	3
39266921	10	5
39269920	16	3
39270411	27	19
39272315	6	33
39272315	11	71
39275404	11	28
40326E	12	32
40327E	13	32
40373E	12	32
40374E	12	32
40375E	12	32
40376E	13	32
40378E	12	32
40379E	13	32
40380E	12	32
40381E	13	32
40382E	12	32
40383E	13	32
41070-1317-RX01/18	5	41
4646/00	5A	74

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
4646/00	4A	82
4647/00	5B	74
4647/00	4B	82
4677/00	5A	74
4677/00	13A	76
4677/00	21A	79
4677/00	4A	82
4678/00	5B	74
4678/00	13B	76
4678/00	21B	79
4678/00	4B	82
4725/00	7	74
4725/00	7	76
4725/00	6	82
4775/00	5A	74
4775/00	6B	75
4775/00	13A	76
4775/00	4A	82
4776/00	5B	74
4776/00	13B	76
4776/00	4B	82
4776/00	6A	75
4929/00	5A	74
4929/00	4A	82
4930/00	5B	74
4930/00	4B	82
5070/00	14	76
5071/00	15	76
5072/00	13A	76
5073/00	13B	76
52JF0062	4A	11
52JL0072	17	40
52JL0073	1	20
52JL0141	5	42
52JL0142	16	45

PARTE No.	FIG. No.	PAG. No.
52JL0143	1	20
52JL0145	1	22
52JL0152	12	36
52JL0153	16	37
52JL0156	1A	33
52JL0157	2A	33
52JL0158	8	36
52JL0159	2	36
52JL0207	1	22
52JL0892	1	20
52JL1024	8	36
52JL1035	2	36
56JF181Y	14	36
56JF191Y	15	36
56JL0101	14	36
56JL0201	15	36
56JL023G	2	66
56JL0401	2	56
56JL0601	1	33
56JL0701	2	33
56JL1W3V	1	22
56JL315X	2	49
56JL325X	6	49
56JL335X	18	51
56JL3X1Y	7	36
56JL3Y1Y	1	36
56JL4J1Y	12A	36
56JL4K1Y	16A	37
56JL4L1Y	13	36
56JL4M1Y	17	37
59040048	10	44
59040048	2	48
59200006	11	14
59200028	14	12
59200036	2	16

PARTE No.	FIG. No.	PAG. No.
59210019	10	42
59210019	4	60
6462/00	4	77
6463/00	3	77
6464/00	8	77
6465/00	7	77
6466/00	10	77
6467/00	12	78
6468/00	11	78
6469/00	14	78
6470/00	13	78
6471/00	15	78
6472/00	16	78
6473/00	21A	79
6474/00	21B	79
6475/00	6	77
6476/00	5	77
6477/00	19	78
6478/00	18	78
6479/00	17	78
6480/00	17	78
6481/00	9	77
6513/00	4	77
6514/00	3	77
6515/00	8	77
6516/00	7	77
6517/00	10	77
6518/00	12	78
6519/00	11	78
6520/00	14	78
6521/00	13	78
6522/00	15	78
6523/00	16	78
6524/00	4	77
6525/00	3	77

PARTE No.	FIG. No.	PAG. No.
6526/00	8	77
6527/00	7	77
6528/00	10	77
6529/00	12	78
6530/00	11	78
6531/00	14	78
6532/00	13	78
6533/00	15	78
6534/00	16	78
6535/00	9	77
6536/00	9	77
6636/00	8	74
6636/00	7	82
6637/00	9	74
6637/00	8	82
743842/00	2	77
AA101437	17	20
AA141067	8	2
AK201012	18A	69
AN111015	6	30
AP101236	3	5
AP121064	15	27
AP201025	18	69
BA122003	31	57
BF551037	7	8
BF561020	13	14
CB121042	12	25
CB121042	12	26
CS101128	12	5
CS101128	4	96
DD111011	11	30
DD111012	4	30
DD121056	9	97
DD141227	17	57
DD191015	14	49

PARTE No.	FIG. No.	PAG. No.
DD201002	14	66
DE151043	9	44
DE151046	10	46
DE151047	3	44
DE151047	9	46
DE191010	10	43
DE191010	8	46
DE191011	11	43
DE191028	7	43
DE191029	6	43
DE191033	15	43
DE191043	14	43
DF161102	12	40
DG101029	9	4
DG101029	2	96
DG101418	8	20
DG101456	10	14
DG121002	12	27
DG141028	28	57
DG151005	4	42
DG151049	6	42
DG161124	2	40
DG161144	6	36
DG171015	17	35
DG171016	4	35
DG171018	5	35
DG171019	6	35
DG181008	8	49
DG181008	25	52
DH101048	9	16
DH101199	16	29
DH101235	14	8
DH101295	11	4
DH101381	3	14
DH101383	9	12

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
DH101388	21	21
DH101389	12	29
DH101392	14	5
DH101396	14	29
DH101509	3	11
DH101607	5	28
DH101648	13	23
DH111013	9	30
DH111016	10	30
DH121063	14	25
DH121063	14	26
DH121064	13	25
DH121064	13	26
DH121086	7	97
DH121087	7	97
DH121088	8	97
DH121118	8	97
DH161146	16	40
DH161158	7	58
DH191006	9	48
DH191013	4	48
DH191017	17	49
DH191037	20	62
DJ161069	7	38
DJ161091	18	39
DJ161229	11	54
DJ161229	16	66
DJ161229	2	67
DJ181029	16	64
DJ181064	15	64
DJ181065	22	19
DJ181065	9	53
DJ191023	14	43
DJ191029	2	43
DJ191030	3	43

PARTE No.	FIG. No.	PAG. No.
DJ191031	5	43
DJ191056	8	43
DJ191057	1	43
DJ191057	25	50
DJ191082	11	49
DJ191083	12	49
DJ201072	18	66
DJ201108	16	43
DJ201109	9	43
DJ201173	9	58
DJ201246	13	49
DJ221019	1	71
DK101225	14	3
DK101284	17	29
DK101352	26	9
DK101386	10	16
DK111011	12	30
DK111028	1	30
DK121045	21	25
DK121045	16	26
DK121047	15	25
DK121047	15	26
DK141028	6A	56
DK151012	9	45
DK151013	8	45
DK151015	14	45
DK151026	2	41
DK151031	2	46
DK151036	1	45
DK151045	18	46
DK151063	7	46
DK151069	4	46
DK151071	25	47
DK151072	19	46
DK151073	17	46

PARTE No.	FIG. No.	PAG. No.
DK151074	17A	46
DK151081	20	45
DK151082	21	45
DK151083	1	46
DK151085	13	46
DK151088	11	46
DK151089	12	46
DK161209	5	59
DK181006	4	51
DK181007	5	51
DK181009	14A	51
DK181010	14	51
DK181011	29	52
DK181012	14B	51
DK181013	14C	51
DK181015	11	51
DK181017	9	51
DK181018	7	51
DK181019	8	51
DK181020	10	51
DK181021	6	51
DK181022	16	51
DK181023	17	51
DK181025	23	52
DK181028	24	52
DK181075	1	34
DK181076	10	34
DK201043	10	64
DK211007	3	31
DK211007	3	96
DK221024	2	71
DP101109	17	24
DP101114	16	24
DP101191	23	13
DP101243	15	24

PARTE No.	FIG. No.	PAG. No.
DP161145	11	66
DP161145	10	67
DS101154	8	16
DS101215	9	20
DS121126	13	27
DS141012	1	58
DS161125	6	38
DS161287	6	31
DS191052	24	50
DS201025	19	69
DT113014	26	37
DT113015	27	37
DT113848	18	35
DT113855	12	34
DT121040	3	51
DT121048	2	51
DT131832	14	38
DT161005	16	49
DT181000	5	61
DT181310	20	64
DT181311	19	64
DT181322	11	34
DT181414	4	61
DT181415	6	61
DT181434	10	38
DT181435	12	38
DT232601	18	50
DT402006	7	68
DT511239	1	5
DT511242	4	4
DT511243	5	4
DT511261	4	4
DT511262	5	4
DT541019	5	20
DT541212	1	20

PARTE No.	FIG. No.	PAG. No.
DT551400	1	23
DT551401	9	23
DT551402	5	23
DT551403	10	23
DT551408	7	23
DT551409	1	23
DT551412	2	23
DT561206	10	11
DU101225	7	5
DV101048	17	8
DV101048	1	96
EC401030	21	62
EC561023	2	10
FD211006	5	31
GH201012	6	65
JA113403	5	33
JA351627	2	29
JA541048	15	14
JA541233	2	22
JA581314	11	25
JA581314	11	26
JB181223	5	59
JC101034	9	5
JC151020	8	42
JC151020	5	60
JC181022	21	52
JC181023	20	52
JC201043	3	60
JC201046	9	42
JD113019	20	37
JD113019	5	96
JD113814	14	2
JD113815	15	2
JD171801	17	64
JD191006	8	31

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JD351207	5	30
JD351800	17	25
JD401007	4	66
JD561416	5	11
JE581039	12	2
JF401016	3	67
JF511207	7	4
JF511214	2	96
JF511215	2	96
JF511217	2	96
JF511228	1	5
JF531007	2	7
JF531014	3	7
JG122028	2	61
JG131001	2	42
JG131821	5	46
JG161008	12	49
JG161010	1	43
JG161010	25	50
JG171029	20	18
JG181235	3	62
JG181236	2	62
JG181238	2	59
JG181259	12	59
JG191008	4	31
JG232601	9	31
JG232606	10	31
JG351019	9	29
JG351209	2	30
JG351400	13	3
JG401808	12A	68
JG511021	3	1
JG511022	4	1
JG511046	5	3
JG511269	7	5

PARTE No.	FIG. No.	PAG. No.
JG511270	13	5
JG531027	8	7
JG531031	9	7
JG531039	12	7
JG531040	13	7
JG531041	11	7
JG531207	7	16
JG531211	3	16
JG531212	4	16
JG531215	5	16
JG531220	2	5
JG531228	3	16
JG531229	4	16
JG541015	12	14
JG541020	29	13
JG541021	24	21
JG541041	16	14
JG541041	4	96
JG541043	7	29
JG541044	5	14
JG541045	22	13
JG541046	4	12
JG541058	18	15
JG541059	10	12
JG541063	4	14
JG541068	1	3
JG541074	17	14
JG541230	7	20
JG541231	16	20
JG551000	24	8
JG551010	27	9
JG551013	4	8
JG551015	5	20
JG551017	4	20
JG551019	12	8

PARTE No.	FIG. No.	PAG. No.
JG551020	6	8
JG551021	21	8
JG551022	11	8
JG551025	13	8
JG551027	2	8
JG551028	19	8
JG551031	27	9
JG551213	5	8
JG551214	8	8
JG551215	22	8
JG551216	14	7
JG551216	18	24
JG551220	9	8
JG551222	18	8
JG551223	20	8
JG551224	23	8
JG551225	25	8
JG551227	10	8
JG551228	16	8
JG551423	14	24
JG551427	2	23
JG551428	4	23
JG551443	8	23
JG551447	7	23
JG551449	5	23
JG551451	11	23
JG561008	12	10
JG561009	17	12
JG561010	4	10
JG561011	1	10
JG561012	7	10
JG561013	8	10
JG561016	9	10
JG561200	10	11
JG561204	15	12

PARTE No.	FIG. No.	PAG. No.
JG561205	16	12
JG561215	11	10
JG561215	11	11
JG561217	13	11
JG561218	12	11
JG561222	5	10
JG561225	10	10
JG561226	19	12
JG561232	12	11
JG571014	24	13
JG571016	25	13
JG571018	2	17
JG571024	14	14
JG581014	28	19
JG581014	8	34
JG591038	3	28
JG591039	6	28
JG591053	13	28
JG591070	10	28
JG591070	4	96
JG591088	15	28
JG591096	7	28
JG591097	8	28
JG601005	6	16
JG601012	12	16
JG601209	8	18
JG601210	2	18
JG601211	18	18
JG601221	13	18
JG601229	17	18
JG601230	29	19
JG601234	7	18
JG601235	17A	18
JG621412	5	29
JG621413	4	29

PARTE No.	FIG. No.	PAG. No.
JG621417	6	29
JL111054	4	33
JL111078	6	34
JL111081	3	34
JL111082	4	34
JL111092	7	33
JL111093	8	33
JL111102	22	54
JL111103	2	34
JL111109	18	35
JL113000	8	36
JL113002	1	36
JL113006	29	37
JL113007	2	36
JL113012	3	36
JL113013	12A	36
JL113014	14	36
JL113015	16A	37
JL113016	15	36
JL113020	26	37
JL113026	13	36
JL113027	17	37
JL113028	19	37
JL113032	27	37
JL113033	4	36
JL113033	7	48
JL113034	7	36
JL113036	25	37
JL113038	31	37
JL113201	9	40
JL113207	7	40
JL113209	15	40
JL113210	3	40
JL113212	8	40
JL113400	1	33

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JL113401	2	33
JL113800	2	66
JL113803	6	66
JL113809	23	57
JL113810	7	66
JL113811	8	66
JL113812	9	66
JL113824	21	69
JL113827	19	2
JL113829	6	34
JL113834	2	38
JL113836	15	30
JL121001	15	51
JL121005	1	51
JL121006	28	52
JL121007	27	52
JL121008	13	51
JL122001	8	35
JL122002	7	35
JL122003	10	35
JL122004	13	35
JL122006	1	35
JL122008	14	35
JL122009	9	35
JL122013	3	35
JL122026	17	35
JL131000	7	42
JL131001	13	42
JL131004	3	41
JL131004	1	42
JL131005	5	42
JL131203	13	45
JL131209	4	41
JL131209	23	45
JL131211	15	45

PARTE No.	FIG. No.	PAG. No.
JL131216	5	45
JL131218	16	45
JL131220	6	46
JL131225	7	45
JL131226	11	45
JL131228	1	96
JL131232	6	45
JL131802	12	43
JL131803	3	46
JL131804	1	44
JL131805	6	44
JL131806	2	44
JL131807	4	44
JL131811	2	38
JL131812	13	38
JL131825	5	44
JL131830	8	44
JL131831	7	44
JL131832	6	44
JL131834	1	46
JL131841	22	46
JL131877	20	46
JL131878	23	47
JL131918	8	43
JL131931	2	46
JL141000	1	96
JL151002	2	51
JL151003	3	51
JL151004	13	51
JL151012	12	51
JL151021	1	49
JL151023	18	50
JL151024	1	51
JL151026	2	49
JL151028	5	49

PARTE No.	FIG. No.	PAG. No.
JL151030	6	49
JL151032	18	51
JL151034	7	49
JL151035	9	49
JL151036	26	52
JL151037	22	52
JL151038	2A	49
JL161001	1	48
JL161003	15	49
JL161006	8	48
JL161008	16	49
JL161010	3	48
JL161013	11	49
JL161015	11	49
JL161200	2	60
JL161201	1	60
JL161206	1	60
JL161207	2	60
JL171018	20	57
JL171019	19	57
JL171020	23	57
JL171022	2	54
JL171023	1	54
JL171024	5	54
JL171024	15	55
JL171035	12	56
JL171036	11	56
JL171037	8	56
JL171038	30	57
JL171040	10	61
JL171044	1	56
JL171045	2	72
JL171046	3	72
JL171048	16	54
JL171049	4	56

PARTE No.	FIG. No.	PAG. No.
JL171057	3	54
JL171060	14	56
JL171061	9	54
JL171062	8	54
JL171063	9	56
JL171070	6	54
JL171070	13	55
JL171070	10	97
JL171071	4	54
JL171071	14	55
JL171071	10	97
JL171073	26	57
JL171078	8	55
JL171081	1	56
JL171085	24	57
JL171096	25	57
JL171099	1	54
JL171600	2	56
JL171800	13	56
JL171801	16	57
JL171802	10	56
JL171803	15	56
JL171825	1	72
JL171825	1	73
JL181005	7	72
JL181006	5	61
JL181008	1	62
JL181012	5	73
JL181017	8	53
JL181019	1	53
JL181025	9	59
JL181029	15	64
JL181203	6	62
JL181205	1	61
JL181209	16	61

PARTE No.	FIG. No.	PAG. No.
JL181209	16	67
JL181211	8	72
JL181211	8	73
JL181212	9	72
JL181212	9	73
JL181214	10	58
JL181218	11	68
JL181221	18	61
JL181221	17	67
JL181224	15	35
JL181225	16	35
JL181232	6	53
JL181233	28	62
JL181233	5	72
JL181234	27	62
JL181234	4	72
JL181235	19	51
JL181235	17	62
JL181236	14	62
JL181237	16	62
JL181241	4	59
JL181245	11	64
JL181247	5	62
JL181249	15	62
JL181253	13	61
JL181256	3	18
JL181257	23	62
JL181263	26	63
JL181264	20	69
JL181283	22	62
JL181288	5	58
JL181305	6	70
JL181305	10	72
JL181306	7	70
JL181306	11	72

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JL181307	1	70
JL181401	1	38
JL181401	6	72
JL181401	4	73
JL181402	8	38
JL181405	3	38
JL181407	6	61
JL181408	7	61
JL181409	4	61
JL181410	12	61
JL181411	10	38
JL181416	12	64
JL181417	4	64
JL181418	25	64
JL181418	6	73
JL181419	26	64
JL181419	7	73
JL181420	2	73
JL181421	3	73
JL181422	11	73
JL181423	10	73
JL181424	25	55
JL181425	26	55
JL181426	1	64
JL181427	11	59
JL181433	12	67
JL181436	19	67
JL181437	13	59
JL181439	24	55
JL181447	2	55
JL181448	3	55
JL181449	1	55
JL181450	4	55
JL181451	8	53
JL181452	1	53

PARTE No.	FIG. No.	PAG. No.
JL181453	3	64
JL181456	9	55
JL181457	10	55
JL181464	8	38
JL181465	1	38
JL181468	17	39
JL191001	1	31
JL191004	7	31
JL191008	10	74
JL191008	25	81
JL191008	12	82
JL191008	19	91
JL191008	27	94
JL191009	11	74
JL191009	26	81
JL191009	13	82
JL191009	18	91
JL191009	26	94
JL231201	3	71
JL231203	4	71
JL231404	5	71
JL231405	6	71
JL231600	23	50
JL231601	22	50
JL232604	14	32
JL232808	10	66
JL232811	8	67
JL233002	3	74
JL233002	11	76
JL233002	24	79
JL233002	2	82
JL233002	12	86
JL233002	5	87
JL233002	18	89
JL233002	22	91

PARTE No.	FIG. No.	PAG. No.
JL233002	30	94
JL233003	2	74
JL233003	2	75
JL233003	10	76
JL233003	23	79
JL233003	2	80
JL233004	1	74
JL233004	1	75
JL233004	9	76
JL233004	22	79
JL233004	1	80
JL233005	6	74
JL233005	4	75
JL233005	2	76
JL233005	5	82
JL233005	17	86
JL233005	4	87
JL233005	17	89
JL233006	7	74
JL233006	7	76
JL233006	6	82
JL233015	9	22
JL233153	5	75
JL233155	3	75
JL233239	2A	74
JL233239	2A	75
JL233239	10A	76
JL233239	23A	79
JL233239	2A	80
JL233316	10A	76
JL233316	23A	79
JL233316	2A	80
JL233316	1	82
JL233316	1	84
JL233316	1	87

PARTE No.	FIG. No.	PAG. No.
JL233316	1	88
JL351003	19	29
JL351009	10	29
JL351038	19	29
JL351200	3	30
JL351201	7	30
JL351202	8	30
JL351218	2	30
JL351219	16	30
JL351230	8	30
JL351232	7	30
JL351241	3	30
JL351246	3	30
JL351600	1	29
JL351800	7	14
JL401002	1	66
JL401002	7	67
JL401003	3	65
JL401004	4	65
JL401005	1	65
JL401006	2	65
JL401012	9	62
JL401016	17	66
JL401017	9	64
JL401400	20	50
JL401401	21	50
JL401402	10	40
JL401403	19	50
JL401405	21	50
JL401406	5	48
JL401409	20	50
JL401410	21	50
JL401411	13	49
JL401600	8	68
JL401602	8	68

PARTE No.	FIG. No.	PAG. No.
JL401801	13	68
JL401803	12	68
JL401804	22	69
JL402001	14	30
JL402007	14	30
JL402201	5	68
JL402202	6	68
JL402203	1	68
JL402208	17	69
JL402220	1A	68
JL402228	1A	68
JL402229	1	68
JL402245	1	68
JL402400	1	59
JL402403	8	59
JL402405	1	59
JL402412	1	59
JL402600	6	56
JL402602	6	56
JL403000	2	68
JL403600	14	40
JL501003	1	12
JL501040	1	12
JL501063	1	12
JL511001	2	1
JL511001	4	96
JL511002	1	1
JL511009	3	3
JL511010	2	4
JL511011	3	4
JL511016	3	25
JL511016	3	26
JL511022	6	3
JL511022	4	96
JL511029	11	3

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
JL511056	20	2
JL511058	10	2
JL511060	1	2
JL511061	3	2
JL511080	4	3
JL511112	7	3
JL511205	6	4
JL511219	7	3
JL511220	6	5
JL511221	5	5
JL511222	8	5
JL511231	6	5
JL511241	1	5
JL511249	6	4
JL511250	5	5
JL511254	7	4
JL521002	4	6
JL521002	4	96
JL521200	6	6
JL531203	3	16
JL531205	7	12
JL531205	1	16
JL541202	1	22
JL541203	7	22
JL541207	12	20
JL541207	4	96
JL541208	5	22
JL541208	4	96
JL541210	13	20
JL541218	22	21
JL541221	26	13
JL541222	18	21
JL541223	10	22
JL541227	8	20
JL541230	20	21

PARTE No.	FIG. No.	PAG. No.
JL541231	19	21
JL541237	26	13
JL541238	10A	22
JL541245	2	22
JL541246	13	20
JL561205	1A	11
JL561206	2A	11
JL561401	1	11
JL561404	2	11
JL561405	4	11
JL561407	7	11
JL561408	8	11
JL561409	14	11
JL561410	15	11
JL571001	26	13
JL581000	1	27
JL581004	14	27
JL581009	6	27
JL581010	19	27
JL581015	9	27
JL581016	8	27
JL581022	12	27
JL581024	4	27
JL581025	3	27
JL581027	4	25
JL581027	4	26
JL581050	1	27
JL581065	13	2
JL581066	9	2
JL581201	1	25
JL581203	23	21
JL581204	18	25
JL581204	18	26
JL581205	19	25
JL581205	19	26

PARTE No.	FIG. No.	PAG. No.
JL581206	20	25
JL581206	17	26
JL581217	1	26
JL581300	2	25
JL581300	2	26
JL582400	11	2
JL582402	6	2
JL591048	2	28
JL591052	1	28
JL591075	9	28
JL591086	16	28
JL591144	4	28
JL591148	17	28
JL591157	19	28
JL591165	8	28
JL591196	1	28
JL591226	2	28
JL601000	6	18
JL601005	11	16
JL601010	30	13
JL601209	21	18
JL601210	1	18
JL601212	11	18
JL601213	24	19
JL601214	25	19
JL601215	19	18
JL601216	31	19
JL601219	10	18
JL601220	9	18
JL601221	30	19
JL601225	12A	3
JL601227	24	19
JL601228	12	18
JL601231	4	18
JL601234	32	19

PARTE No.	FIG. No.	PAG. No.
JL601235	21	18
JL601237	12	3
JL601238	15	18
JN351604	16	69
JU231205	12	71
JU231207	11	71
JU531021	4	7
JU531213	7	12
JU531213	1	16
JU531215	7	12
JU531215	1	16
JU541005	13	12
JU541018	4	14
JU551401	6	20
JU551402	10	23
JU551404	1	23
JU551406	9	23
JU571000	1	17
JW171015	4	18
JW181236	3	53
JY151011	26	52
JY181255	2	70
JY181284	6	67
JY541047	4	12
JY541058	10	14
JY551402	20	29
JY601235	16	18
JZ401013	7	68
KACA0520	11	38
KACA0616	11	38
KACA0635	9	71
KACA0820	11	36
KACB0514	6	59
KACB0516	3	56
KACB0835	18	62

PARTE No.	FIG. No.	PAG. No.
KADA0510	11	28
KADA0512	14	54
KADA0512	17	55
KADA0622	11	31
KADA0630	17	27
KADA0630	17	28
KADA0630	16	55
KADB0516	13	40
KADB0516	10	54
KADC0616	7	64
KADD0510	12	66
KADD0610	11	67
KADD0612	29	57
KADD0614	10	62
KADD0635	18	2
KADE0610	18	37
KADE0614	2	58
KADE0620	11	31
KADF0608	15	67
KADF0610	13	30
KADF0612	4	70
KADF0614	18	67
KADF0616	23	19
KADF0616	13	67
KADF0630	16	2
KADF0680	5	70
KADF0820	9	38
KADM0508	4	2
KADM0610	16	27
KADP0516	27	13
KADQ0606	18	16
KADQ0620	11	5
KADQ0620	13	16
KADQ0625	14	28
KADQ0625	3	29

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
KADQ0630	14	20
KADQ0630	6	22
KADQ0645	8	22
KAEA0608	6	48
KAEG0620	13	64
KAEM0622	7	27
KAEQ0616	27	13
KAEQ0620	10	3
KAEQ0620	11	5
KAEQ0630	14	20
KAEQ0630	6	22
KAEQ0640	20	15
KAEQ0645	8	22
KAET0610	18	37
KBBA0408	12	42
KBBA0512	4	38
KBBA0512	24	47
KBBA0514	3	66
KBBG0612	19	15
KBQA3506	15	27
KBUA0612	4	53
KBUA0612	6	58
KBUA0620	3	70
KBUB0410	8	61
KBUB0512	2	53
KBUB0516	13	54
KBUC0514	20	67
KBUC0516	12	62
KCAA0504	3	59
KCGA0505	7	56
KCGA1010	7	65
KCGD0505	13	66
KCGD0606	5	66
KCGD1010	8	65
KCGF0606	17	2

PARTE No.	FIG. No.	PAG. No.
KDAA0408	6	55
KDAA0510	16	39
KDAA0510	10	59
KDAA1018	13	71
KDBA0512	12	55
KDBA0512	6	64
KDBA0613	8	64
KDBA0818	3	49
KDBB0512	18	55
KDBE0613	8	71
Kddb0408	11	42
KEAA1110	3	17
KEAB1010	3	17
KEBA3715	9	14
KIT-472930/00	4	74
KIT-472930/00	12	76
KIT-472930/00	20	78
KIT-472930/00	3	82
KJAC1824	8	3
KPBC6202	3	42
KPBC6202	3	45
KPBC6302	4	45
LAA00019	10	45
LAC00008	14	61
LAC00016	30	37
LAC00017	7	71
LAC00019	2	35
LAC00020	4	49
LAC00022	12	54
LAC00022	22	55
LAC00024	6	10
LAC00029	10	71
LAC00034	20	54
LAC00034	20	55
LAC00034	10	97

PARTE No.	FIG. No.	PAG. No.
LAC00035	8	58
LAC00036	11	61
LAC00037	9	61
LAC00046	30	37
LAC00054	6A	59
LAC00054	15	61
LAC00063	7	54
LAC00063	19	55
LAC00086	10	16
LAD00037	13	43
LAD00040	26	19
LAD00040	9	34
LAD00055	14	29
LAD00077	2	2
LAD00077	5	12
LAD00081	21	15
LAD00120	21	64
LAD00129	5	1
LAD00135	6	40
LAE00010	18	29
LAE00014	2	14
LAE00016	8	4
LAE00016	15	29
LAE00017	1	8
LAE00018	4	17
LAE00041	14	18
LBB00004	2	27
LBB00006	12	12
LBB00007	21	13
LBR00002	7	55
LBR00002	8	62
LBR00002	5	64
LBS00001	4	62
LBU00009	5	67
LBU00023	11	55

PARTE No.	FIG. No.	PAG. No.
LBU00030	2	64
LCA00009	12	45
LCD00001	10	7
LCG00006	17	3
LCG00008	9	67
LCJ00002	15	42
LCJ00002	19	45
LDA00007	13	58
LDA00007	7	62
LDA00008	2	3
LDA00013	10	36
LDB00007	7	59
LDB00010	13	29
LDB00018	15	46
LDB00020	3	20
LDB00023	18	27
LDB00023	21	55
LDB00023	3	58
LDB00023	14	67
LDB00029	14	42
LDB00029	18	45
LDB00051	9	16
LDC00001	14	71
LDH00002	12	7
LEB00001	4	5
LEB00001	28	13
LEB00001	16	16
LG001-TT	27	81
LJA00004	23	15
LJA00005	13	18
MF12V9-1A-GEL	15	68
MTX9-BS-GEL-MEGA	15	68
MTX9-BS-MEGA	15	68
PA181292	25	62
PA181293	24	62

PARTE No.	FIG. No.	PAG. No.
PA581038	5	2
PN0001-NT	1	90
PN0001-NT	1	95
PN0007-NT	1	76
PN0007-NT	1	77
PN0007-NT	28	81
PN0007-NT	17	87
PN0019-NT	2	90
PN0019-NT	2	95
PN100.096-BL	8	76
PN100.096-OR	8	76
PN100.096-RD	8	76
PN101.046-BL	1	77
PN101.046-GR	1	77
PN101.046-OR	1	77
PN101.046-RD	1	77
YJL02003	14	59
YJL02004	15	59
YJL02006	29	62
YJL06001	24	64
YJL06002	23	64
YJL06003	22	64

FICHA TÉCNICA PULSAR NS200 / AS200 / NS200 BSIV

CARACTERÍSTICAS	UNIDAD
Motor :	4T, monocilíndrico, enfriada por líquido.
Diámetro x Carrera :	72.00mm x 49.00mm
Índice de compresión :	11:1
Potencia máxima :	23.2 HP @ 9.500 rpm
Torque máximo :	18.3 Nm @ 8.000rpm
Sistema de ignición :	CDI digital con microprocesador y TPS (NS200 - AS200) CDI digital con microprocesador (NS200 BS-IV)
Bujías :	Izq.-Der.:PRG6HCC Central: BOSCH YR5NE
Tolerancia de las bujías :	0.7 a 0.8 mm
Lubricación :	Bomba húmeda de aceite, forzada.
Arranque :	Eléctrico.
Transmisión :	Mecánica 6 velocidades.
FRENOS	
Freno delantero :	Freno de Disco hidráulico.
Freno trasero :	Freno de Disco hidráulico.
CAPACIDAD DEL TANQUE	
Lleno :	12 litros
Combustible :	Corriente (NS200 - AS200) Extra (NS200 BS-IV)
Reserva :	2.4 litros
Reserva utilizable :	2.2 litros
LLANTAS	
Llantas Delantera :	100/80 x 17 TUBELESS
Presión de aire Delantera :	25 PSI
Llanta Trasera :	130/70 x 17 TUBELESS
Presión de aire Trasera (solo) :	28 PSI
Presión Trasera (Con Parrillero) :	32 PSI
SISTEMA ELECTRICO	
Bombillo Farola :	55/60 W
Luz de Stop :	LED
Luces direccionales :	10 W
Indicadores del tablero :	LED
Velocímetro :	Display digital
Pito :	12 V
Batería :	12V - 8 Ah
DIMENSIONES	
Largo x Ancho x Alto :	2017 mm x 804 mm x 1195 mm (NS200) 2070 mm x 804 mm x 1205 mm (AS200) 2017 mm x 804 mm x 1075 mm (NS200 BS-IV)
Distancia entre ejes :	1363 mm
Altura al piso :	167 mm (NS200 - AS200) 169 mm (NS200 BS-IV)
Peso en Seco :	145 Kg (NS200) 153 Kg (AS200) 154 Kg (NS200 BS-IV)



pulsar

NS200 - AS200



Identifica los repuestos BAJAJ comercializados con el respaldo de AUTECO


1.



**TOCAR ✓
Y SENTIR**

Al tocar el holograma dorado no debe sentir diferencia de altura con la etiqueta de papel.

2.

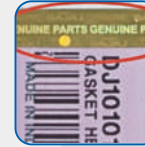

**EFFECTO ✓
DE CAMBIO**

Si giras la etiqueta dorada 90° a la derecha deben verse las palabras GENUINE PARTS y BAJAJ.

3.



**TEXTO ✓
OCULTO**

Cuando la etiqueta dorada es raspada, aparecerá la palabra "genuine"

4.



**IDENTIFICA ✓
EL COLOR
DE LA ETIQUETA**

Las etiquetas de los repuestos importados con el respaldo de AUTECO son color ROSADO.

¡RUEDA
TRANQUILO Y SEGURO!



**COMPRA REPUESTOS
ORIGINALES BAJAJ-AUTECO**
¡A un súper precio!

