



CATÁLOGO DE PARTES



CERONTE 200



SISTEMA DE ENCENDIDO AUTOMÁTICO DE LUZES
Para mayor seguridad al conducir, el sistema de encendido automático de luces se activa cuando el vehículo se pone en marcha.



SISTEMA ANTIBLOQUEO DE FRENOS NO INCLUIDO



LUZES DE CIRCULACIÓN DIURNA NO INCLUIDO

Para mayor información, consulte el manual de usuario o contacte con el servicio al cliente.

Mobil Super
4T Ultra



www.autecomobility.com | contactanos@autecomobility.com
Línea gratuita nacional 018000 413 812



ANEXO INFORMACIÓN DE SEGURIDAD

Verifique la carátula de este manual para conocer cuál de los siguientes dispositivos de seguridad posee su vehículo.



SISTEMA ANTIBLOQUEO DE FRENOS

Sistema diseñado para evitar que las ruedas se bloqueen al frenar de forma brusca mientras se circula en línea recta, el sistema regula automáticamente la fuerza de frenado.

Aunque el sistema ABS proporciona estabilidad al detenerse, recuerde las siguientes características:

- * Para frenar de forma eficaz, deje de acelerar y utilice la leva de freno delantero y el pedal de freno trasero simultáneamente, de la misma manera que en el sistema de frenos de una motocicleta convencional
- * El ABS no puede compensar las condiciones adversas de la carretera, un error de juicio o un uso incorrecto de los frenos.



SISTEMA DE ENCENDIDO AUTOMÁTICO DE LUCES (AHO)

Sistema diseñado para que una vez se ponga el motor en marcha, la luz principal de la farola se encienda automáticamente.

Este sistema garantiza una mayor visibilidad del vehículo para los demás actores viales.



SISTEMA DE LUCES DE CIRCULACIÓN DIURNA (DRL)

Sistema de iluminación LED, el cual se enciende automáticamente al girar el interruptor de encendido a "ON".

Mientras la farola principal esté apagada, la luz LED alumbrará intensamente, si se enciende la farola principal, la luz LED se atenuará automáticamente.

No se recomienda dejar el interruptor de encendido en "ON" mientras el motor no esté en funcionamiento porque la batería se drenará prematuramente.

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página web: www.autecomobility.com accediendo al link repuestos. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco Mobility.

REVISADO NOVIEMBRE 2024

Advierta lo que le dicen las llantas mientras conduce:

- Si su respuesta a la dirección es lenta o si en las curvas y en el frenado la respuesta es pesada, es muy probable que sus llantas estén desinfladas.
- Vibración o tambaleo durante la conducción, puede significar que la presión en las llantas es mayor a la recomendada, o que ha ocurrido un daño en la llanta y la falla es inminente.
- La llanta puede vibrar a ciertas velocidades debido al desbalanceo, en este caso su desgaste será muy acelerado.

**RECUERDE SIEMPRE REVISAR LA PRESIÓN DE AIRE EN SUS LLANTAS
ANTES DE COMENZAR A RODAR**



**¡POR DESEMPEÑO,
CALIDAD Y PRECIO!**
ELIGE LLANTAS QUEEN

SCOOTER

MOTOCARRO

STREET

DOBLE
PROPÓSITO

PISTERA



Encuétralos en todos los agentes y concesionarios autorizados por AUTECO del país



MEGA**BAT**
BATTERIES



EL **EQUIPO ORIGINAL**
DE LAS MOTOCICLETAS


auteco
mobility













*Una garantía de respaldo,
calidad y experiencia.*







INDICE

FIG. Nº	DESCRIPCIÓN	PAG. Nº
FIG. Nº 1	CULATA	1
FIG. Nº 2	EJE LEVAS	2
FIG. Nº 3	CUBIERTA CLUTCH - CUBIERTA VOLANTE	3-4
FIG. Nº 4	CLUTCH	5
FIG. Nº 5	FILTRO ACEITE - FILTRO CENTRIFUGO ACEITE	6
FIG. Nº 6	CARCASAS MOTOR	7-8
FIG. Nº 7	CIGÜEÑAL - PISTÓN	9
FIG. Nº 8	TRANSMISIÓN	10-11
FIG. Nº 9	EJE SELECTOR CAMBIOS	12
FIG. Nº 10	VOLANTE - PLATO BOBINAS	13
FIG. Nº 11	MOTOR ARRANQUE	14
FIG. Nº 12	SISTEMA CIIRCULACION GASES	15
FIG. Nº 13	PEDAL CAMBIOS - PEDAL CRANK	16
FIG. Nº 14	CARBURADOR	17
FIG. Nº 15	CAJA FILTRO AIRE	18
FIG. Nº 16	SILENCIADOR	19
FIG. Nº 17	SOPORTES MOTOR	20
FIG. Nº 18	LLANTAS - RINES	21
FIG. Nº 19	FRENO DELANTERO	22
FIG. Nº 20	STOP	23
FIG. Nº 21	GUARDABARRO DELANTERO - GUARDABARRO TRASERO	24
FIG. Nº 22	INSTALACIÓN ELECTRICA	25
FIG. Nº 23	SUSPENSIÓN DELANTERA	26
FIG. Nº 24	FAROLA - DIRECCIONALES DELANTERAS	27
FIG. Nº 25	VELOCÍMETRO - SWICHE ENCENDIDO	28
FIG. Nº 26	PEDAL FRENO - VARILLA FRENO TRASERA	29
FIG. Nº 27	CAUCHO REPOSAPIE	30
FIG. Nº 28	SILLÍN	31
FIG. Nº 29	TANQUE COMBUSTIBLE	32
FIG. Nº 30	MANUBRIO	33
FIG. Nº 31	CABLES	34
FIG. Nº 32	PALANCA REVERSA	35

FIG. Nº	DESCRIPCIÓN	PAG. Nº
FIG. Nº 33	PALANCA CONTROL TRACCIÓN	36
FIG. Nº 34	TAPAS LATERALES	37
FIG. Nº 35	CHASIS	38
FIG. Nº 36	CARROCERÍA	39
FIG. Nº 37	COMPLEMENTOS CARROCERÍA	40
FIG. Nº 38	SUSPENSIÓN TRASERA	41
FIG. Nº 39	CAJA HERRAMIENTAS - HERRAMIENTAS	42
FIG. Nº 40	CARDAN	43
FIG. Nº 41	EJE TRANSMISIÓN	44
FIG. Nº 42	VENTILADOR	45
FIG. Nº 38	RADIADOR	46
FIG. Nº 39	BATERÍA	47
FIG. Nº 40	COMPLEMENTOS FRENO TRASERO	48-51
FIG. Nº 41	CAJA REVERSA	52-53
FIG. Nº 42	CALCOMANÍAS	54

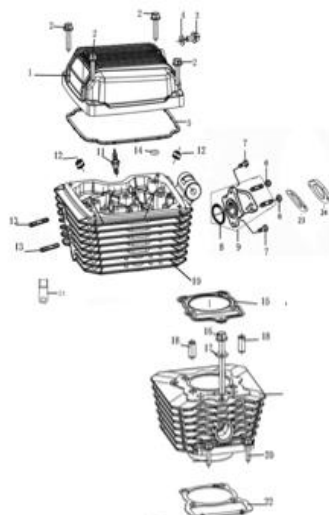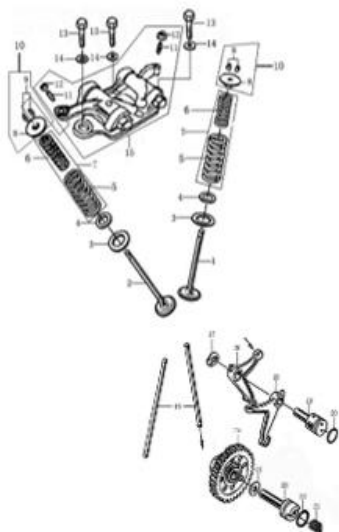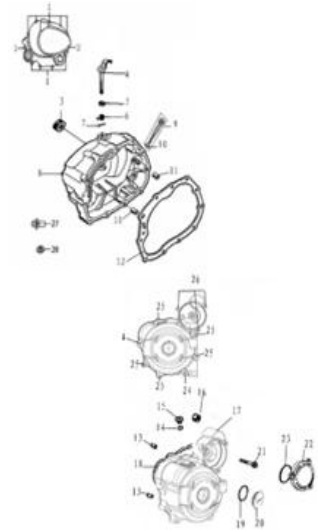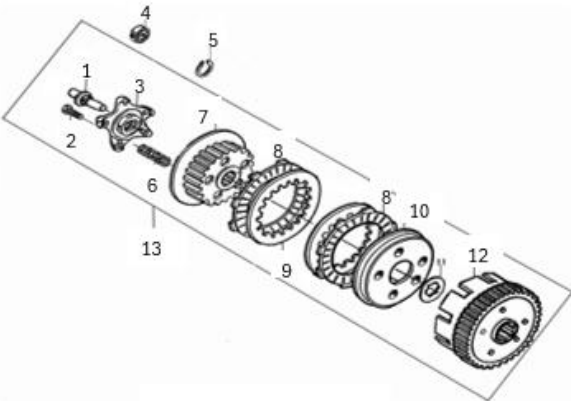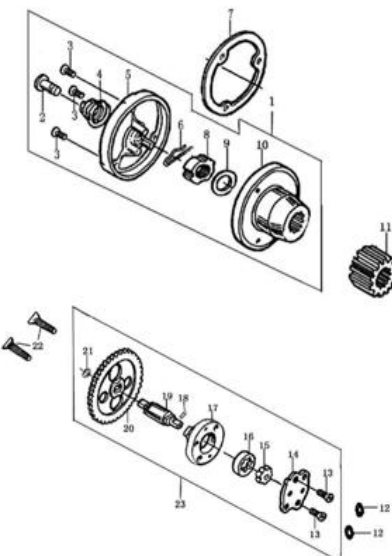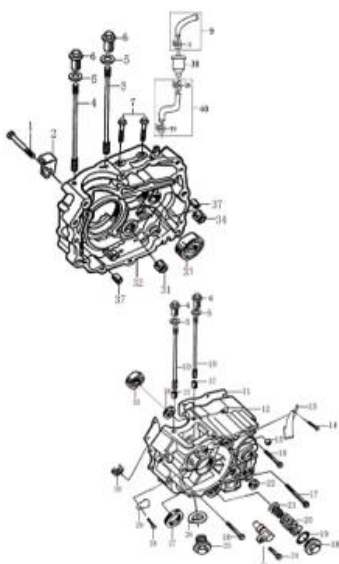								
FIG. Nº 1 CULATA		PAG. Nº 1	FIG. Nº 2 EJE LEVAS		PAG. Nº 2	FIG. Nº 3 CUBIERTA CLUTCH - CUBIERTA VOLANTE		PAG. Nº 3-4
								
FIG. Nº 4 CLUTCH		PAG. Nº 5	FIG. Nº 5 FILTRO ACEITE - FILTRO CENTRIFUGO ACEITE		PAG. Nº 6	FIG. Nº 6 CARCASAS MOTOR		PAG. Nº 7-8

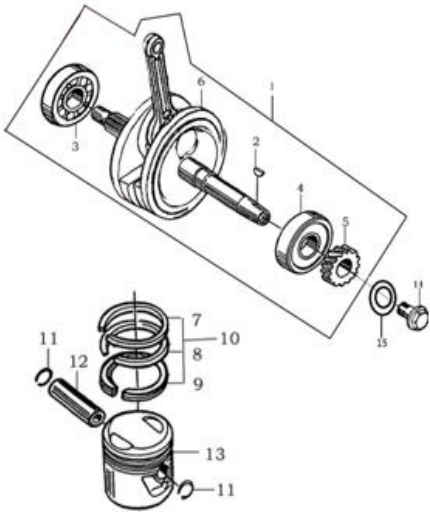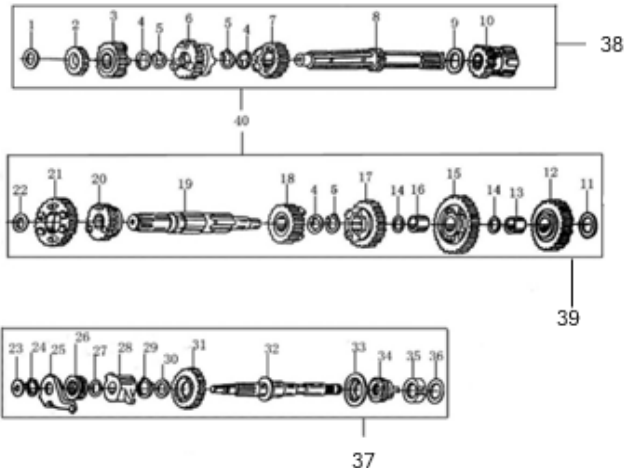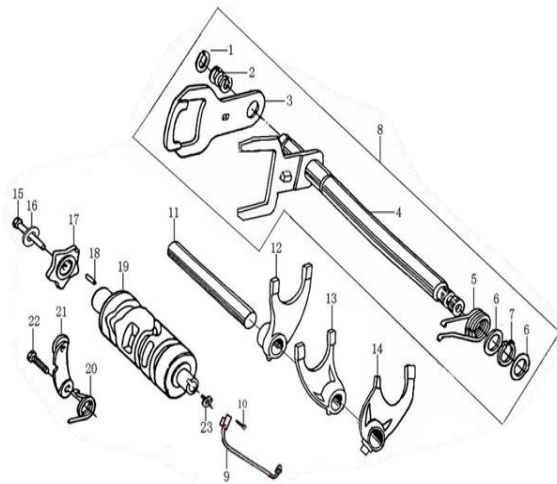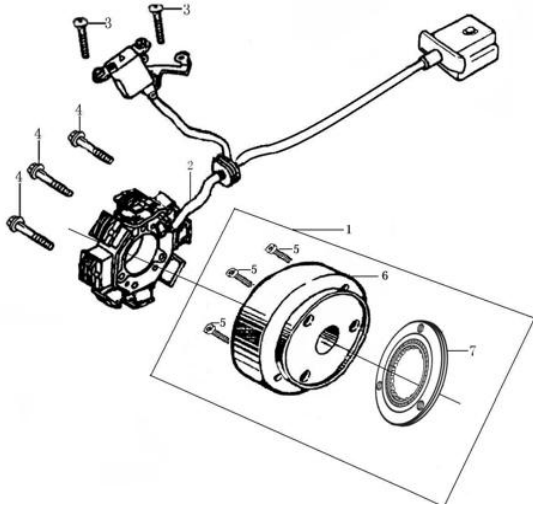						
FIG. Nº 7 CIGÜEÑAL - PISTÓN	PAG. Nº 9	FIG. Nº 8 TRANSMISIÓN	PAG. Nº 10-11	FIG. Nº 9 EJE SELECTOR CAMBIOS	PAG. Nº 12	
	PAG. Nº 13					

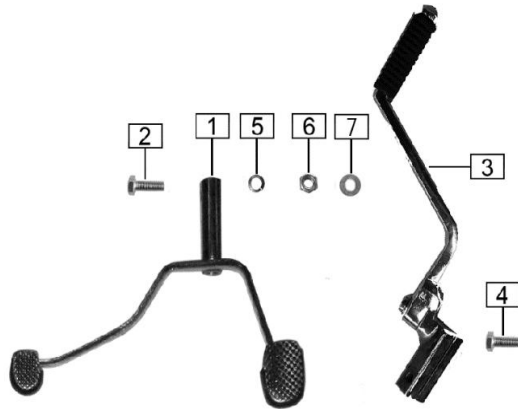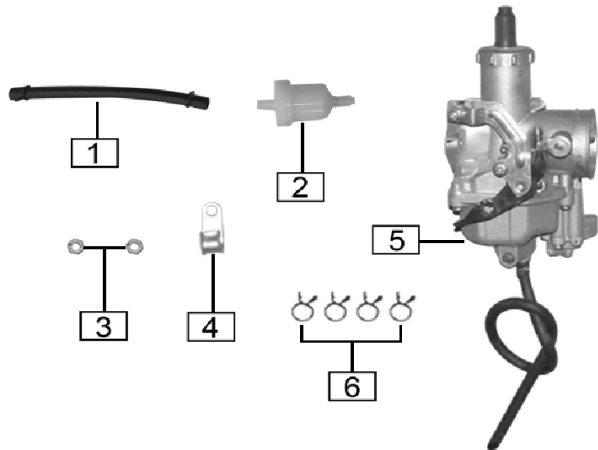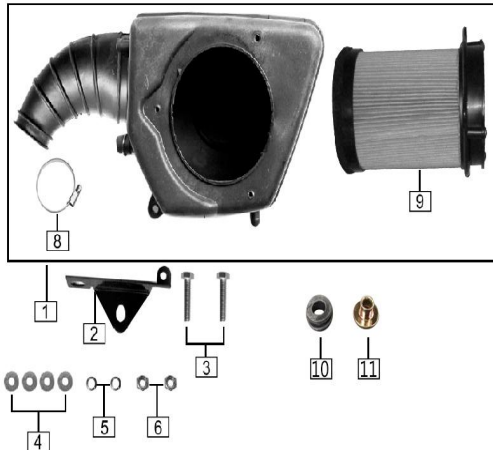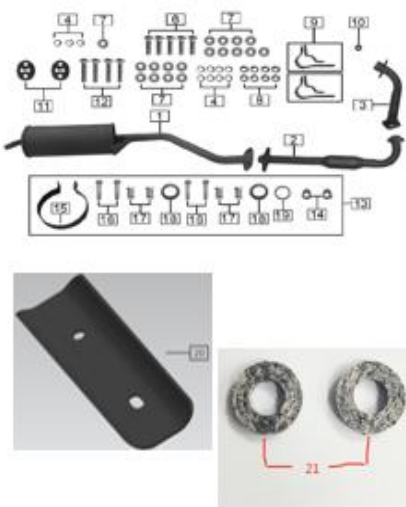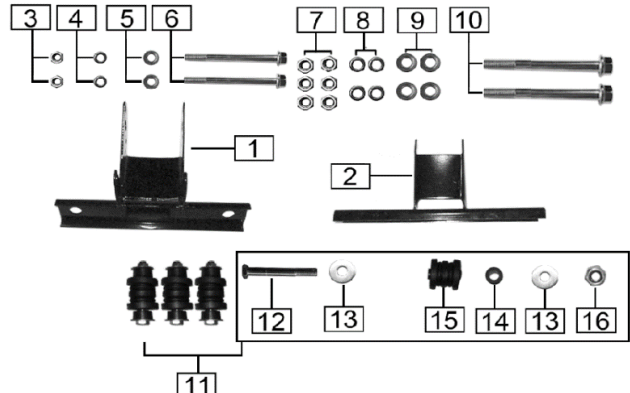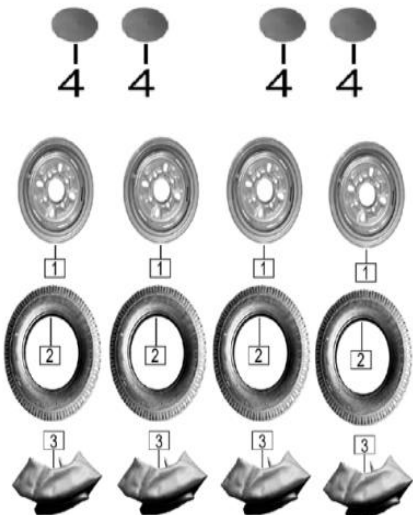					
FIG. Nº 13 PEDAL CAMBIOS - PEDAL CRANK	PAG. Nº 16	FIG. Nº 14 CARBURADOR	PAG. Nº 17	FIG. Nº 15 CAJA FILTRO AIRE	PAG. Nº 18
					
FIG. Nº 16 SILENCIADOR	PAG. Nº 19	FIG. Nº 17 SOPORTES MOTOR	PAG. Nº 20	FIG. Nº 18 LLANTAS - RINES	PAG. Nº 21

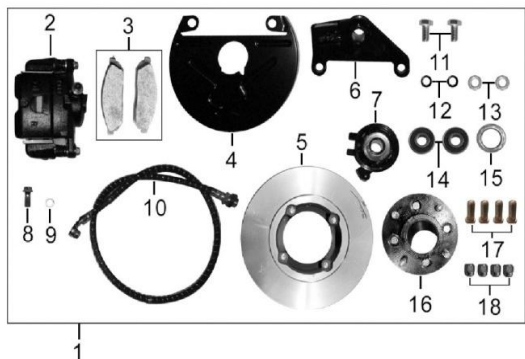


FIG. Nº 19 FRENO DELANTERO

PAG. Nº 22

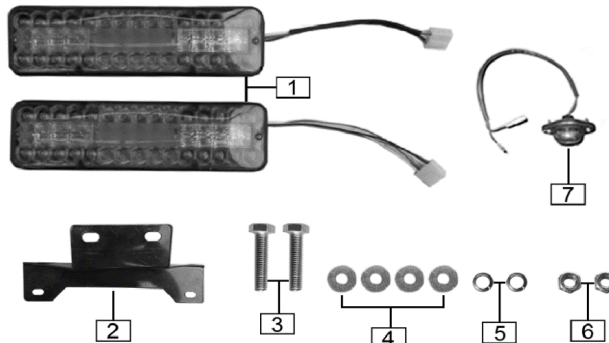


FIG. Nº 20 STOP

PAG. Nº 23

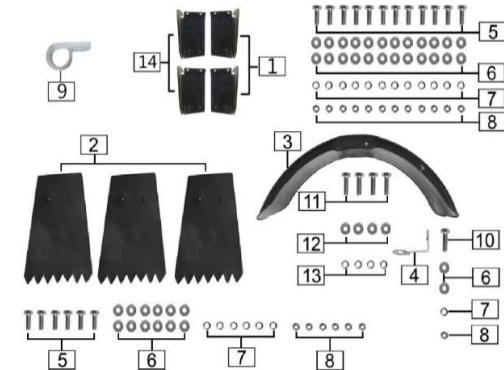


FIG. Nº 21 GUARDABARRO DELANTERO -
GUARDABARRO TRASERO

PAG. Nº 24

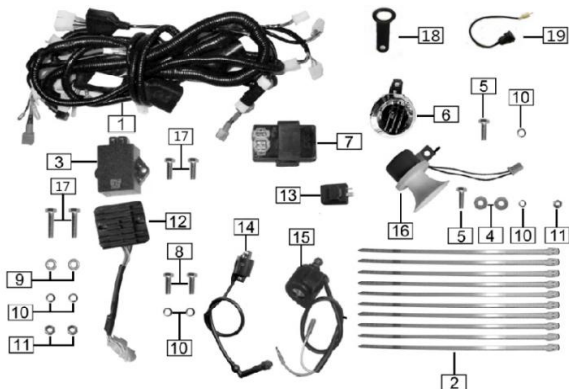


FIG. Nº 22 INSTALACIÓN ELECTRICA

PAG. Nº 25

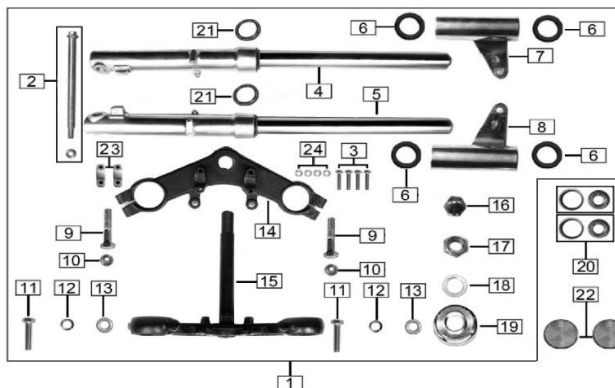


FIG. Nº 23 SUSPENSIÓN DELANTERA

PAG. Nº 26

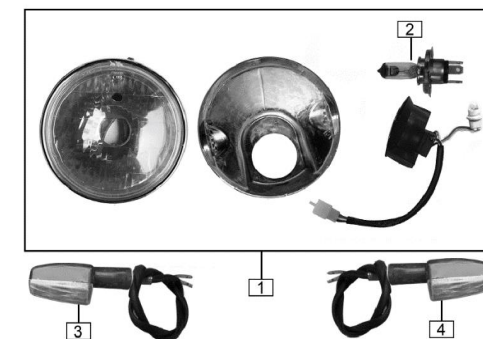
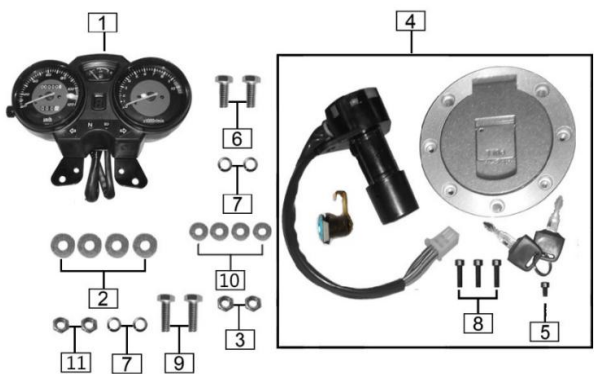
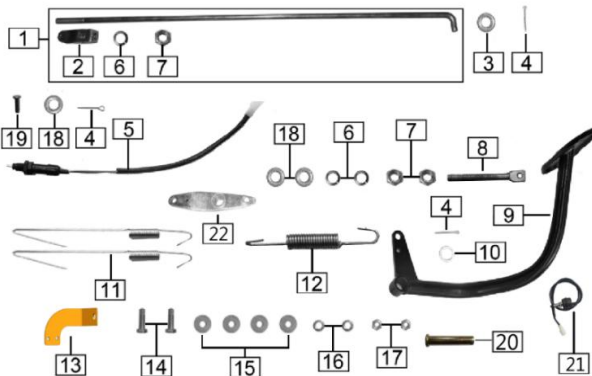
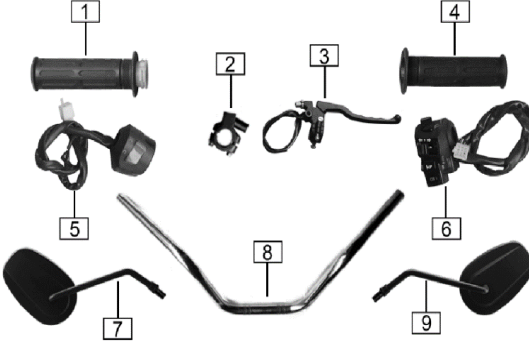
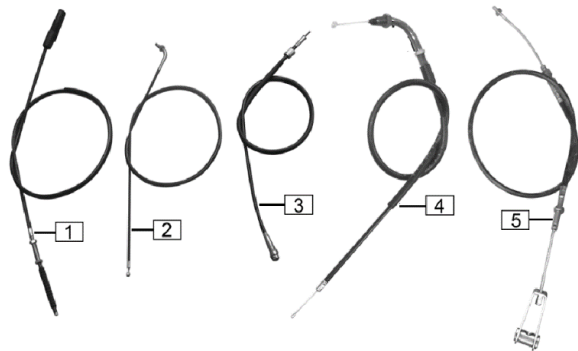
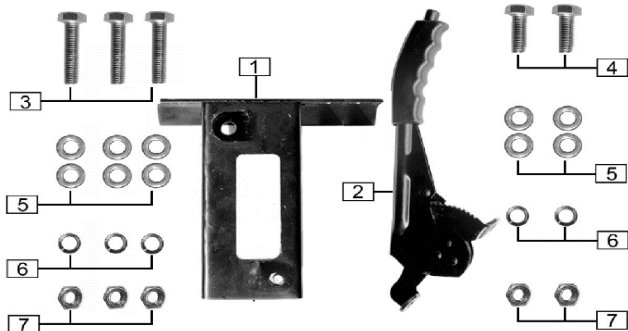
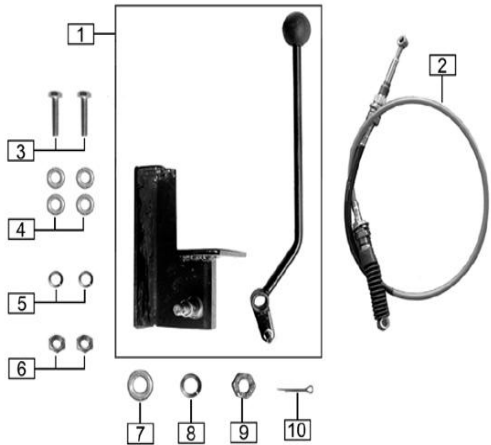
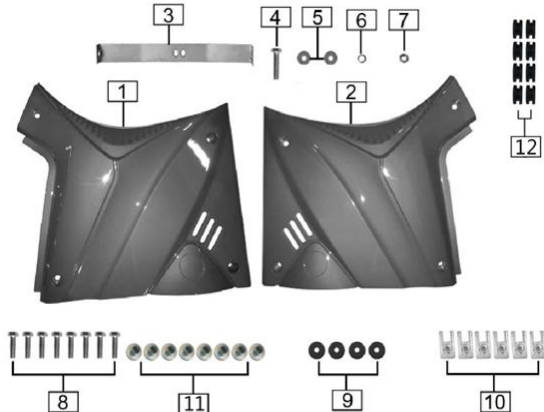
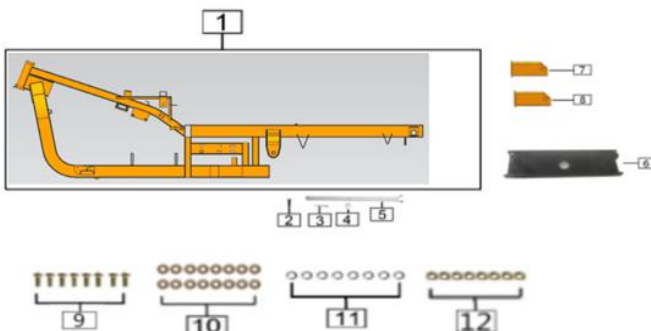
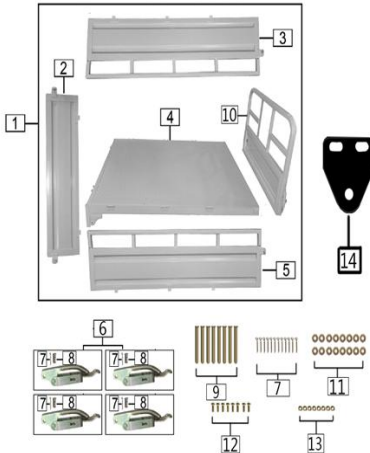
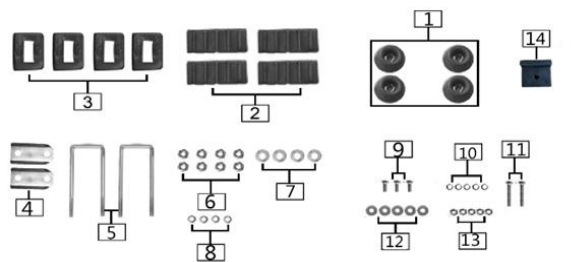
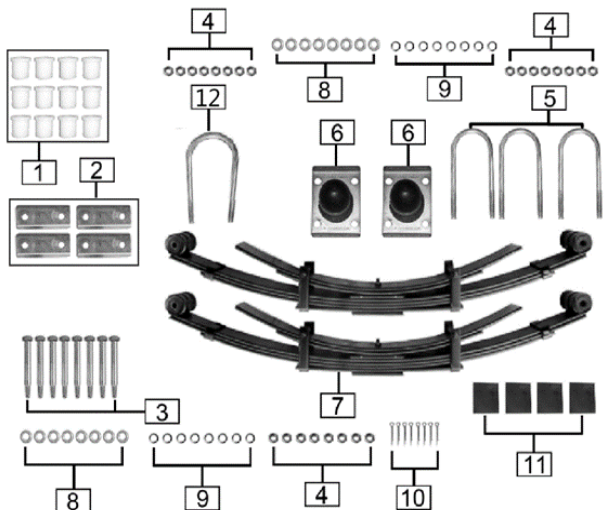
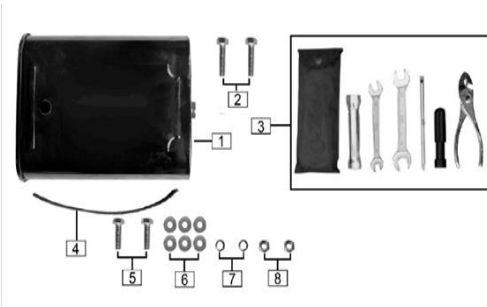
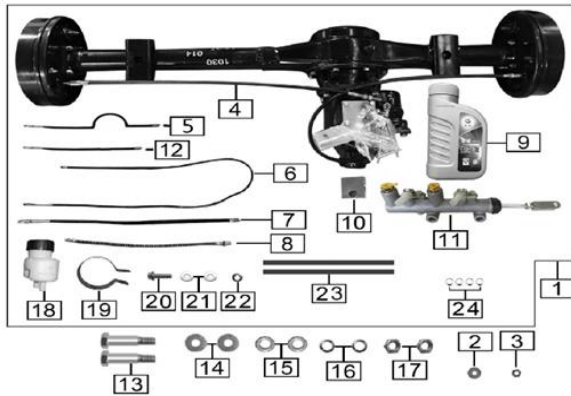
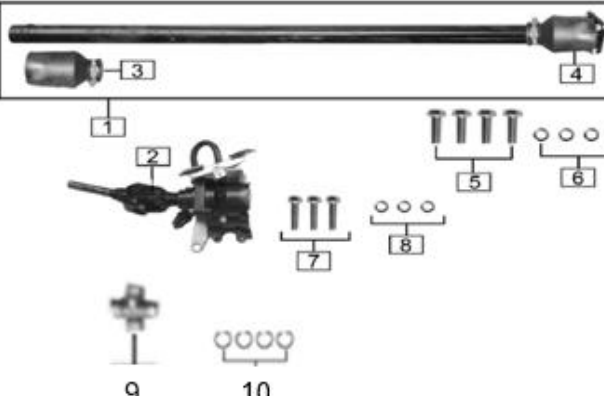
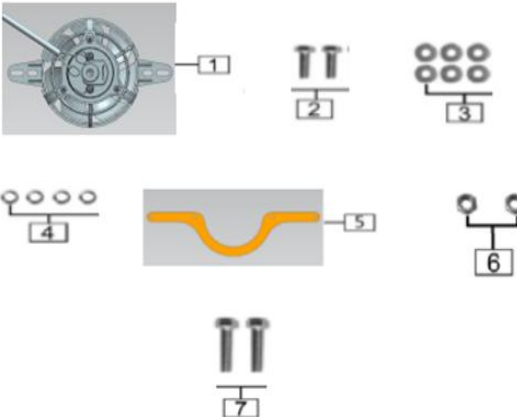


FIG. Nº 24 FAROLA - DIRECCIONALES
DELANTERAS

PAG. Nº 27

						
FIG. Nº 25 VELOCÍMETRO - SWICHE ENCENDIDO		PAG. Nº 28	FIG. Nº 26 PEDAL FRENO - VARILLA FRENO TRASERA		PAG. Nº 29	
						
FIG. Nº 27 CAUCHO REPOSAPIE		FIG. Nº 28 SILLÍN		FIG. Nº 29 TANQUE COMBUSTIBLE		
PAG. Nº 30		PAG. Nº 31		PAG. Nº 32		
FIG. Nº 30 MANUBRIO		FIG. Nº 31 SILLÍN		FIG. Nº 32 TANQUE COMBUSTIBLE		
PAG. Nº 33		PAG. Nº 34		PAG. Nº 35		

			
FIG. Nº 31 CABLES	PAG. Nº 34	PAG. Nº 35	FIG. Nº 33 PALANCA CONTROL TRACCIÓN
			
FIG. Nº 34 TAPAS LATERALES	PAG. Nº 37	PAG. Nº 38	FIG. Nº 36 CARROCERÍA
			PAG. Nº 39

					
FIG. Nº 37 COMPLEMENTOS CARROCERÍA	PAG. Nº 40	FIG. Nº 38 SUSPENSIÓN TRASERA	PAG. Nº 41	FIG. Nº 39 CAJA HERRAMIENTAS - HERRAMIENTAS	PAG. Nº 42
					
FIG. Nº 40 CARDAN	PAG. Nº 43	FIG. Nº 41 EJE TRANSMISIÓN	PAG. Nº 44	FIG. Nº 42 VENTILADOR	PAG. Nº 45

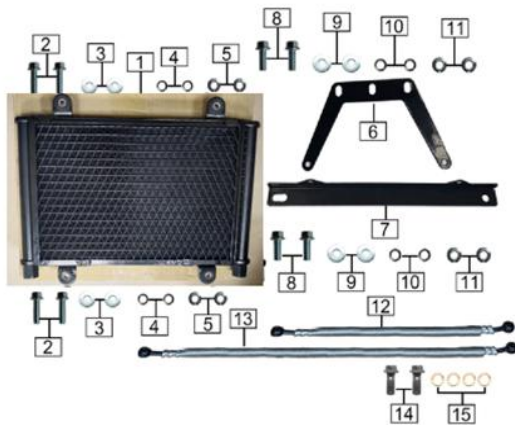
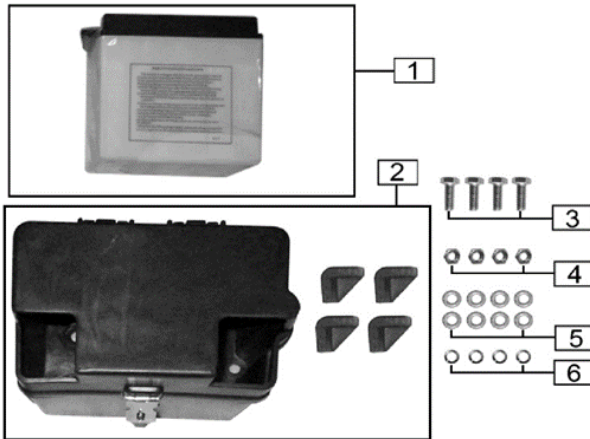
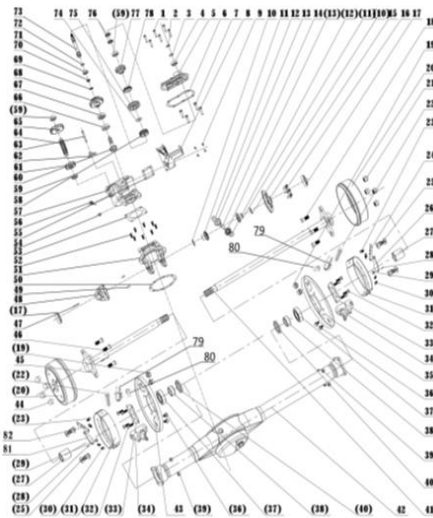
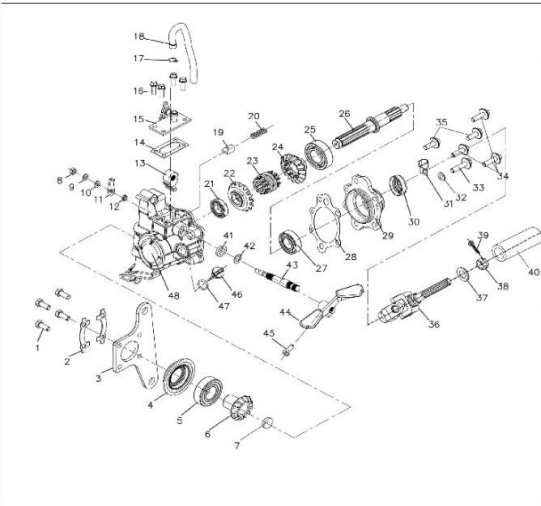
					
FIG. Nº 43 RADIADOR	PAG. Nº 46	FIG. Nº 44 BATERÍA	PAG. Nº 47	FIG. Nº 45 COMPLEMENTOS FRENO TRASERO	PAG. Nº 48-51
					
FIG. Nº 46 CAJA REVERSA	PAG. Nº 52-53	FIG. Nº 46 CALCOMANÍAS	PAG. Nº 54		

FIGURA N°1 CULATA

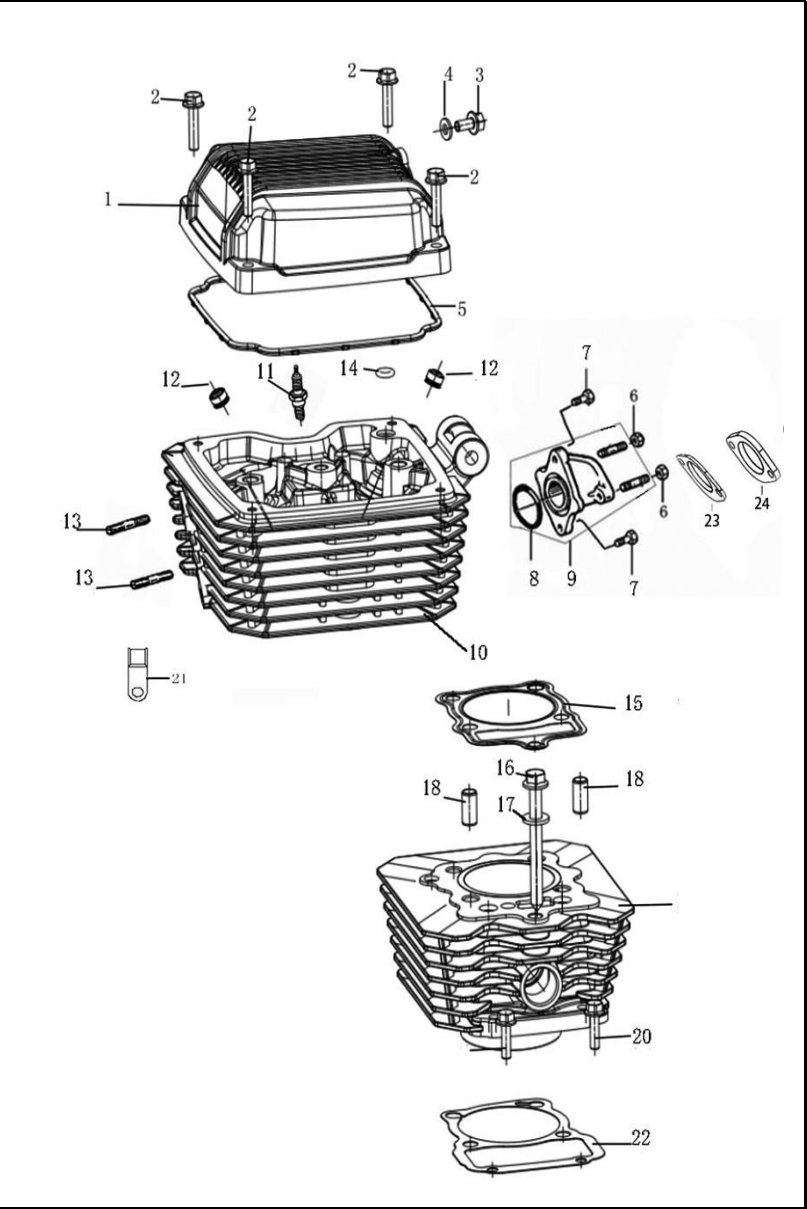


FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
1	100102855-0017	TAPA CULATA	1	11047797
2	100011269-0003	TORNILLO 6X28	4	11047744
3	100011261-0004	TORNILLO 6X12	1	11042029
4	100106538	ARANDELA 6 MM	1	11042149
5	100104525	EMPAQUE TAPA CULATA	1	11041616
6	100011421-0003	TUERCA M6	2	11047745
7	100055588-0006	TORNILLO 6X20	2	11042225
8	100107759	ANILLO RETÉNEDOR 33.5X3	1	11047878
9	100711156	MULTIPLE ADMISIÓN	1	11047906
10	100140997-0002	CULATA	1	11047885
11	100104140	BUJÍA	1	11041608
11A	DR8EA	BUJIA NGK DR8EA	1	21007476
12	100105336	RETÉN VALVULA	2	11041594
13	100100440-0001	ESPARRAGO 10X40	2	11047777
14	100107796	ANILLO RETENEDOR 6.4X3	1	11047880
15	100208882	EMPAQUE CULATA	1	11041617
16	100100338-0005	TORNILLO 8X78	1	11047774
17	100106576	ARANDELA 8.5X2X18	1	11047874
18	100031687	PIN GUÍA 10X20	2	11047748
19	100140416-0002	CILINDRO (SOLO)	1	11047884
20	100011267-0003	TORNILLO 6X22	2	11047743
21	100204385-0005	PLATINA GUÍA CABLE	1	
22	100108519	EMPAQUE CILINDRO	1	11041618
23	100201145	EMPAQUE MULTIPLE ADMISIÓN	1	22000905
24	100208769	BAQUELA CARBURADOR	1	11047901

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or actuator. The components are numbered 1 through 25. The main assembly consists of a base plate (10) with a central housing (15) and two side plates (9). The housing (15) contains internal components including a piston rod (1), a piston (2), a connecting rod (3), a crankshaft (4), a flywheel (5), and a spring (6). The side plates (9) are secured by screws (13) and washers (14). The base plate (10) is secured by screws (13) and washers (14). The assembly is shown in an exploded view, with the main assembly on the left and the side plates (9) on the right. The exploded view shows the relationship between the components, with the main assembly on the left and the side plates (9) on the right. The exploded view shows the relationship between the components, with the main assembly on the left and the side plates (9) on the right.

2

This diagram illustrates the assembly of a mechanical component, possibly a pump or motor housing, through several stages. The components are numbered as follows:

- Top Left:** A cross-sectional view of a housing with internal features labeled 1 and 2.
- Center:** The main housing assembly (8) is shown with various fasteners and components:
 - 3: A circular cap or plug.
 - 4: A lever or actuator arm.
 - 5: A small pin or screw.
 - 6: A small bush or spacer.
 - 7: A small pin or screw.
 - 9: A long, thin rod or pin.
 - 10: A small rectangular plate or gasket.
 - 11: A small pin or screw.
 - 12: A large, irregular gasket or seal.
 - 27: A bolt or screw.
 - 28: A washer or spacer.
- Bottom:** The assembly is shown in a more complete state with additional components:
 - 13: Two small pins or screws.
 - 14: A small pin or screw.
 - 15: A small pin or screw.
 - 16: A small pin or screw.
 - 17: A small pin or screw.
 - 18: A small pin or screw.
 - 19: A small pin or screw.
 - 20: A small pin or screw.
 - 21: A small pin or screw.
 - 22: A small pin or screw.
 - 23: A small pin or screw.
 - 24: A small pin or screw.
 - 25: A small pin or screw.
 - 26: A small pin or screw.

3

FIGURA N°5 FILTRO ACEITE - FILTRO CENTRIFUGO ACEITE

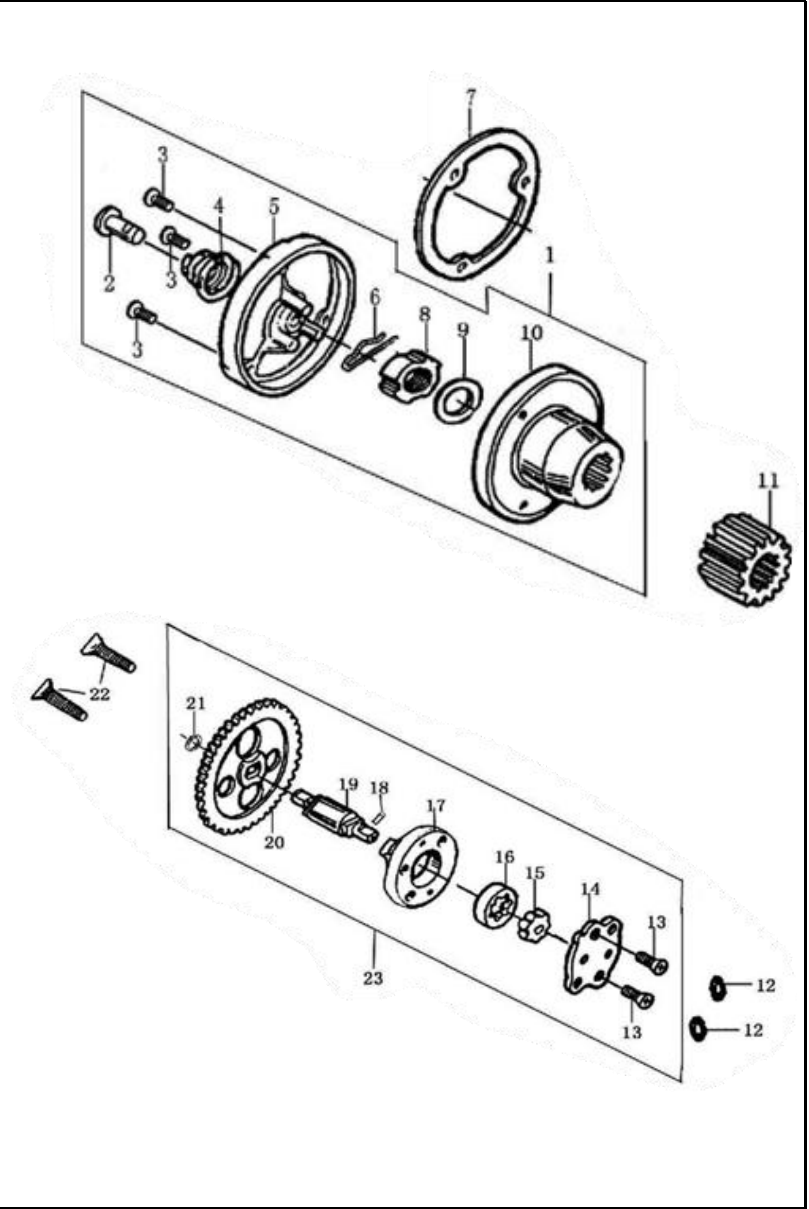


FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
1	100065230	FILTRO CENTRIFUGO ACEITE	1	
2	100066392	CONDUCTO FILTRO CENTRIFUGO ACEITE	1	
3	100010978-0001	TORNILLO 5X12	3	11042209
4	100104844	RESORTE FILTRO CENTRIFUGO ACEITE	1	11042126
5	100200027	CUBIERTA FILTRO CENTRIFUGO ACEITE	1	11047908
6	100104850	PIN SEGURIDAD	1	11042128
7	100104599	EMPAQUE FILTRO ACEITE	1	11041621
8	100100523	TUERCA	1	11047780
9	100103345	ARANDELA 16.5X2X27	1	11047807
10	100200024	CAMPANA FILTRO CENTRIFUGO ACEITE	1	11047907
11	100103486	PIÑON PRIMARIO	1	11047808
12	100107842	ANILLO RETÉNEDOR 9.4X2.4	2	11047882
13	100010946-0003	TORNILLO 4X10	2	11047737
14	100100166	ACOPLE CUERPO BOMBA ACEITE	1	11047766
15	100100195	ROTOR INTERNO BOMBA ACEITE	1	11047769
16	100100206	ROTOR EXTERNO BOMBA ACEITE	1	11047770
17	100100187	CUERPO BOMBA ACEITE	1	11047768
18	100032890	PIN PASADOR 2.5X10	1	11042037
19	100100156	EJE BOMBA ACEITE	1	11047765
20	100100176	PIÑÓN BOMBA ACEITE	1	11047767
21	100011111	PIN SEGURIDAD	1	11042035
22	100123472-0002	TORNILLO 6X32	2	11047883
23	100100071	BOMBA ACEITE	1	11047764

FIGURA N°6 CARCASAS MOTOR (1/2)

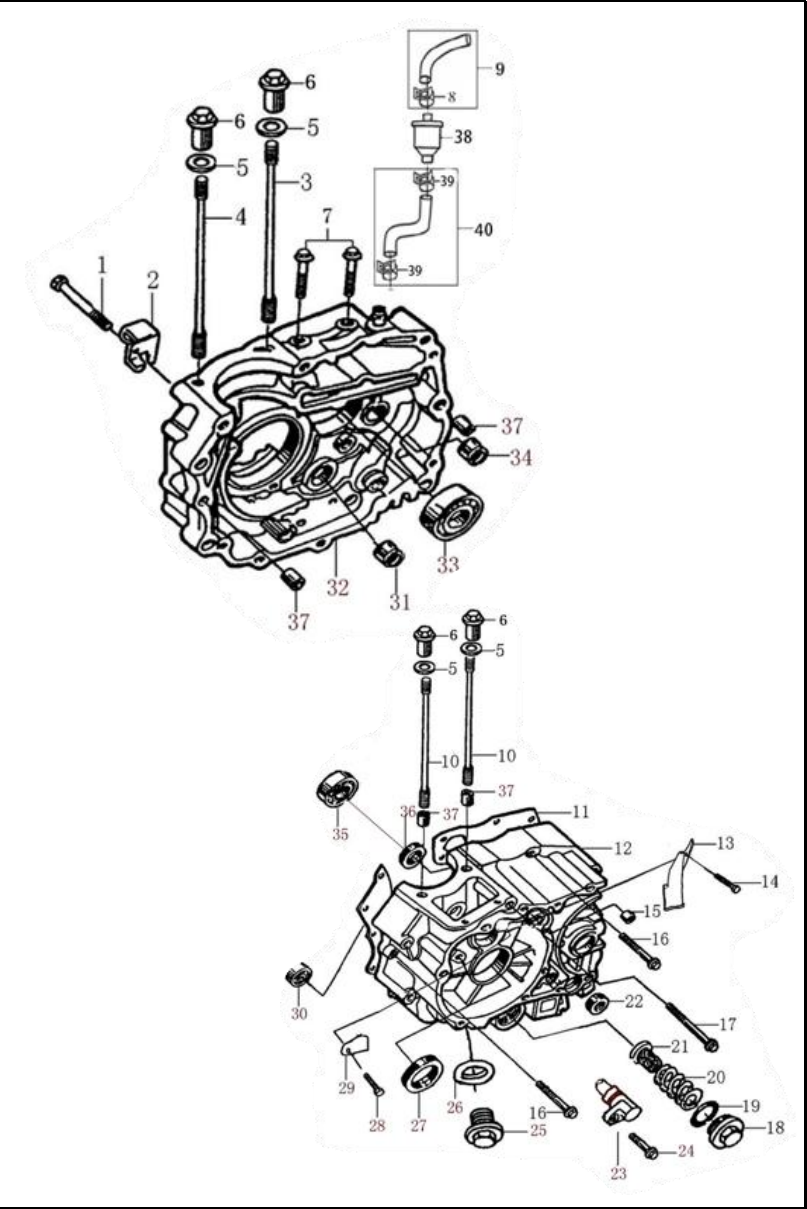


FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
1	100031958-0007	TORNILLO 6X55	1	11047749
2	100106281-0006	GUÍA CABLE CLUTCH	1	11047859
3	100100263	ESPARRAGO CARCASA A	1	11047771
4	100100264	ESPARRAGO CARCASA A	1	11047772
5	100106609	ARANDELA 12.5X2X22	4	11042151
6	100100532-0002	TORNILLO TAPON 8X32	4	11047781
7	100011269-0003	TORNILLO 6X28	2	11047744
8	100105484	ABRAZADERA	1	11047851
9	100206023	MANGUERA ENTRADA FILTRO	1	
10	100100316	ESPARRAGO CARCASA B	2	11047773
11	100104589	EMPAQUE CARCASA	1	11041622
12	100102960-0083	CARCASA IZQUIERDA	1	11047800
13	100102901	PLATINA GUÍA	1	11047799
14	100055591-0006	TORNILLO 6X12	1	11042227
15	100101202	RODAMIENTO AGUJAS	1	11047790
16	100011540-0007	TORNILLO 6X50	9	11047747
17	100031961-0007	TORNILLO 6X95	1	11047750
18	100102871-0002	TAPON CEDAZO FILTRO ACEITE	1	11047798
19	100107766	ANILLO RETÉNEDOR 35X3	1	11047879
20	100104866	RESORTE TAPON CEDAZO FILTRO ACEITE	1	11047836
21	100104943	CEDAZO FILTRO ACEITE	1	11047837
22	100104652	RETÉN 14X28X7	1	11041623
23	100103008	INYECTOR	1	11047801
24	100011534-0002	TORNILLO 6X25	1	11047746
25	100100331-0006	TAPON DRENAJE ACEITE	1	11042228

This exploded view diagram illustrates the assembly of a 125cc engine. The main components shown include the cylinder head (1), cylinder block (2), and crankcase (3). The diagram details the installation of various bolts (4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40), washers (5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40), and other hardware. Two inset diagrams provide detailed views of the carburetor (38) and the air filter (39) assembly, showing their connection to the intake manifold (40).

8

This diagram illustrates the assembly of a mechanical device, likely a pump or actuator, with 15 numbered components. The main assembly is shown on a base plate (1). A central shaft (2) passes through a housing (6) and a flange (4). A gear (5) is mounted on the shaft, and a pin (14) is used to secure it. A spring (10) is shown in an exploded view, along with a piston rod (12) and a piston (13). The piston rod is secured with a nut (11) and a washer (11). The piston is secured with a pin (11) and a washer (11). The spring is shown in an exploded view, along with a piston rod (12) and a piston (13). The piston rod is secured with a nut (11) and a washer (11). The piston is secured with a pin (11) and a washer (11).

9

FIGURA N°8 TRANSMISIÓN (1/2)

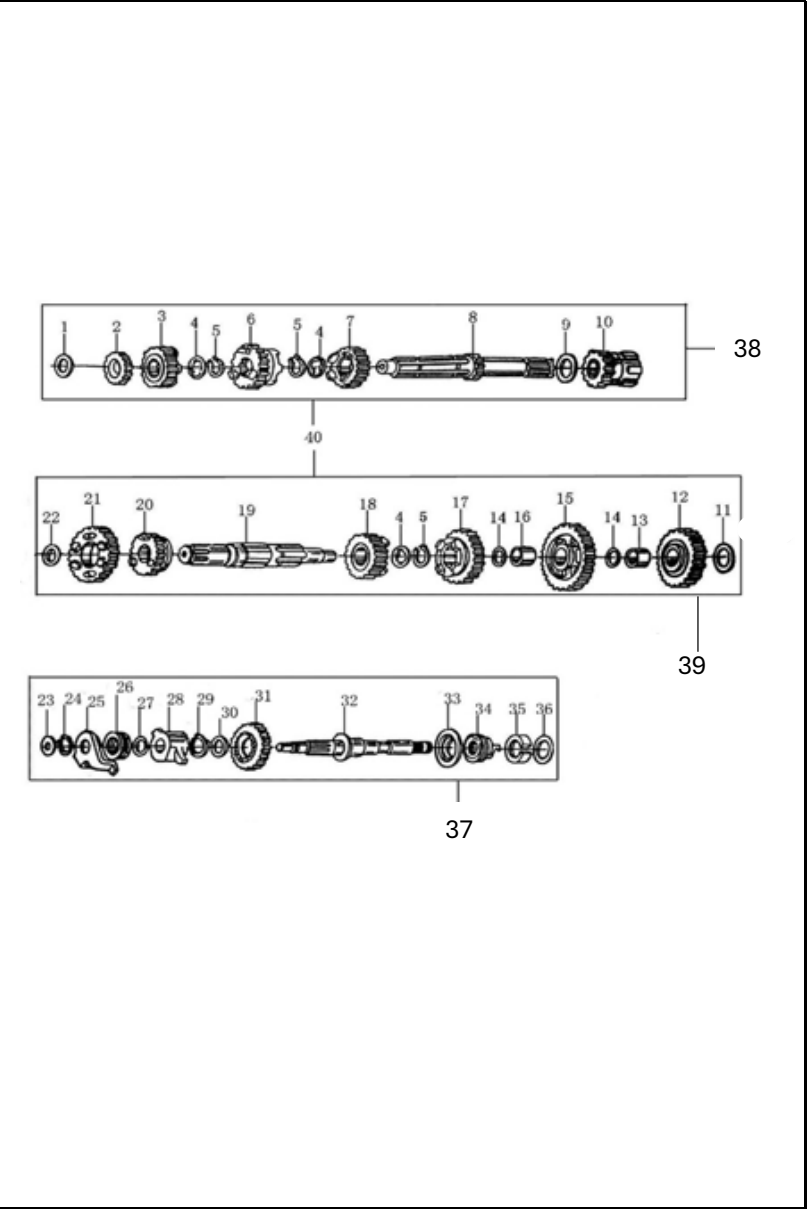


FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
1	100106510	ARANDELA 15.2X1X25	1	11047870
2	100103633	PIÑON 2DA. EJE CLUTCH	1	11047811
3	100103636	PIÑON 5TA. EJE CLUTCH	1	11047814
4	100103647	ARANDELA 17.3X1.6X26	3	11047815
5	100100596	PIN SEGURIDAD	3	11047783
6	100103635	PIÑON 4TA. EJE CLUTCH	1	11047813
7	100103634	PIÑON 3RA. EJE CLUTCH	1	11047812
8	100052667	EJE CLUTCH (SOLO)	1	11047756
9	100106525	ARANDELA 20.2X0.5X27	1	11047873
10	100053061	PIÑON EJE CLUTCH	1	11047757
11	100106511	ARANDELA 15.2X1X30	1	11047871
12	100103778	PIÑON EJE SALIDA	1	11047822
13	100103565	BUJE PIÑON EJE SALIDA	1	11047810
14	100106434	ARANDELA 16.5X0.5X24	1	11047868
15	100103743	PIÑON 1RA. EJE SALIDA	1	11047817
16	100103564	BUJE PIÑON 1RA. EJE SALIDA	1	11047809
17	100103748	PIÑON 3RA. EJE SALIDA	1	11047821
18	100103746	PIÑON 4TA. EJE SALIDA	1	11047819
19	100055424	EJE SALIDA (SOLO)	1	
20	100103747	PIÑON 5TA. EJE SALIDA	1	11047820
21	100103744	PIÑON 2DA. EJE SALIDA	1	11047818
22	100106511	ARANDELA 15.2X1X30	1	11047871
23	100106396	ARANDELA 12.1X1X18	1	11047863
24	100011098	PIN SEGURIDAD	1	11042033
25	100105793	LEVA EJE CRANK	1	11047858

Exploded view diagram of a mechanical assembly 3, showing three sub-assemblies 38, 39, and 40. Sub-assembly 38 (top) includes parts 1-10. Sub-assembly 39 (middle) includes parts 11-22. Sub-assembly 40 (bottom) includes parts 23-36. A central shaft 41 is shown passing through the middle of the three sub-assemblies.

11

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or actuator. The components are numbered 1 through 23. The main assembly is shown on a tilted plane, with parts 1 through 14 and 18 through 23 arranged around it. Part 1 is a small screw. Part 2 is a spring. Part 3 is a handle. Part 4 is a bracket. Part 5 is a pin. Part 6 is a washer. Part 7 is a nut. Part 8 is a long shaft. Part 9 is a curved arm. Part 10 is a small pin. Part 11 is a long rod. Part 12 is a bracket. Part 13 is a bracket. Part 14 is a bracket. Part 15 is a screw. Part 16 is a nut. Part 17 is a bracket. Part 18 is a small pin. Part 19 is a cylindrical component. Part 20 is a bracket. Part 21 is a bracket. Part 22 is a screw. Part 23 is a small pin.

12

This exploded view diagram illustrates the assembly of a mechanical component. The main assembly consists of a central cylindrical part (1) with a flange (6) and a circular end plate (7). A cable (2) is connected to the top of the central part (1) and terminates in a rectangular connector (3). A separate component (4) is shown with three screws (5) and a circular end plate (7). The diagram uses numbered callouts to identify the following parts:

- 1: Main cylindrical component
- 2: Cable
- 3: Cable connector
- 4: Small component with three screws (5)
- 5: Screws
- 6: Flange
- 7: Circular end plate

13

This diagram illustrates the assembly of a mechanical component, likely a pump or valve actuator, using 15 numbered parts. The components are as follows:

- 1**: A long, straight metal rod or shaft.
- 2**: A small, cylindrical component, possibly a pin or a small valve.
- 3**: A long, curved metal rod or shaft.
- 4**: A complex, multi-ported metal casting, likely the main body or housing.
- 5**: A rectangular metal plate or bracket.
- 6**: A small, cylindrical component, similar to part 2.
- 7**: A long, curved metal rod or shaft, similar to part 3.
- 8**: A small, curved metal component, possibly a lever or a pin.
- 9**: A small, circular metal washer or spacer.
- 10**: A small, curved metal component, similar to part 8.
- 11**: A small, rectangular metal plate or bracket.
- 12**: A small, rectangular metal plate or bracket.
- 13**: A long, threaded metal bolt or screw.
- 14**: A small, circular metal washer or spacer.
- 15**: A small, circular metal washer or spacer.

The assembly is shown in an exploded view, with the components arranged to show their relative positions and how they fit together. The main body (4) is the central component, with various rods (1, 3, 7) and plates (5, 7) attached to it. The small components (2, 6, 8, 10, 11, 12) are likely pins or spacers used to secure the assembly.

15

This diagram illustrates the components of a bicycle pedal assembly. The parts are numbered as follows:

- 1**: Pedal spindle (the central axle).
- 2**: Pedal nut (the large nut that secures the spindle).
- 3**: Pedal arm (the main body of the pedal).
- 4**: Pedal pin (the pin that connects the pedal arm to the crank arm).
- 5**: Pedal pin washer (the washer that goes between the pin and the crank arm).
- 6**: Pedal pin nut (the nut that secures the pin).
- 7**: Pedal pin washer (the washer that goes between the pin and the pedal arm).

16

Diagram illustrating the components of a fuel pump assembly, numbered 1 through 6:

- 1: Fuel pump body
- 2: Fuel filter
- 3: Fuel line fitting
- 4: Fuel line fitting
- 5: Fuel pump assembly
- 6: Fuel filter

17

#N/D

19

This diagram illustrates the rear suspension assembly components, labeled 1 through 16. The components are arranged as follows:

- 1**: A black plastic rear suspension bracket with two vertical mounting tabs.
- 2**: A black plastic rear suspension bracket with a single vertical mounting tab.
- 3**: A small black plastic bush or spacer.
- 4**: A small black plastic bush or spacer.
- 5**: A small black plastic bush or spacer.
- 6**: A long black plastic bush or spacer.
- 7**: A set of four small black plastic bush or spacers.
- 8**: A set of four small black plastic bush or spacers.
- 9**: A set of four small black plastic bush or spacers.
- 10**: A long black plastic bush or spacer.
- 11**: A bracket connecting three black plastic bush or spacers.
- 12**: A black plastic bush or spacer.
- 13**: A black plastic bush or spacer.
- 14**: A black plastic bush or spacer.
- 15**: A black plastic bush or spacer.
- 16**: A black plastic bush or spacer.

20

[illegible]

This diagram illustrates the components of a vehicle brake system, numbered 1 through 18. The parts are as follows:

- 1**: The entire brake assembly, shown in an exploded view.
- 2**: A black, rectangular brake master cylinder.
- 3**: Two grey, curved brake pads shown within a rectangular inset.
- 4**: A large, black, semi-circular brake caliper housing.
- 5**: A large, silver, circular brake disc (rotor).
- 6**: A black, L-shaped bracket or arm.
- 7**: A small, black, cylindrical component, likely a pin or bush.
- 8**: A small, black, cylindrical component.
- 9**: A small, white, cylindrical component.
- 10**: A black, flexible brake hose with a metal fitting.
- 11**: A small, black, cylindrical component.
- 12**: A small, black, cylindrical component.
- 13**: A small, black, cylindrical component.
- 14**: A small, black, cylindrical component.
- 15**: A small, black, cylindrical component.
- 16**: A small, black, cylindrical component.
- 17**: A set of four small, black, cylindrical components.
- 18**: A set of four small, black, cylindrical components.

[illegible]

Exploded view diagram of the LED light assembly components:

- 1: LED light bar assembly with wiring.
- 2: Mounting bracket.
- 3: Two screws for mounting.
- 4: Four washers for mounting.
- 5: Two small circular components (possibly spacers or caps).
- 6: Two small circular components (possibly spacers or caps).
- 7: A small circular component with a wire, likely a sensor or indicator.

23

This diagram illustrates the components of a mechanical assembly, numbered 1 through 14. The parts are as follows:

- 1:** A bracket or frame component.
- 2:** A large, dark, trapezoidal component, possibly a blade or cover, shown in three identical units.
- 3:** A curved, dark, semi-circular component, likely a blade or cover.
- 4:** A small, L-shaped component.
- 5:** A set of five vertical pins or screws.
- 6:** A set of six small circular components, possibly washers or spacers.
- 7:** A set of four small circular components, possibly washers or spacers.
- 8:** A set of five small circular components, possibly washers or spacers.
- 9:** A small, L-shaped component, similar to part 4.
- 10:** A small, L-shaped component, similar to part 4.
- 11:** A set of five vertical pins or screws.
- 12:** A set of three small circular components, possibly washers or spacers.
- 13:** A set of three small circular components, possibly washers or spacers.
- 14:** A set of four small rectangular components, possibly spacers or washers.

24

This image displays a collection of 19 numbered components for a car stereo installation kit. The items are as follows:

- 1**: A large, coiled black cable with multiple connectors.
- 2**: A bundle of ten long, thin, silver-colored metal strips.
- 3**: A small black rectangular component with a connector.
- 4**: A small metal ring or washer.
- 5**: A small metal screw or bolt.
- 6**: A circular component, possibly a speaker or a gauge.
- 7**: A small black rectangular component with a connector.
- 8**: A small metal ring or washer.
- 9**: A small metal ring or washer.
- 10**: A small metal ring or washer.
- 11**: A small metal ring or washer.
- 12**: A small black rectangular component with a connector.
- 13**: A small black rectangular component with a connector.
- 14**: A small black cable with a connector.
- 15**: A small black cable with a connector.
- 16**: A small black component, possibly a speaker or a gauge.
- 17**: A small metal ring or washer.
- 18**: A small metal ring or washer.
- 19**: A small black cable with a connector.

[illegible]

FIGURA N°23 SUSPENSIÓN DELANTERA

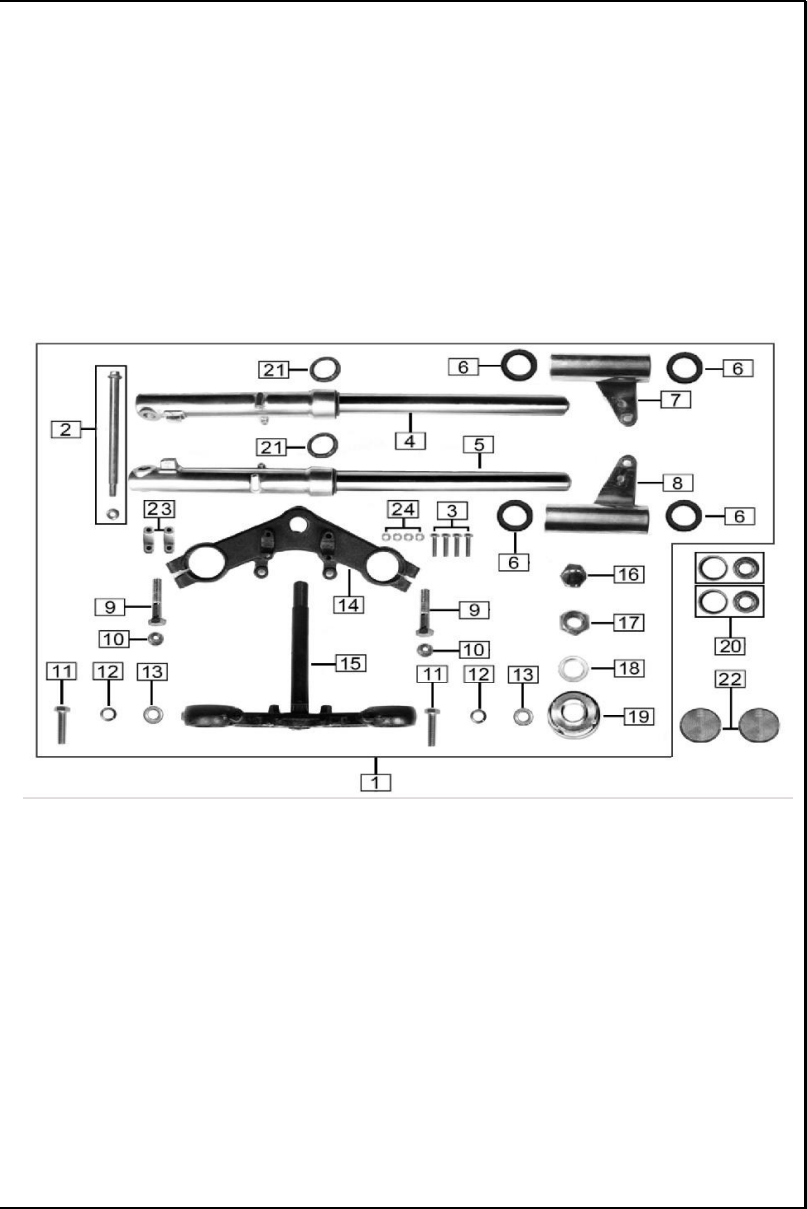


FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
1	37000-L3L6-0000	SUSPENSIÓN DELANTERA COMPLETA	1	11062715
2	51181-L3L6-0100	EJE RUEDA DELANTERA 310MM	1	11069974
3	B0578900080035T1X	TORNILLO M8X35	1	11084868
4	34200-L1A8-020001	AMORTIGUADOR DELANTERO DERECHO	1	22000238
5	34100-L1A8-020001	AMORTIGUADOR DELANTERO IZQUIERDO	1	22000823
6	86196-L1A8-0100	BUJE SOPORTE FARO 7MM	4	22000210
7	8619G-L1A8-0100	SOPORTE FAROLA DERECHO	1	22000208
8	8619F-L1A8-0100	SOPORTE FAROLA IZQUIERDO	1	22000209
9	B057830010005571C	TORNILLO M10X55	2	
10	B061700010000061C	TUERCA M10	2	11048215
11	B057830010004071C	TORNILLO 10X40	2	11048207
12	B0009300100000U1C	ARANDELA PRESIÓN 10 MM.	2	11048158
13	B0009500100000K1C	ARANDELA PLANA M10	2	22000874
14	71101-L1A8-00001C	ACOPLE SUPERIOR COLUMNA DIRECCION	1	22000134
15	7110A-L1A8-00001C	COLUMNA DIRECCION	1	22000129
16	71104-L1A8-0000	TUERCA DIRECCION	1	22000130
17	71106-L1A8-00001C	TUERCA AJUSTE DIRECCION	1	22000131
18	71123-L1A8-00001C	ARANDELA PLANA DIRECCION D22X36	1	22000132
19	71105-L1A8-00001C	TUERCA AJUSTE VASTA DIRECCION M22	1	22000133
20	71200-30205	RODAMIENTO 30205	2	22000163
21	34107-L1A8-0000	RETÉN TUBO TELESCOPICO 63-50-11	1	11040627
22	85850-H259-C100	REFLECTOR LATERAL	2	22000180
23	7111A-L3L6-0000	ABRAZADERA SUPERIOR MANUBRIO	2	11061998

This diagram illustrates the components of a fog light assembly. The parts are labeled as follows:

- 1**: The fog light housing, which is a circular, metallic-looking component with a central mounting point.
- 2**: The fog light bulb, a small, cylindrical component with a glass lens and a metal base.
- 3**: The fog light bezel, a rectangular component with a black rubber seal and a mounting bracket.
- 4**: The fog light wiring harness, which includes a black plastic relay, a fuse, and a power wire connected to a battery terminal.

27

This diagram illustrates the components of a vehicle's instrument cluster and ignition system, numbered 1 through 11. The components are as follows:

- 1**: Instrument cluster assembly, including a speedometer, tachometer, and fuel gauge.
- 2**: Four O-rings for the instrument cluster.
- 3**: Two screws for the instrument cluster.
- 4**: Ignition switch assembly, including the switch body and a circular metal plate.
- 5**: Ignition key.
- 6**: Two screws for the ignition switch.
- 7**: Two O-rings for the ignition switch.
- 8**: Three screws for the ignition switch.
- 9**: Two screws for the ignition switch.
- 10**: Four O-rings for the ignition switch.
- 11**: Two O-rings for the ignition switch.

[illegible]

FIGURA N°26 PEDAL FRENO - VARILLA FRENO TRASERA

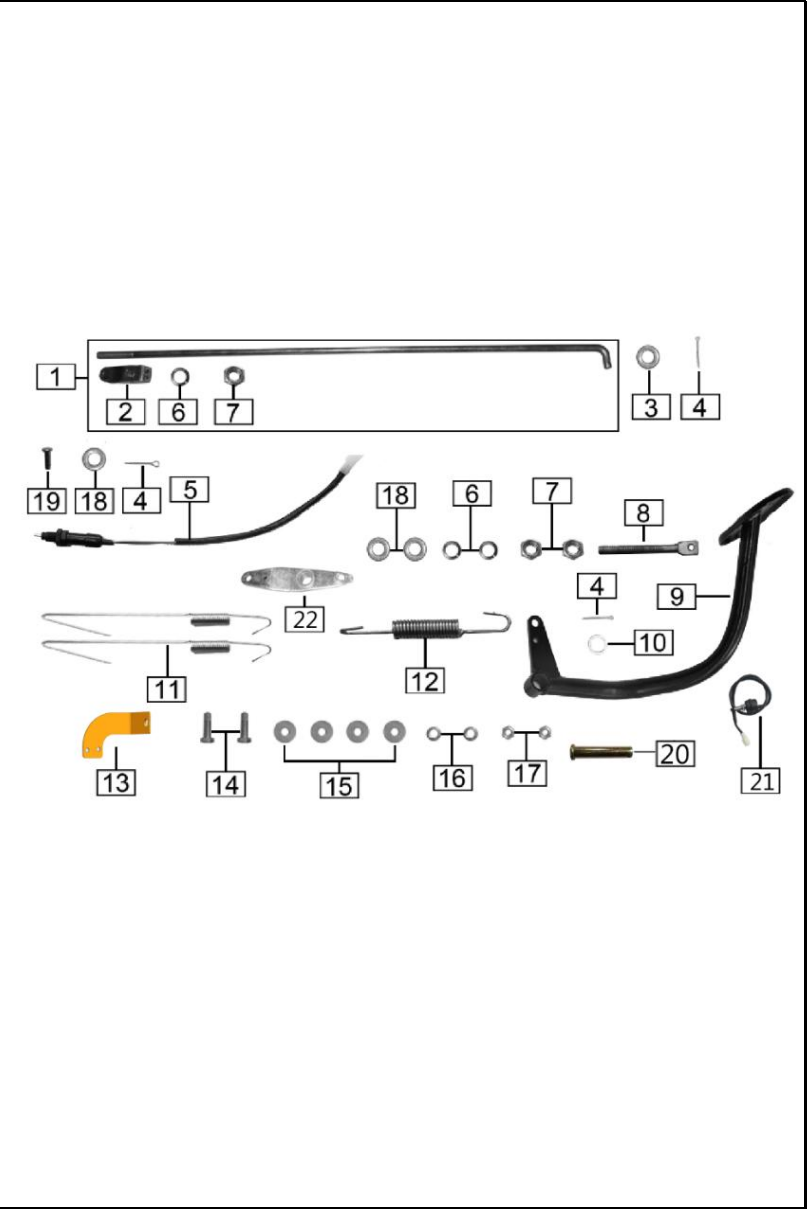


FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
1	52131-L3L6-00000C	CONJUNTO VARILLA DE FRENO	1	22000256
2	24430-0000-00000C	ACOPLE VARILLA FRENO	1	11047933
3	B0009500100000K1C	ARANDELA PLANA M10	1	22000874
4	B000910002502501C	PIN SEGURIDAD 2.5X30	2	22000906
5	85720-L1A8-0000	CABLE 350 MM SWITCH REVERSA	1	22000213
6	B0009300080000U1C	ARANDELA PRESIÓN 8 MM.	3	11048157
7	B061700008000061C	TUERCA M8	3	11048213
8	52106-0000-00000C	REGULADOR RESORTE FRENO TRASERO	1	22000165
9	52120-L3L6-0000	PEDAL FRENO	1	11048028
10	91301-91702023421C	ARANDELA 17 MM.	1	11048143
11	84701-L1A8-00000C	INTERRUPTOR RESORTE	2	22000166
12	52104-0000-01000C	RESORTE FRENO TRASERO	1	22000164
13	31013-L1A8-000001	SOPORTE SWITCH STOP	1	11084870
14	B057830006001671C	TORNILLO 6X16	2	11048187
15	B0009602060000K1C	ARANDELA 6 MM.	4	22000902
16	B0009300060000U1C	ARANDELA DE PRESIÓN 6 MM.	2	11048155
17	B061700006000061C	TUERCA M6	2	11048211
18	B0009500080000K1C	ARANDELA 8 MM.	2	11048166
19	B0088200080020T1C	PIN PASADOR 8X20	1	22000845
20	52101-J1A4-0000	EJE PEDAL FRENO	1	22000121
21	84600-L1A8-030001	SWITCH STOP	1	11084869
22	10015-L1D5-0000	SOPORTE	1	

The diagram illustrates the assembly of a footplate. It features two main components, labeled 1 and 2, which are footplates. Component 1 is a solid, dark, rectangular plate. Component 2 is a similar plate but with a grid of small holes. Below these plates are four sets of hardware, labeled 3, 4, 5, and 6. Set 3 consists of four screws. Set 4 consists of eight washers arranged in two rows of four. Set 5 consists of four small washers in a single row. Set 6 consists of four larger washers in a single row. The hardware is intended to be used to secure the footplates to a base.

30

1

2

3

4

5

6

7

8

31

This diagram shows the components of a motorcycle fuel tank assembly. The main fuel tank (1) is a large, dark, teardrop-shaped component. It features a circular filler neck on the left side and a mounting bracket on the right. The assembly includes various fasteners and hardware: two sets of screws (2 and 13) for the filler neck, two gaskets (3), four O-rings (4), two sets of screws (11 and 12) for the mounting bracket, and two sets of screws (5 and 6) for the fuel petcocks. The fuel petcocks (7) are connected to fuel lines (8) which lead to fuel valves (9). A fuel filter (10) is also shown. The fuel lines are secured with clamps (14).


32

This diagram illustrates the components of a motorcycle handlebar assembly, numbered 1 through 9:

- 1**: Left handlebar grip.
- 2**: Left handlebar clamp.
- 3**: Left handlebar control switch.
- 4**: Right handlebar grip.
- 5**: Left handlebar control switch with wiring.
- 6**: Right handlebar control switch with wiring.
- 7**: Left handlebar end cap.
- 8**: Main handlebar.
- 9**: Right handlebar end cap.

33

FIGURA N°31 CABLES

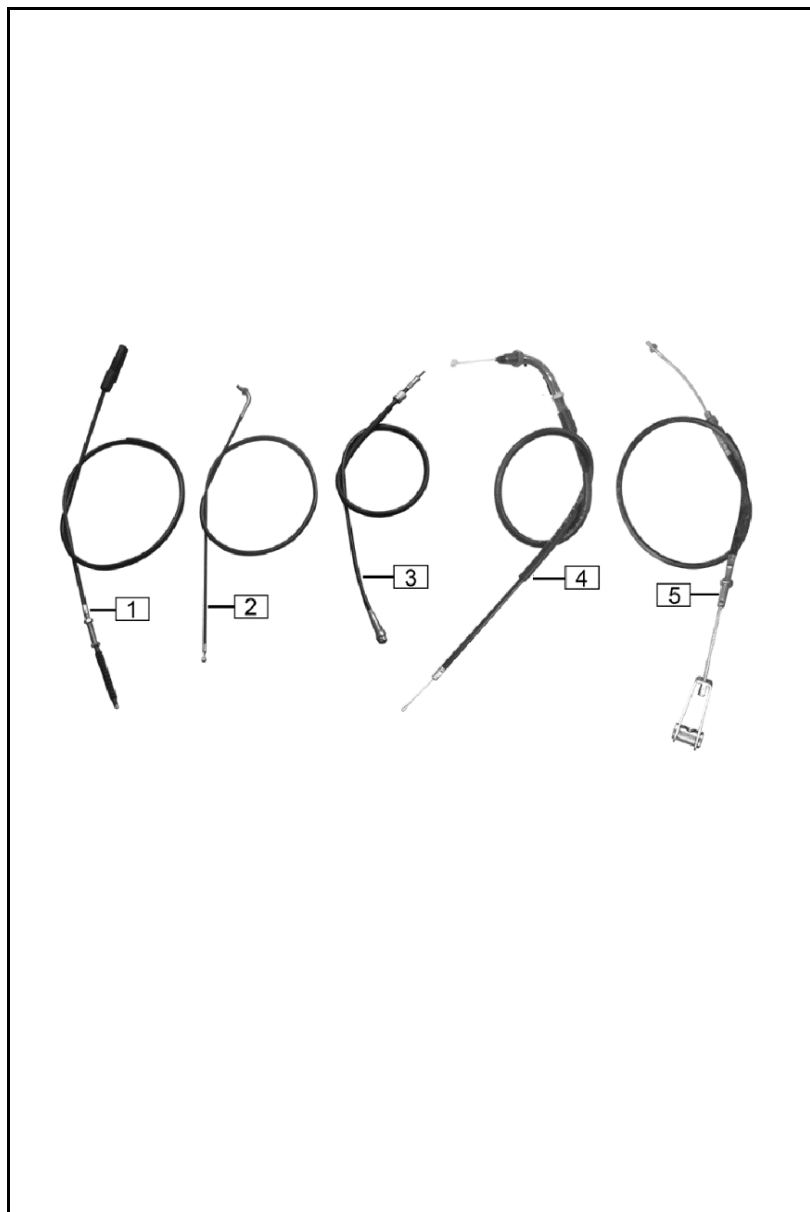[illegible]

This diagram shows an exploded view of a mechanical assembly. The components are labeled with numbers in boxes:

- 1**: A large, dark, T-shaped metal plate with a central rectangular cutout and two circular holes on the vertical stem.
- 2**: A dark, curved metal bracket with a serrated edge and a circular hole.
- 3**: Three long screws.
- 4**: Two screws.
- 5**: Six washers, arranged in two columns of three.
- 6**: Three small circular spacers or washers.
- 7**: Three small circular spacers or washers, arranged in two columns (two on the left, one on the right).

35

This diagram illustrates the components of a rear suspension assembly, including a control arm, a coil spring, and various fasteners. The parts are numbered as follows:

- 1**: Control arm assembly, including the lower control arm and the upper control arm.
- 2**: Coil spring assembly, including the coil spring and the shock absorber.
- 3**: Two bolts for the control arm.
- 4**: Four washers for the control arm.
- 5**: Two spacers for the control arm.
- 6**: Two nuts for the control arm.
- 7**: A washer for the control arm.
- 8**: A washer for the control arm.
- 9**: A nut for the control arm.
- 10**: A pin for the control arm.

[illegible]

This diagram illustrates the assembly of a motorcycle body panel. The main components are labeled as follows:

- 1**: The main body panel, shown from both front and rear perspectives.
- 2**: The rear view of the main body panel.
- 3**: A long, thin metal bracket or support bar.
- 4**: A small metal pin or clip.
- 5**: A small metal pin or clip.
- 6**: A small metal pin or clip.
- 7**: A small metal pin or clip.
- 8**: A set of seven screws used for mounting.
- 9**: A set of four screws used for mounting.
- 10**: A set of five screws used for mounting.
- 11**: A set of seven screws used for mounting.
- 12**: A set of five screws used for mounting.

37

This diagram shows an exploded view of a mechanical assembly. The main assembly is shown in a grey rectangular frame. The components are numbered as follows:

- 1**: The main body of the assembly, which is a long, thin, rectangular plate with a curved end on the left.
- 2**: A small, rectangular component located near the top of the main body.
- 3**: A small, rectangular component located near the bottom of the main body.
- 4**: A small, rectangular component located near the bottom of the main body.
- 5**: A small, rectangular component located near the bottom of the main body.
- 6**: A small, rectangular component located near the bottom of the main body.
- 7**: A small, rectangular component located near the top of the main body.
- 8**: A small, rectangular component located near the top of the main body.
- 9**: A set of 10 small, rectangular components arranged in a row.
- 10**: A set of 10 small, rectangular components arranged in a row.
- 11**: A set of 10 small, rectangular components arranged in a row.
- 12**: A set of 10 small, rectangular components arranged in a row.

38

This diagram illustrates the exploded view of the bed frame assembly. The components are labeled as follows:

- 1**: Side rail assembly
- 2**: Headboard rail
- 3**: Headboard panel
- 4**: Bed base/mattress
- 5**: Footboard panel
- 6**: Corner casters (four units, each labeled 7-8)
- 7**: Headboard slats
- 8**: Headboard slat supports
- 9**: Footboard slats
- 10**: Headboard frame
- 11**: Footboard slats
- 12**: Footboard slat supports
- 13**: Footboard slats
- 14**: Headboard connector

39

The image displays 14 numbered icons representing different types of solar panels and components:

- 1:** A square panel with four circular cells arranged in a 2x2 grid.
- 2:** A rectangular panel with eight rectangular cells arranged in two rows of four.
- 3:** A rectangular panel with four rectangular cells arranged in a single row.
- 4:** Two small, rectangular panels stacked vertically.
- 5:** A single, continuous, wavy line representing a flexible or thin-film panel.
- 6:** A rectangular panel with eight small circular cells arranged in two rows of four.
- 7:** A rectangular panel with four small circular cells arranged in a single row.
- 8:** A rectangular panel with four small circular cells arranged in a single row, with a bracket underneath.
- 9:** A rectangular panel with three vertical lines representing cells.
- 10:** A rectangular panel with five small circles representing cells.
- 11:** A rectangular panel with two vertical lines representing cells.
- 12:** A rectangular panel with five small circles representing cells, with a bracket underneath.
- 13:** A rectangular panel with five small circles representing cells, with a bracket underneath.
- 14:** A small, dark, rectangular component, possibly a solar controller or inverter.

[illegible]

This diagram illustrates the assembly of a vehicle chassis, showing various components and their relative positions. The components are numbered as follows:

- 1**: A set of four small, rectangular components, likely brake pads or sensors, arranged in a 2x2 grid.
- 2**: A set of four small, rectangular components, likely brake pads or sensors, arranged in a 2x2 grid.
- 3**: A set of eight long, thin, cylindrical components, likely shock absorbers or struts, arranged in a single row.
- 4**: A set of eight small, circular components, likely bolts or nuts, arranged in a single row.
- 5**: A set of four U-shaped components, likely shock absorbers or struts, arranged in a single row.
- 6**: Two square components with circular openings, likely brake calipers.
- 7**: A set of four curved, dark components, likely brake discs or rotors.
- 8**: A set of eight small, circular components, likely bolts or nuts, arranged in a single row.
- 9**: A set of eight small, circular components, likely bolts or nuts, arranged in a single row.
- 10**: A set of eight small, circular components, likely bolts or nuts, arranged in a single row.
- 11**: A set of four dark, rectangular components, likely brake pads or sensors, arranged in a single row.
- 12**: A set of eight small, circular components, likely bolts or nuts, arranged in a single row.

41

The diagram shows the components for a car battery terminal assembly. The main assembly includes:

- 1**: Battery terminal housing
- 2**: Two screws for the terminal housing
- 3**: A bag of terminal paste or compound
- 4**: A curved metal terminal bracket
- 5**: Two screws for the terminal bracket
- 6**: Six circular terminal caps or washers
- 7**: Two small circular terminal caps or washers
- 8**: Two small circular terminal caps or washers

A separate box lists the tools required for the assembly:

- A bag of terminal paste or compound
- A screwdriver
- A wrench
- A terminal wrench
- A terminal cap
- A pair of pliers

42

FIGURA N°40 CARDAN

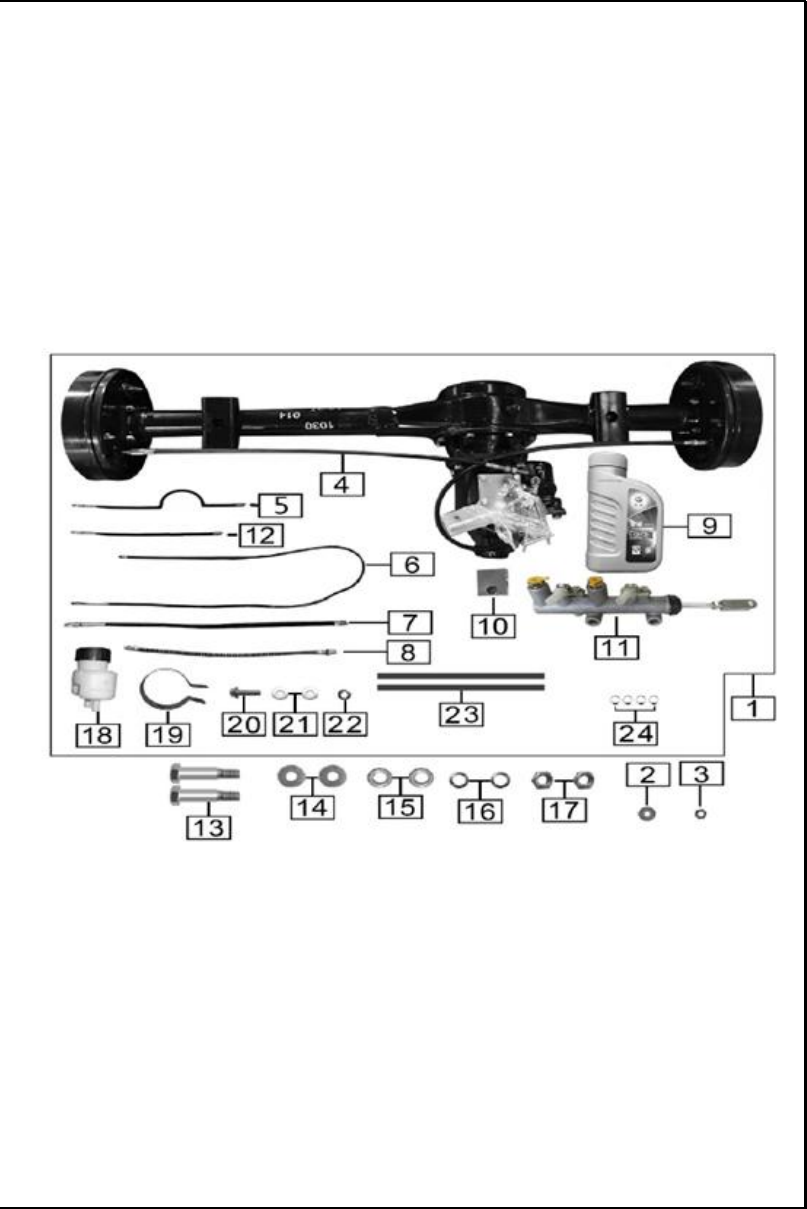


FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
1	56300-L3L6-0300	CONJUNTO EJE TRASERO	1	22000271
2	B0009602080000K1C	ARANDELA 8 MM.	1	11048172
3	B061700008000061C	TUERCA M8	1	11048213
4	3824F-L1A8-0000	CABLE PARQUEO	1	11048013
5	52177-L3L6-0200	TUBO COBRE 555MM	1	22000268
6	52177-L3L6-0100	TUBO COBRE 1550MM	1	22000270
7	52177-L3L6-040001	CONDUCTO 750 MM	1	11085449
8	52175-L3L6-0000	TUBO ALTA PRESIÓN ACEITE 500 MM	1	22000228
10	61143-0000-0300	TUBO 3 VIA	1	22000229
11	52160-L3L6-00001C	BOMBA FRENO TRASERO TRI 200	1	22000225
12	52177-L3L6-050001	CONDUCTO 460 MM	1	11085450
13	B057830010006071C	TORNILLO 10X60	2	11048208
14	B0009602100000K1C	ARANDELA M10	2	
15	B0009500100000K1C	ARANDELA PLANA M10	2	22000874
16	B0009300100000U1C	ARANDELA PRESIÓN 10 MM.	2	11048158
17	B061700010000061C	TUERCA M10	2	11048215
18	6155Q-R0D4-0000	RESERVORIO LIQUIDO FRENO	1	22000231
19	52176-L3L6-0000	SOPORTE COPA ACEITE	1	22000232
20	B057830008002071C	TORNILLO 8X20	2	11048197
21	B0009500080000K1C	ARANDELA 8 MM.	2	11048166
22	B061700008000061C	TUERCA M8	2	11048213
23	53070-L3L6-010001	TUBO ACEITE 300 MM	2	22000230
24	19410-L3L6-0000	ABRAZADERA TUBO ACEITE	4	22000233

An exploded view diagram of a mechanical assembly, likely a pump or actuator. The components are numbered 1 through 10:

- 1**: A small cylindrical component, possibly a pin or a small bush.
- 2**: A complex mechanical component, possibly a valve or a pump head, with a handle and a lever.
- 3**: A small cylindrical component, possibly a pin or a small bush.
- 4**: A large cylindrical component, possibly a motor or a pump housing.
- 5**: A set of four screws or bolts.
- 6**: A set of four small circular components, possibly washers or spacers.
- 7**: A set of four screws or bolts.
- 8**: A set of three small circular components, possibly washers or spacers.
- 9**: A small mechanical component, possibly a pin or a small bush.
- 10**: A set of three small circular components, possibly washers or spacers.

44

45

This diagram illustrates the components of a vehicle chassis assembly, including a coil spring, shock absorbers, control arms, and suspension links. The parts are numbered as follows:

- 1: Coil spring
- 2: Upper shock absorber mounting bracket
- 3: Upper control arm ball joint
- 4: Lower control arm ball joint
- 5: Lower control arm ball joint
- 6: Lower control arm
- 7: Lower control arm bracket
- 8: Upper shock absorber mounting bracket
- 9: Upper control arm ball joint
- 10: Lower control arm ball joint
- 11: Lower control arm ball joint
- 12: Lower control arm
- 13: Lower control arm bracket
- 14: Lower control arm ball joint
- 15: Lower control arm ball joint

46

Diagram illustrating the components for installing the battery cover:

- 1: Battery cover (top view).
- 2: Battery compartment (bottom view).
- 3: Four screws.
- 4: Four washers.
- 5: Four spacers.
- 6: Four washers.

47

FIGURA N°45 COMPLEMENTOS FRENO TRASERO

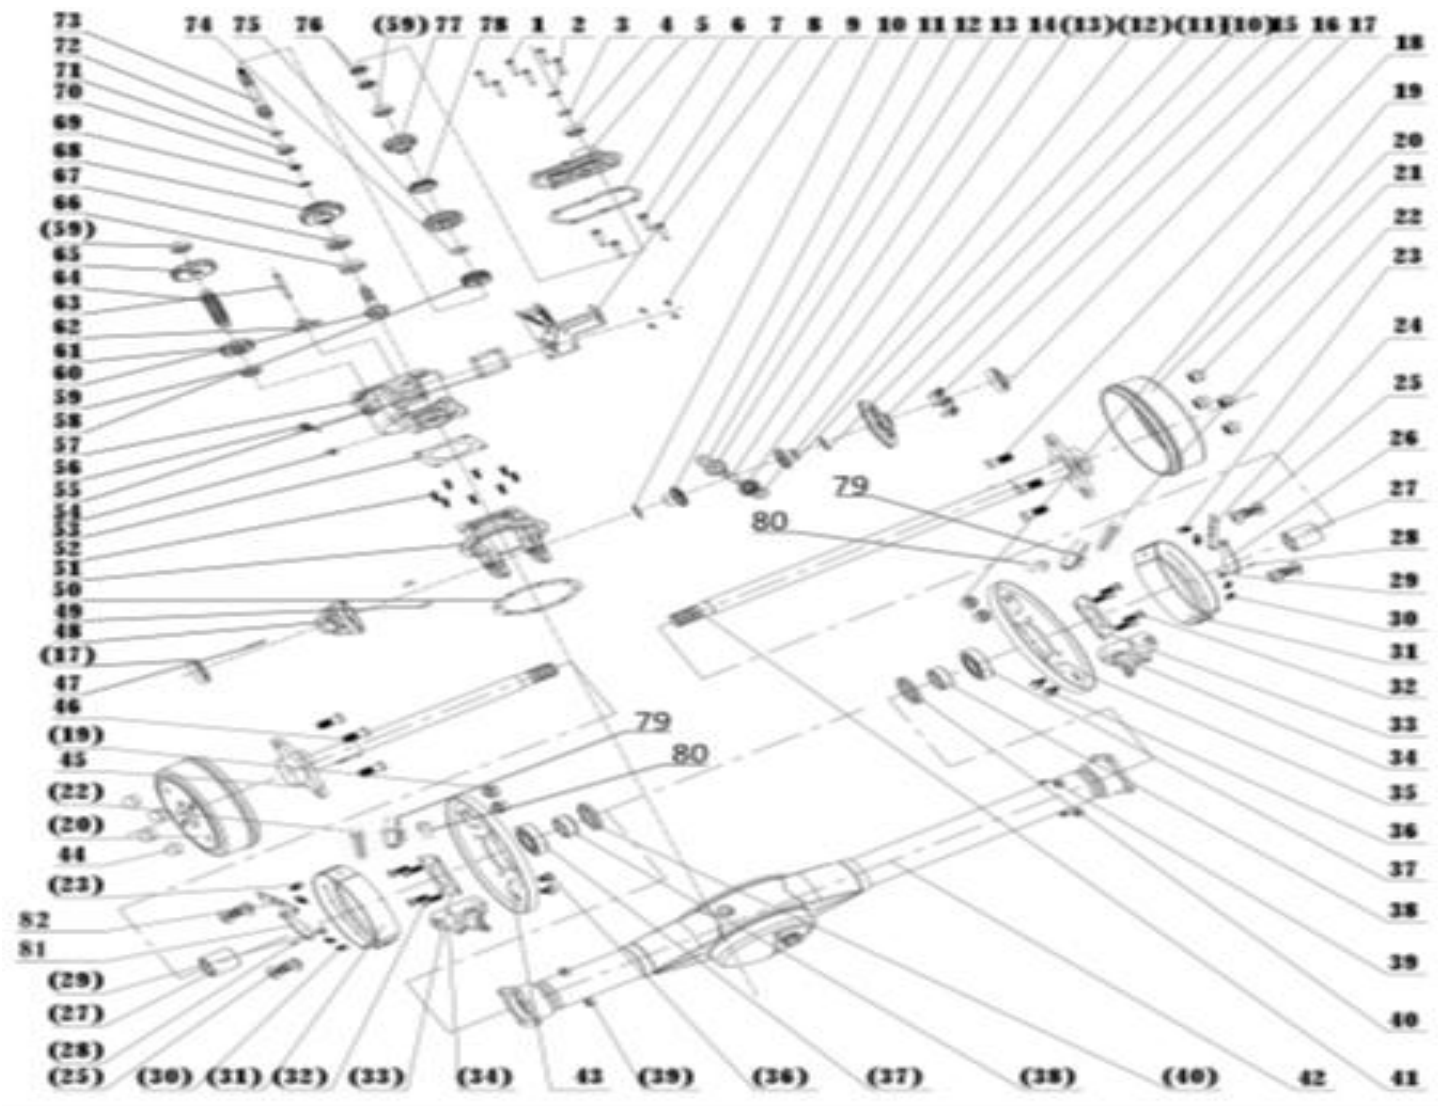


FIGURA N°45 COMPLEMENTOS FRENO TRASERO (1/1)

FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
1	B057830008003070C	TORNILLO 8 X 30	6	11048201
1	B0009300080000UOC	ARANDELA 8 MM.	6	11048156
2	B0089401200000NOE	ANILLO RETÉNEDOR	1	11048181
3	3823Y-L1A8-0000	PIN SEGURIDAD	1	11047998
4	71200-6004-RS	RODAMIENTO BOLAS 6004-RS	1	11048083
5	3822Y-L1A8-0000	TAPA CAJA CAMBIOS	1	11047977
7	3823B-L1A8-0000	EMPAQUE TAPA CAJA CAMBIOS	1	11041604
7	B057830010004070C	TORNILLO 10X40	4	11048206
8	B0009300100000UOC	ARANDELA PRESIÓN 10 MM.	4	11048158
9	3823C-L1A8-0000	SOPORTE CAJA CAMBIOS	1	11047979
9	B0009300060000UOC	ARANDELA PRESIÓN 6 MM.	4	11048154
10	3823Z-L1A8-0000	ANILLO RETÉNEDOR	2	11047999
11	3823D-L1A8-0000	PIÑÓN SATELITE CAJA CAMBIOS	2	11047980
12	3820V-L1A8-0000	ARANDELA COBRE	2	11047964
13	3820R-L1A8-0000	PIÑÓN PLANETARIO CAJA CAMBIOS	2	11047961
14	3820T-L1A8-0000	EJE PIÑÓN PLANETARIO	1	11047963
15	3820G-L1A8-0000	TAPA ACOPL EJE RUEDA TRASERO	1	11047957
16	B057830008002070C	TORNILLO 8X20	6	11048196
16	38241-L1A8-0000	ARANDELA 8 MM.	6	11048001
17	71200-6008	RODAMIENTO 6008	1	11048084
18	38246-L1A8-0000	TORNILLO EJE TRANSMISIÓN DERECHO	4	11048005
19	B061700008000060C	TUERCA M8	1	11048212
19	B0009300080000UOC	ARANDELA 8 MM.	1	11048156
20	3821F-L1A8-0000	CAMPANA TRASERA	2	11047966

FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
21	38247-L1A8-0000	TUERCA TAPON CAMPANA TRASERA	4	11048006
22	3822R-L1A8-0000	TORNILLO AJUSTE	1	11047975
23	3822N-L1A8-0000	RESORTE CORTO	1	11047972
24	3824E-L1A8-0000	PLATINA SOPORTE	1	11048012
24	3822T-L1A8-0000	PLATINA SOPORTE	1	11047976
25	3822J-L1A8-0000	CUÑA COMPRESOR	1	11047970
25	3822G-L1A8-0000	RESORTE COMPRESOR	1	11047968
25	3822H-L1A8-0000	ARANDELA COMPRESOR	1	11047969
26	3824C-L1A8-0000	PLATINA SOPORTE	1	11048010
27	3823H-L1A8-0000	BUJE	2	11047984
28	B000910003201620C	PIN SEGURIDAD 3.2X16	1	11048153
29	B008820008001420C	PIN PASADOR 8X14	1	11048177
30	3822K-L1A8-0000	RESORTE LARGO	1	11047971
31	3821J-L1A8-010001	BANDAS FRENO	2	22000852
32	B057830008002570C	TORNILLO 8X25	8	11048198
33	3823E-L1A8-0000	GUARDAPOLVO PLATO RUEDA TRASERA	2	11047981
34	3822E-L1A8-0000	CILINDRO FRENO TRASERO	1	11047967
34	3824N-L3L6-0000	PERNO DRENAJE BOMBA FRENO	1	
35	3823G-L1A8-0000	PLATO RUEDA DERECHA	1	11047983
36	B057830006001270C	TORNILLO 6X12	1	11048186
36	B0009300060000UOC	ARANDELA PRESIÓN 6 MM.	1	11048154
37	71200-6206	RODAMIENTO BOLAS 6206	1	11048087
38	3823J-L1A8-0000	BUJE	2	11047985
39	B061700008000060C	TUERCA M8	8	11048212
40	B0009300080000UOC	ARANDELA 8 MM.	8	11048156

FIGURA N°45 COMPLEMENTOS FRENO TRASERO

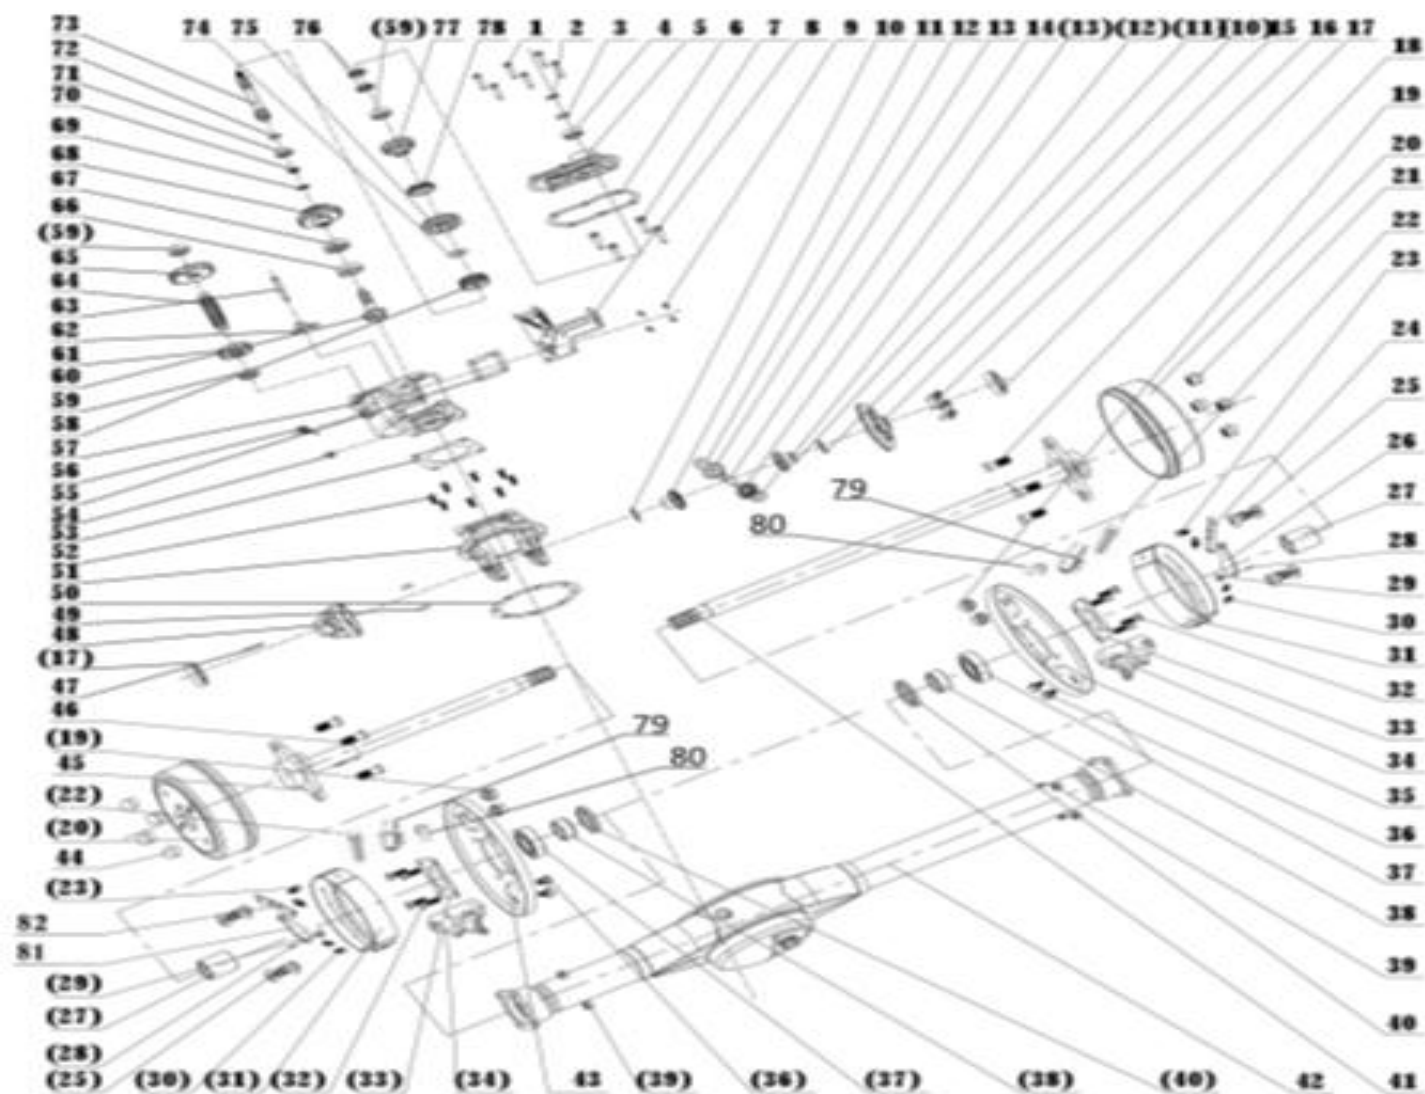


FIGURA N°45 COMPLEMENTOS FRENO TRASERO (2/2)

FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
41	3820P-L1A8-0000	EJE TRANSMISIÓN DERECHO	1	11047960
42	3820D-L3L6-0000	CARDAN (SOLO)	1	11047955
43	3823F-L1A8-0000	PLATO RUEDA IZQUIERDA	1	11047982
44	38249-L1A8-0000	TUERCA TAPON CAMPANA TRASERA	5	11048008
45	3820X-L1A8-0000	EJE TRANSMISIÓN IZQUIERDO	1	11047965
46	38248-L1A8-0000	TORNILLO EJE TRANSMISIÓN IZQ.	5	11048007
47	3820F-L1A8-0000	PIN SEGURIDAD 5X40	1	11047956
48	3820S-L1A8-0000	ACOPLE DIFERENCIAL	1	11047962
49	B001190208001800P		2	
50	3823K-L1A8-0000	EMPAQUE ACOPLE EJES TRASEROS	1	11040628
51	3820H-L1A8-0000	ACOPLE EJES TRASEROS	1	11047958
52	B057830008002070C	TORNILLO 8X20	8	11048196
52	B0009300080000UOC	ARANDELA 8 MM.	8	11048156
53	38260-L1A8-0000	EMPAQUE CAJA CAMBIOS	1	11041605
54	B057830008001270C	TORNILLO 8X12	1	11048194
54	B000950008000002	ARANDELA 8 MM.	1	11048164
55	3823L-L1A8-0000	CINTA DE PROTECCION	1	11047986
56	3823M-L1A8-0000	TAPON NIVEL ACEITE	1	11047987
56	15822-M4E3-000001	ANILLO RETÉNEDOR	1	22000892
57	3822Z-L1A8-0000	CAJA DE CAMBIOS TRAS.	1	11047978
58	3823N-L1A8-0000	PIÑÓN CAJA CAMBIOS TRAS.	1	11047988
59	71200-6004	RODAMIENTO BOLAS 6004	1	11048082
60	3820L-L1A8-0000	PIÑÓN CAJA CAMBIOS TRAS.	1	11047959
61	3823P-L1A8-0000	PIÑÓN HELICOIDAL CAJA CAMBIOS TR	1	11047989
62	3823Q-L1A8-0000	HORQUILLA CAJA CAMBIOS TRAS.	1	11047990

FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
63	3823R-L1A8-0000	EJE HORQUILLA CAJA CAMBIOS TRAS.	1	11047991
64	3823S-L1A8-0000	EJE CAJA CAMBIOS TRAS.	1	11047992
65	3823T-L1A8-0000	PIÑÓN HELICOIDAL CAJA CAMBIOS TR	1	11047993
66	71200-30304	RODAMIENTO BOLAS 30304	1	11048079
67	71200-32006	RODAMIENTO BOLAS 32006	1	11048080
68	3823U-L1A8-0000	PIÑÓN DOBLE CAJA CAMBIOS TRAS.	1	11047994
69	38242-L1A8-0000	ARANDELA 12 MM.	1	11048002
70	B008120012000060E	PIN 8X18	1	
71	71200-6003	RODAMIENTO BOLAS 6003	1	11048081
72	38243-L1A8-0000	ARANDELA SELLADO	1	11048003
73	3820B-L1A8-0000	EJE CAJA CAMBIOS TRASERO	1	11047954
74	38244-L1A8-0000	ARANDELA SELLADO	1	11048004
75	3823V-L1A8-0000	BUJE CAJA CAMBIOS TRASERO	1	11047995
76	73517-20357	RETÉN 20X35X7	2	11048113
77	3823W-L1A8-0000	PIÑÓN HELICOIDAL CAJA CAMBIOS TRAS.	1	11047996
78	3823W-L1A8-0000	PIÑÓN HELICOIDAL CAJA CAMBIOS TRAS.	1	11047996
79	3822Q-L1A8-0000	VALVULA AIRE	2	11047974
80	3822P-L1A8-0000	TAPA VALVULA AIRE	2	11047973
81	3824B-L1A8-0000	PLATINA SOPORTE	1	11048009
82	3824D-L1A8-0000	PLATINA SOPORTE	1	11048011
82	3822T-L1A8-0000	PLATINA SOPORTE	1	11047976

FIGURA N°45 CAJA REVERSA (1/2)

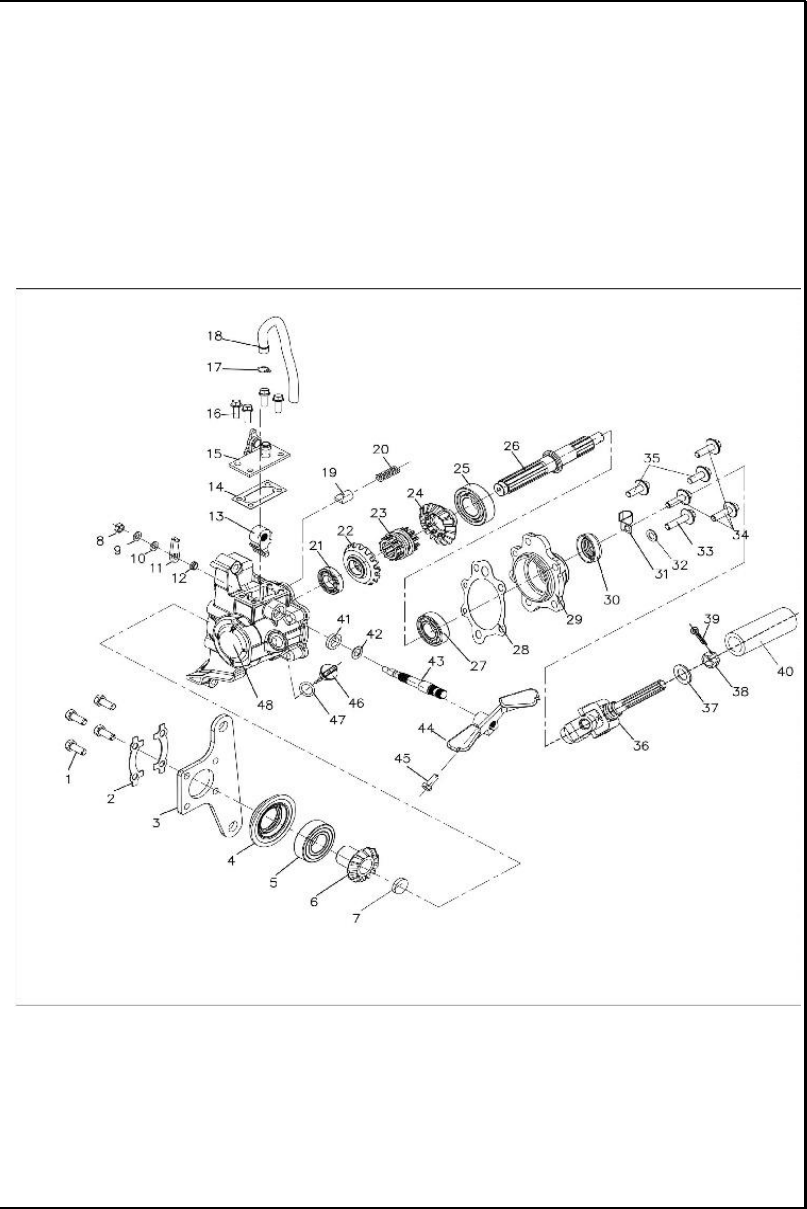


FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
1	B057830008002070C	TORNILLO 8X20	4	11048196
2	3823Z-L3L6-0000	PLATINA AJUSTE	1	11048000
3	7350S-L1A8-0000	SOPORTE CAJA REVERSA	1	11048104
4	7351Y-L3L6-0000	GUARDAPOLVO	1	11041606
5	71200-6205-2RS	RODAMIENTO BOLAS 6205-2RS	1	11048086
6	7350N-L3L6-0000	PIÑÓN REVERSA (12T)	1	11048103
7	43109-L3L6-0000	TAPON	1	11048020
8	B061700006000060C	TUERCA M6	1	11048210
9	B0009300060000U0C	ARANDELA PRESIÓN 6 MM.	1	11048154
10	B000950006000020C	ARANDELA 6 MM.	1	11048162
11	7351E-L3L6-0000	PLATINA	1	11048117
12	23258-L3L6-0000	ANILLO RETÉNEDOR	1	11047930
13	7351B-L3L6-0000	HORQUILLA CAMBIO MARCHA	1	11048116
14	7351A-L3L6-0000	EMPAQUE TAPA CAJA REVERSA	1	11048115
15	7350V-L3L6-0000	TAPA CAJA REVERSA	1	11048106
16	B166740105001270C	TORNILLO 5X12	4	11048220
17	7350W-L3L6-0000	ABRAZADERA	1	11048107
18	7350X-L3L6-0000	MANGUERA RESPIRACION	1	11048108
19	7351J-L3L6-0000	LEVA REVERSA	1	11048119
20	7351K-L3L6-0000	RESORTE LEVA REVERSA	1	11048120
21	71200-16003	RODAMIENTO BOLAS	1	11048078
22	7350K-L3L6-0000	PIÑÓN SATELITE (15T)	1	11048101
23	7350J-L3L6-0000	PIÑÓN PLANETARIO (10T)	1	11048100
24	7350H-L3L6-0000	PIÑÓN SATELITE (15T)	1	11048099
25	71200-6205	RODAMIENTO BOLAS 6205	1	11048085

FIGURA N°45 CAJA REVERSA (2/2)

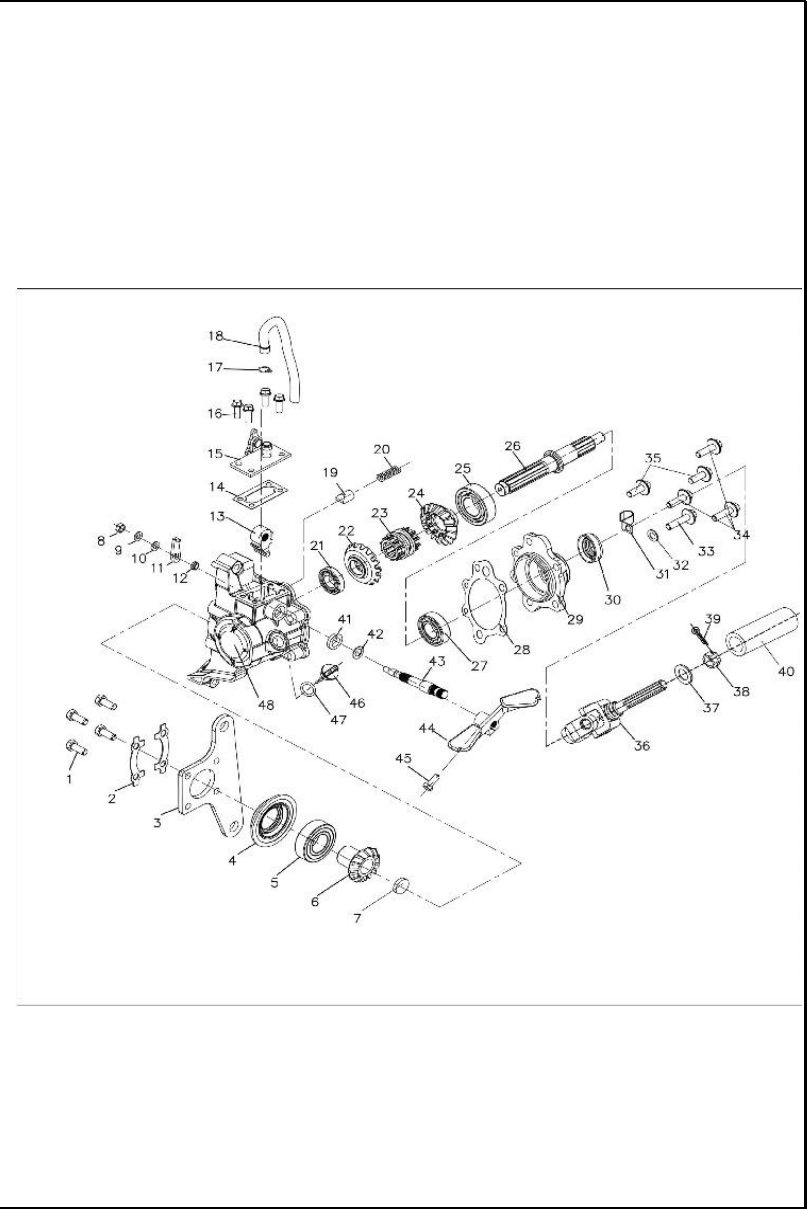
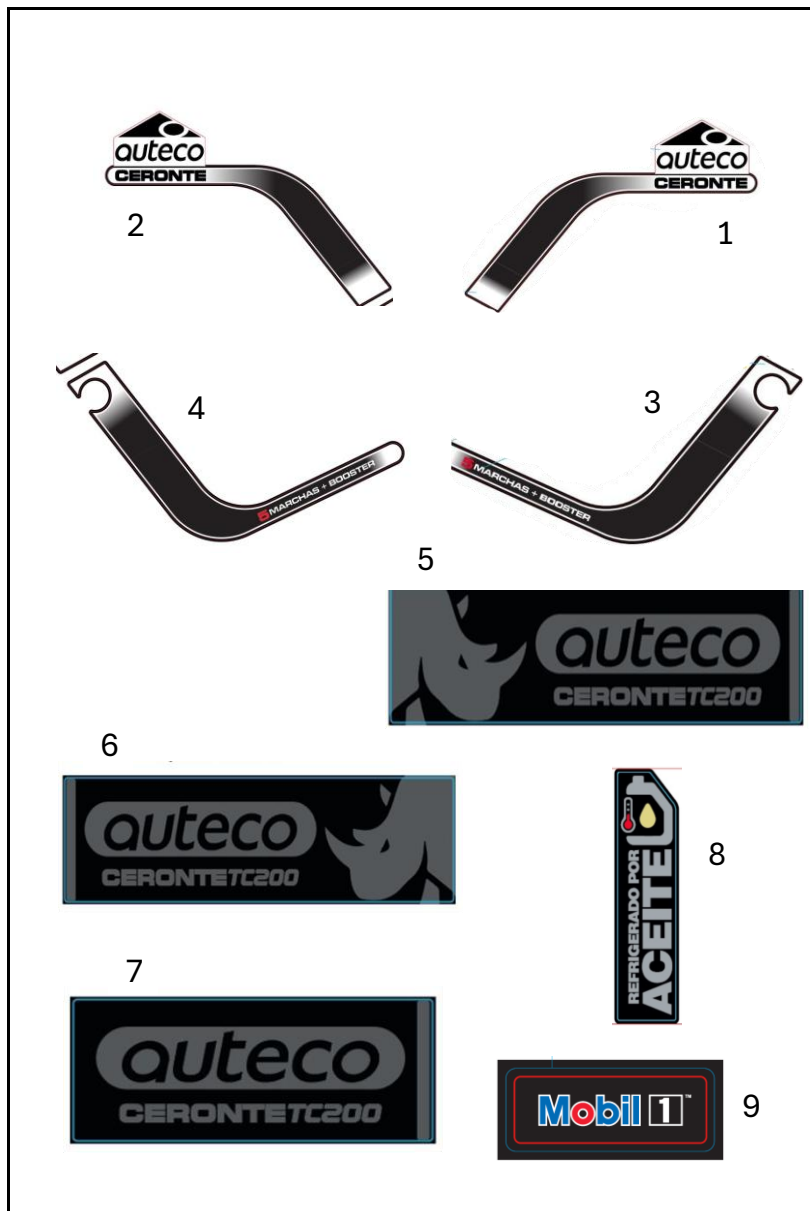


FIG. NO.	PARTE N°	DESCRIPCIÓN	CANT.	SAP
26	7351H-L3L6-0000	EJE REVERSA	1	11048118
27	71200-6004	RODAMIENTO BOLAS 6004	1	11048082
28	7350G-L3L6-0000	EMPAQUE COMPLEMENTO CAJA REV	1	11041607
29	7350F-L3L6-0000	COMPLEMENTO CAJA REVERSA	1	11048098
30	73517-L3L6-0000	RETÉN	1	11048114
31	7350Y-L3L6-0000	ABRAZADERA	1	11048109
32	7351T-L3L6-0000	ARANDELA NYLON	1	11048122
33	B166740108002570C	TORNILLO 8X25	1	11048223
34	B166740108002070C	TORNILLO 8X20	3	11048222
35	B166740106001870C	TORNILLO 6X18	2	11048221
36	7351Q-L3L6-0000	EJE ACCIONADOR REVERSA	1	11048121
37	B000950012000020C	ARANDELA 12 MM.	1	11048169
38	B094580012000060C	TUERCA M12	1	11048219
39	B000910003002520C	PIN SEGURIDAD 3X25	1	11048152
40				
41	73517-10164	ANILLO RETÉNEDOR	1	11048112
42	7350Z-L3L6-0000	ARANDELA 10 MM.	1	11048110
43	7350E-L3L6-0000	EJE REVERSA	1	11048097
44	73511-L3L6-0000	PEDAL REVERSA	1	11048111
45	B057830006002070C	TORNILLO 6X20	1	11048188
46	7350U-L3L6-0000	TAPÓN NIVEL ACEITE	1	11048105
47	15822-M4E3-000001	ANILLO RETÉNEDOR	1	22000892
48	7350L-L3L6-0000	CAJA REVERSA	1	11048102

FIGURA N°46 CALCOMANÍAS

[illegible]